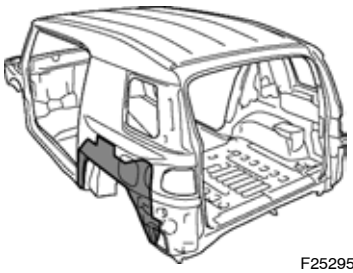
# QUARTER WHEEL HOUSING OUTER PANEL (ASSY)


F25295A

With the quarter panel removed.


Symbol meaning

| | | |
|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | : Spot Weld : Plug Weld | : Butt Weld |

F44963B

**REMOVAL·INSTALLATION**

[LH]

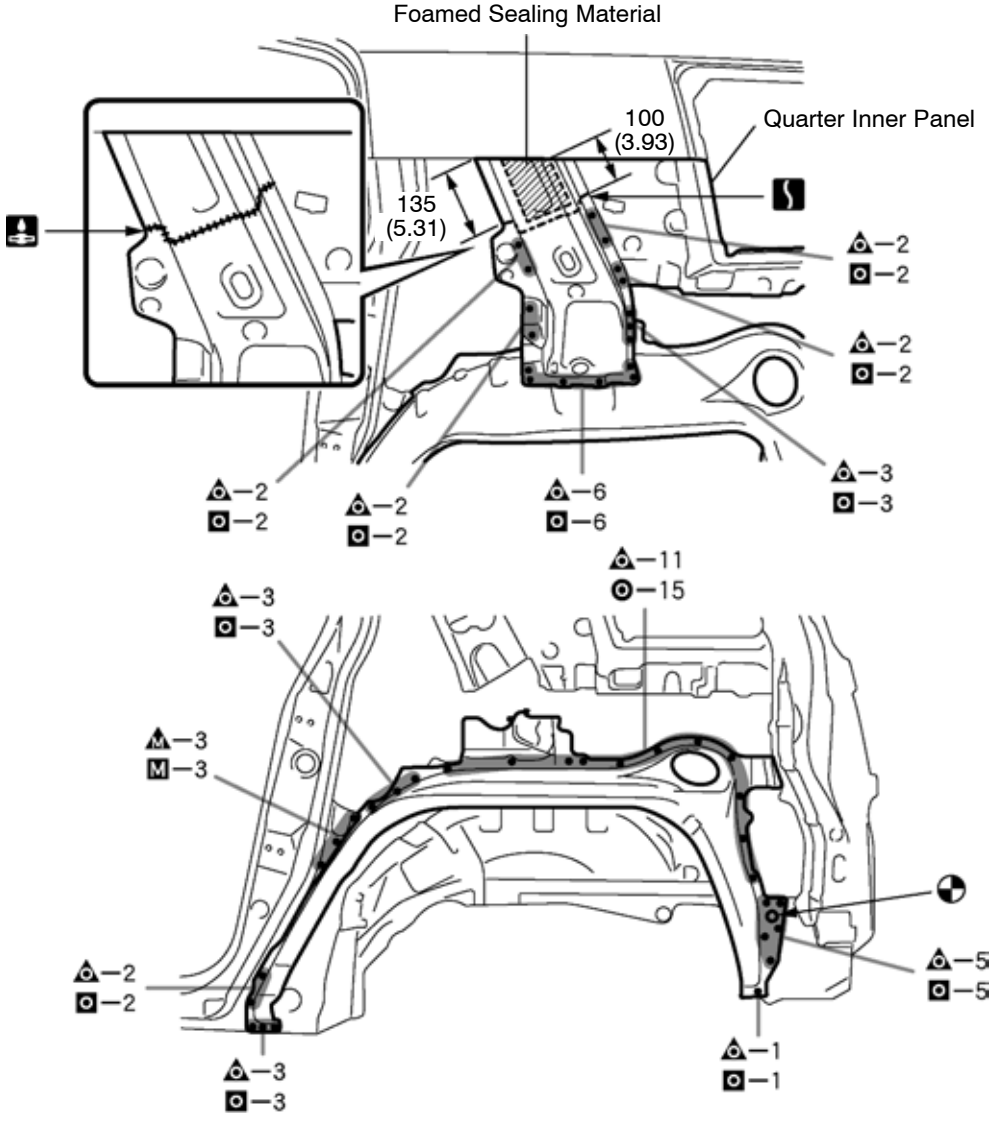


mm (in.)

F44963

**REMOVAL POINT**

1 After removing the quarter inner panel,remove the quarter wheel housing outer panel.


**INSTALLATION POINT**


1 After welding the quarter wheel housing outer panel to the vehicle side, install the quarter inner panel.
2 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

Symbol meaning

| | | | |
|---|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location | |
| INSTALLATION | : Spot Weld | : Plug Weld | : Butt Weld |

F44963B

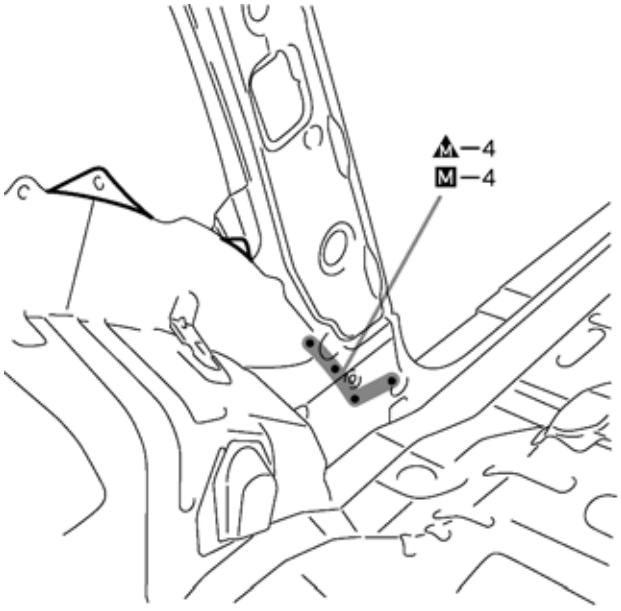

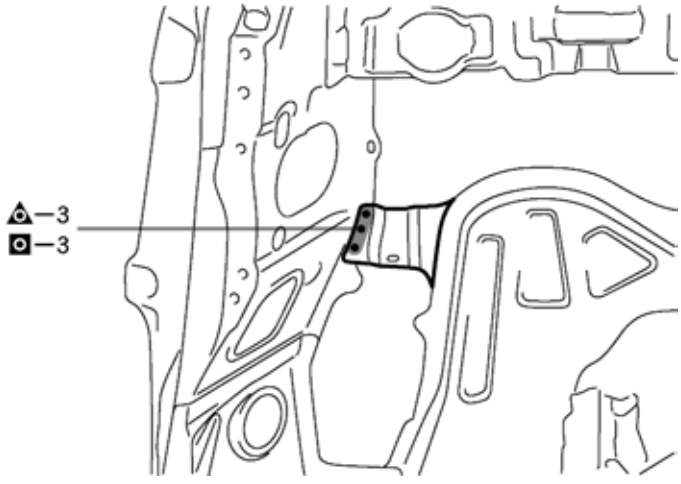




F25296

**INSTALLATION POINT**

1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

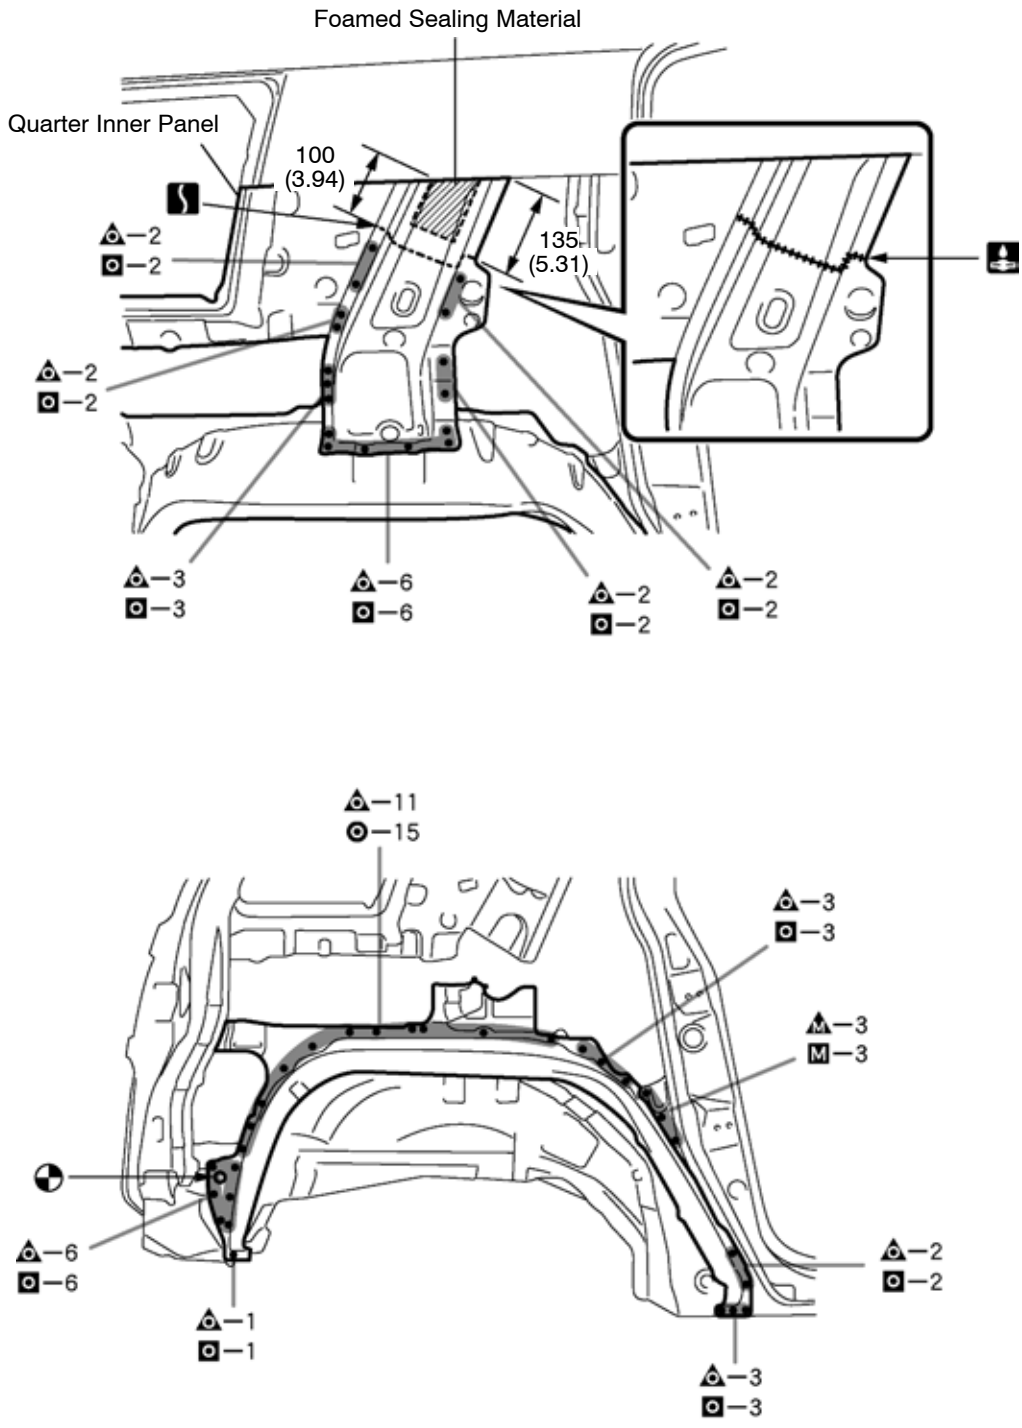[RH]




**REMOVAL POINT**

1 After removing the quarter inner panel,remove the quarter wheel housing outer panel.


**INSTALLATION POINT**


1 After welding the quarter wheel housing outer panel to the vehicle side, install the quarter inner panel.
2 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

Symbol meaning

| | | | |
|---|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location | |
| INSTALLATION | : Spot Weld | : Plug Weld | : Butt Weld |

F44963B

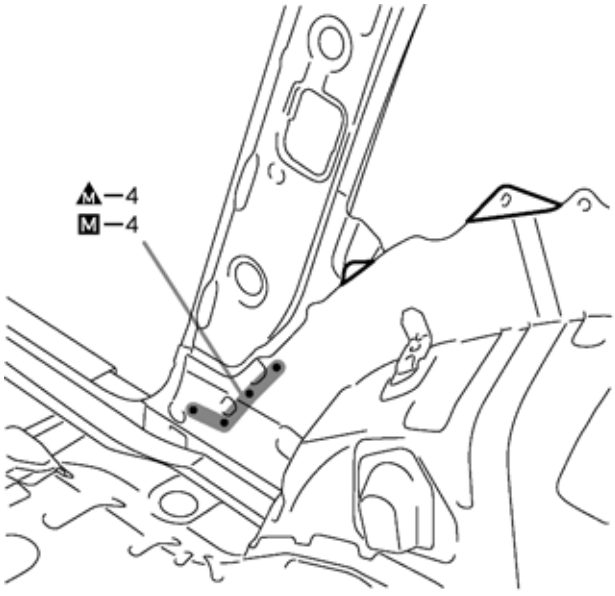

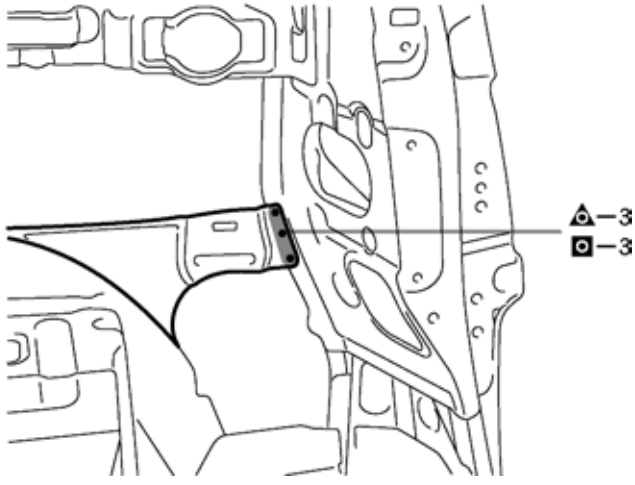
F25298

**INSTALLATION POINT**

1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.