
QUARTER INNER PANEL (CUT)

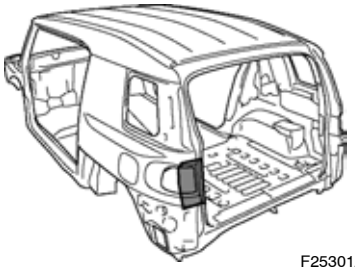

F25301A


With the quarter panel and back door opening side reinforcement removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Plug Weld	: Butt Weld

F44966B

REMOVAL·INSTALLATION

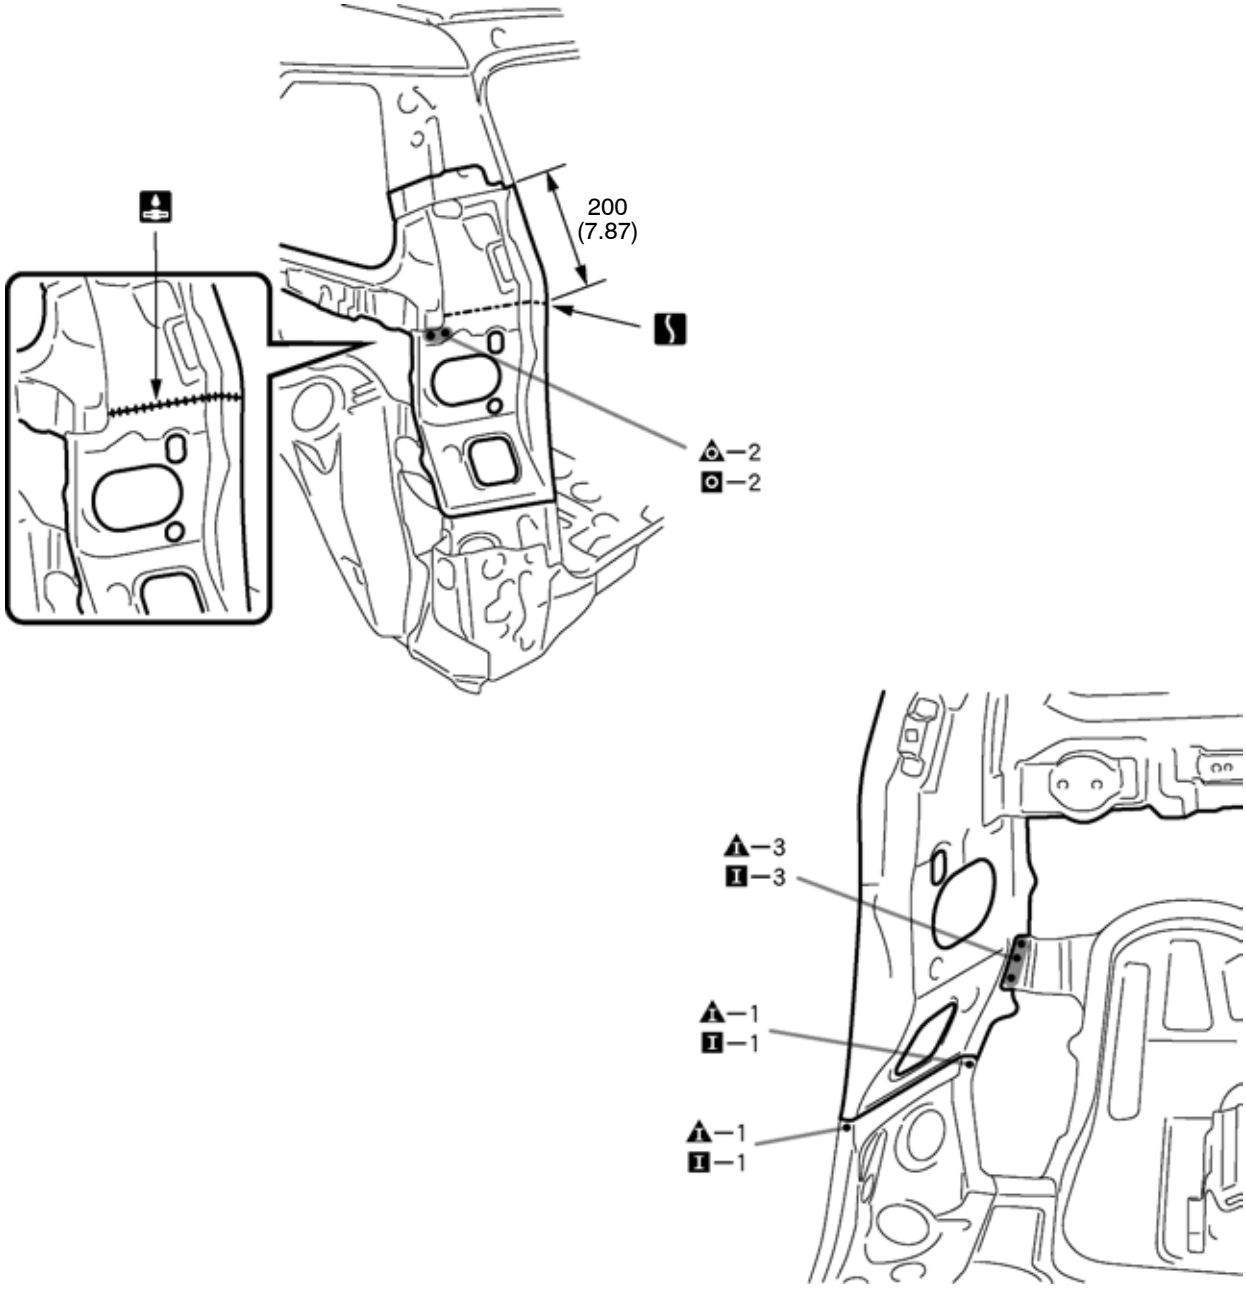

mm (in.)

F25301

INSTALLATION POINT

1 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.