BODY PANEL SEALING AREAS


1 Be sure to apply body sealer to the body panel joints and door edges (tip of outer panel folded part), etc., to waterproof and rustproof them.

HINT:

- *Apply degreasing agent to a clean cloth and clean the sealer application areas.*
- *After removing the applied spot sealer from the sealer application areas using thinner or equivalent, rust-proof the areas by applying primer or equivalent. Then apply body sealer.*
- *If sealer is unnecessarily applied to an area, apply degreasing agent to a clean cloth and clean off the body sealer immediately.*


++++++++++	Flat Finishing	————	No Flat Finishing

1. ENGINE COMPARTMENT

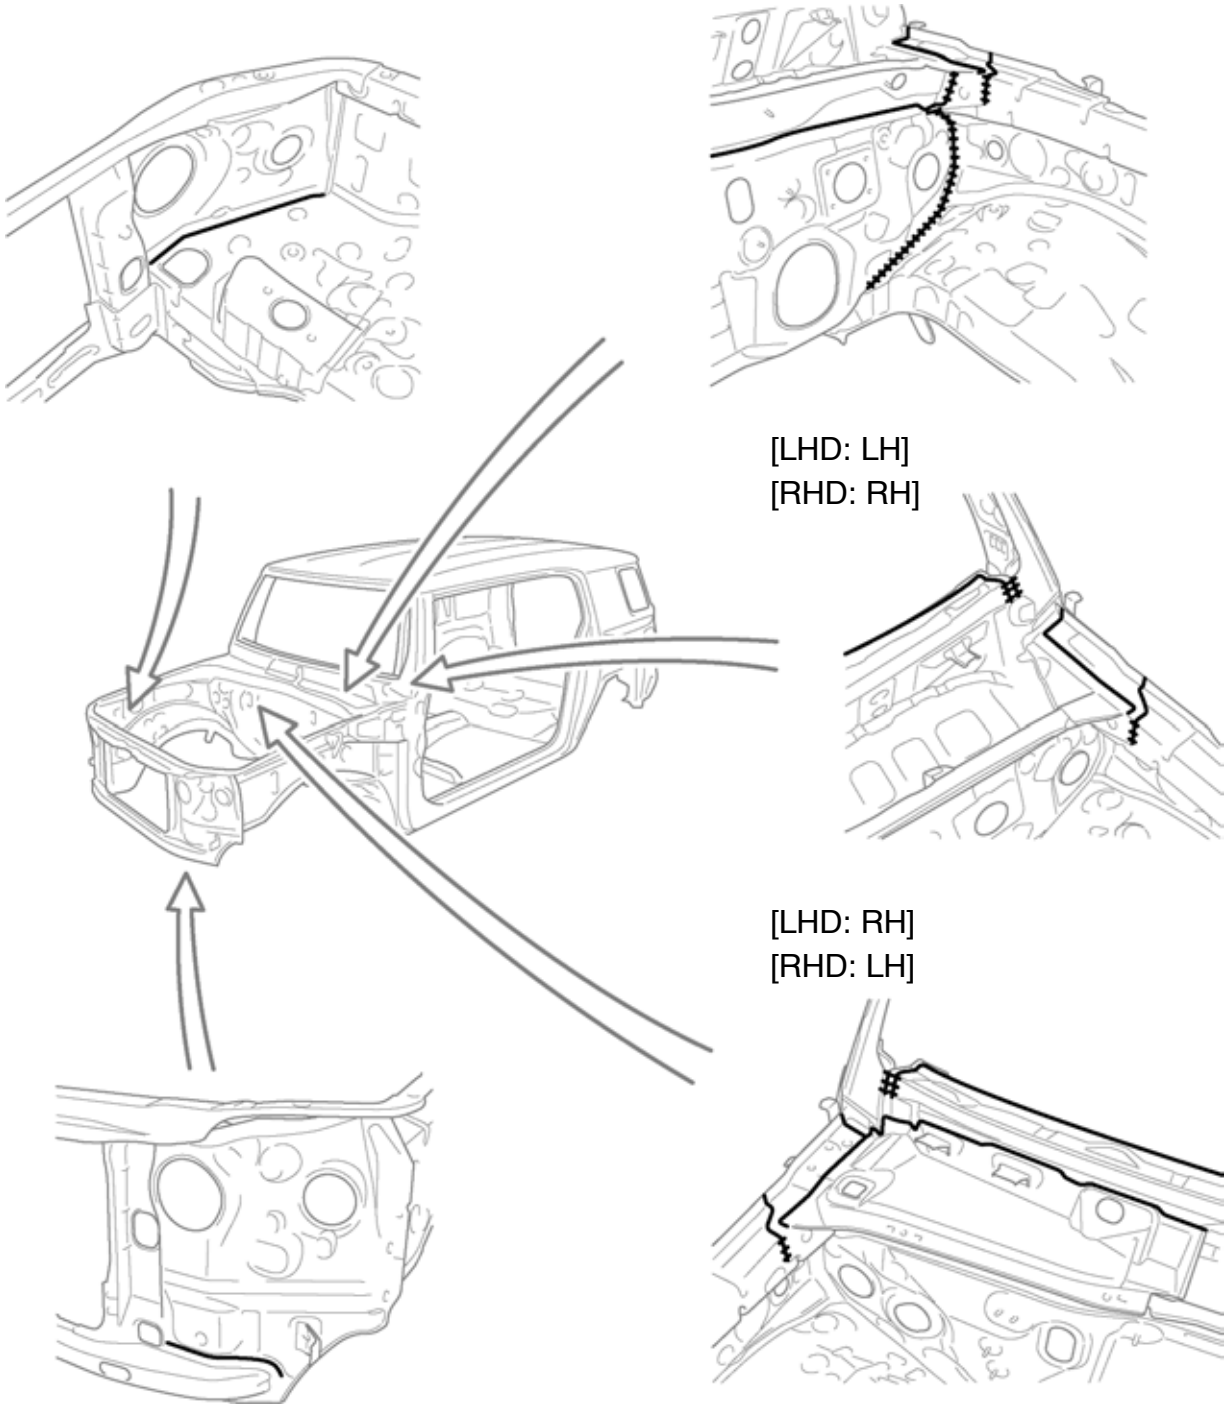


F44977

2. INSIDE

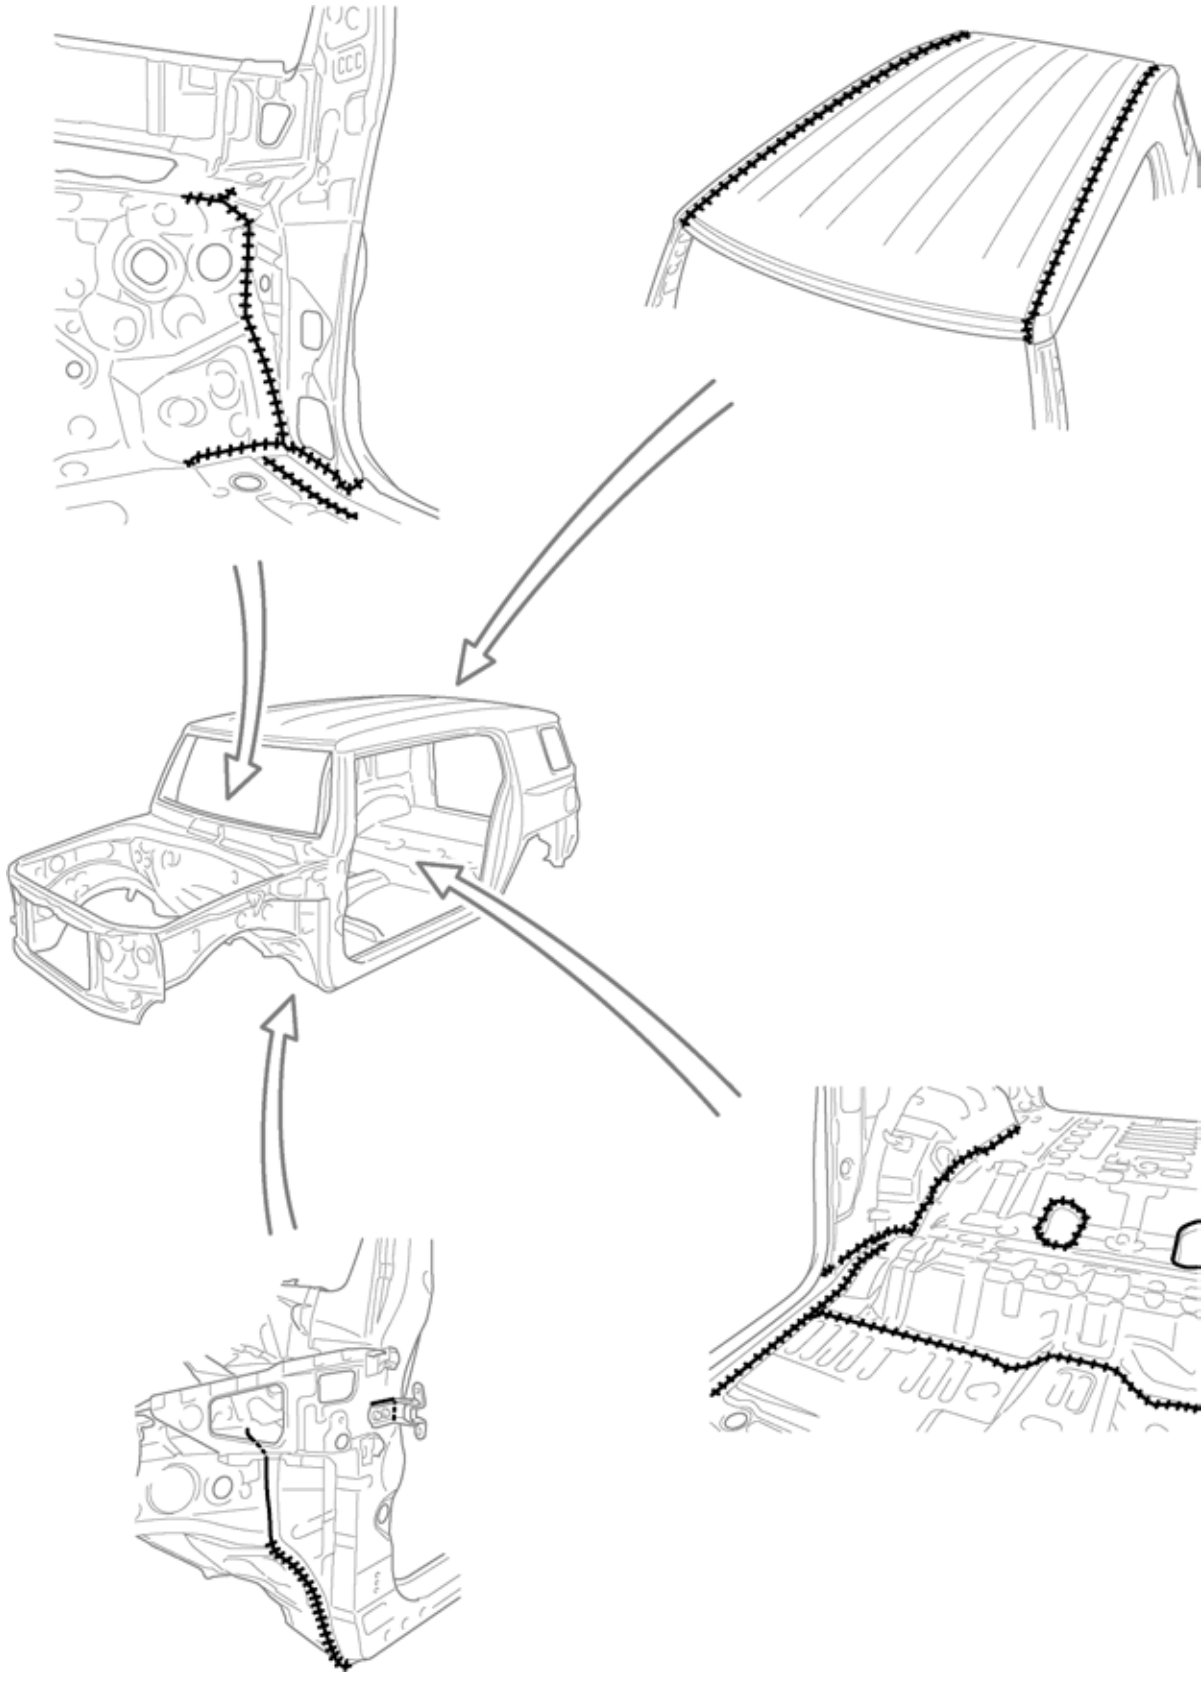


F44978


3. OUTSIDE

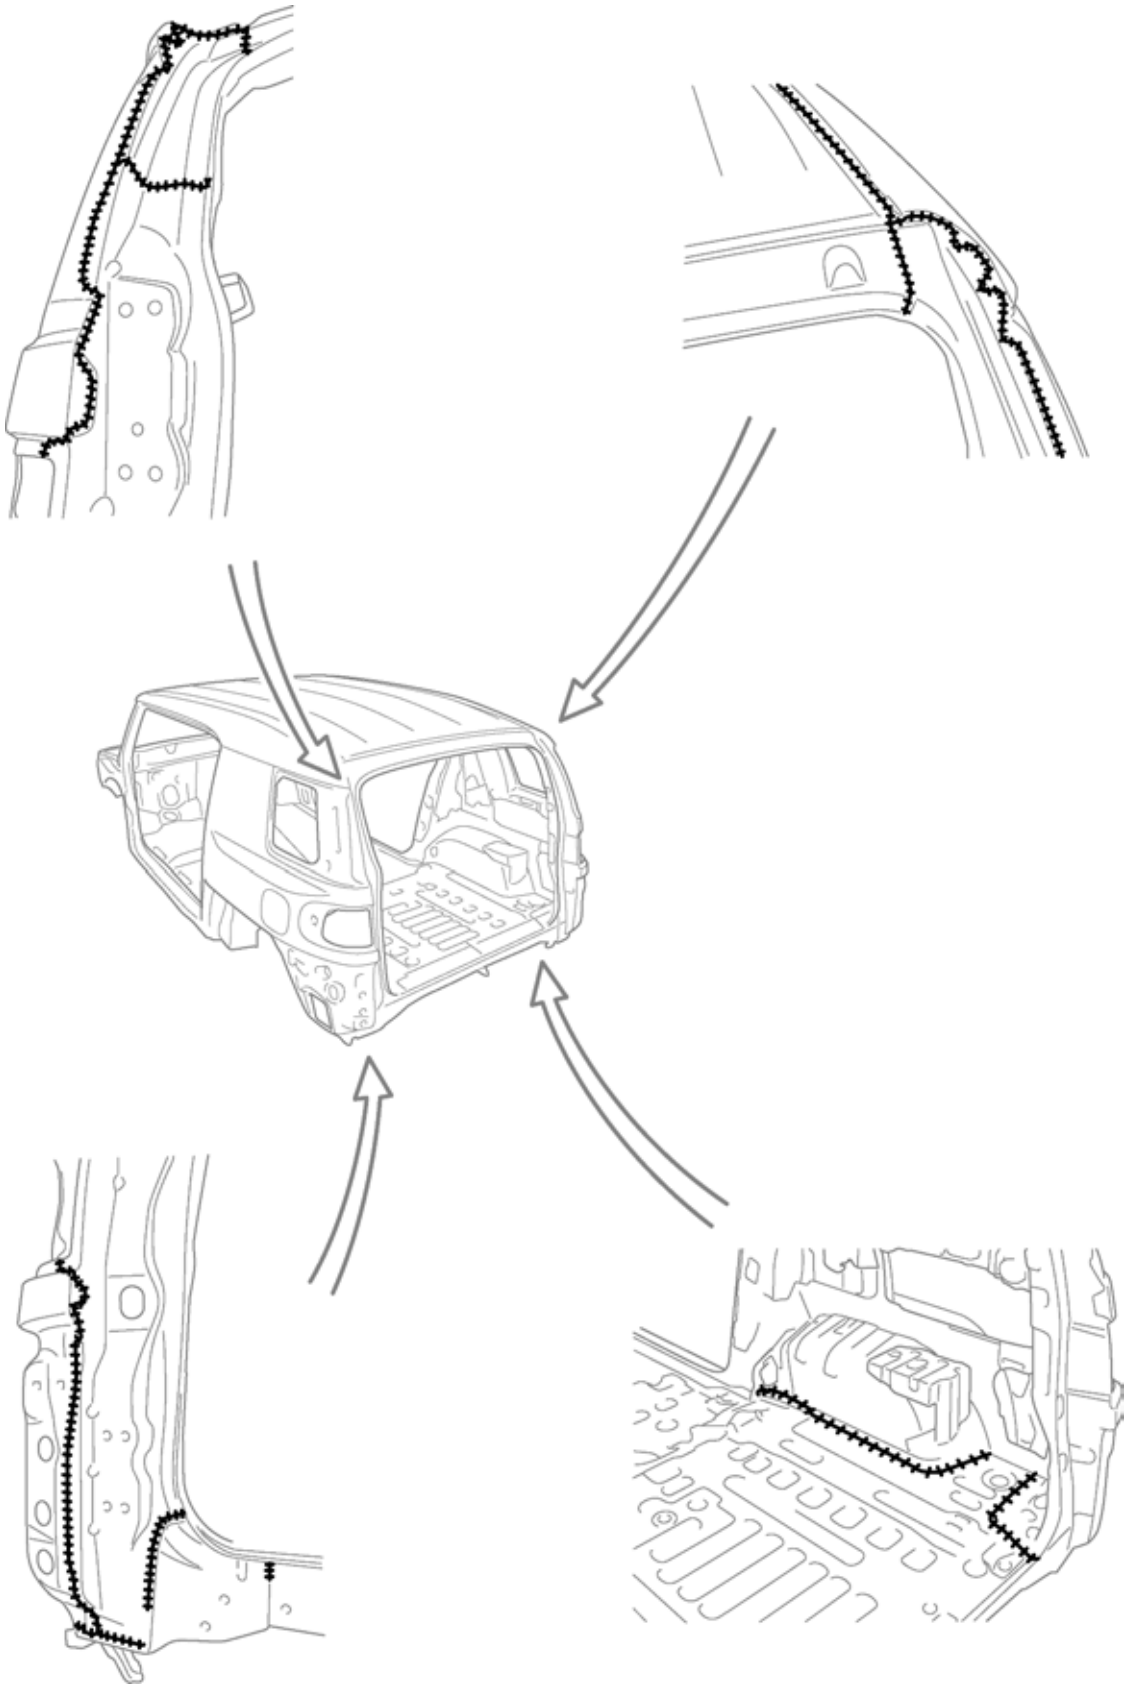


F25253

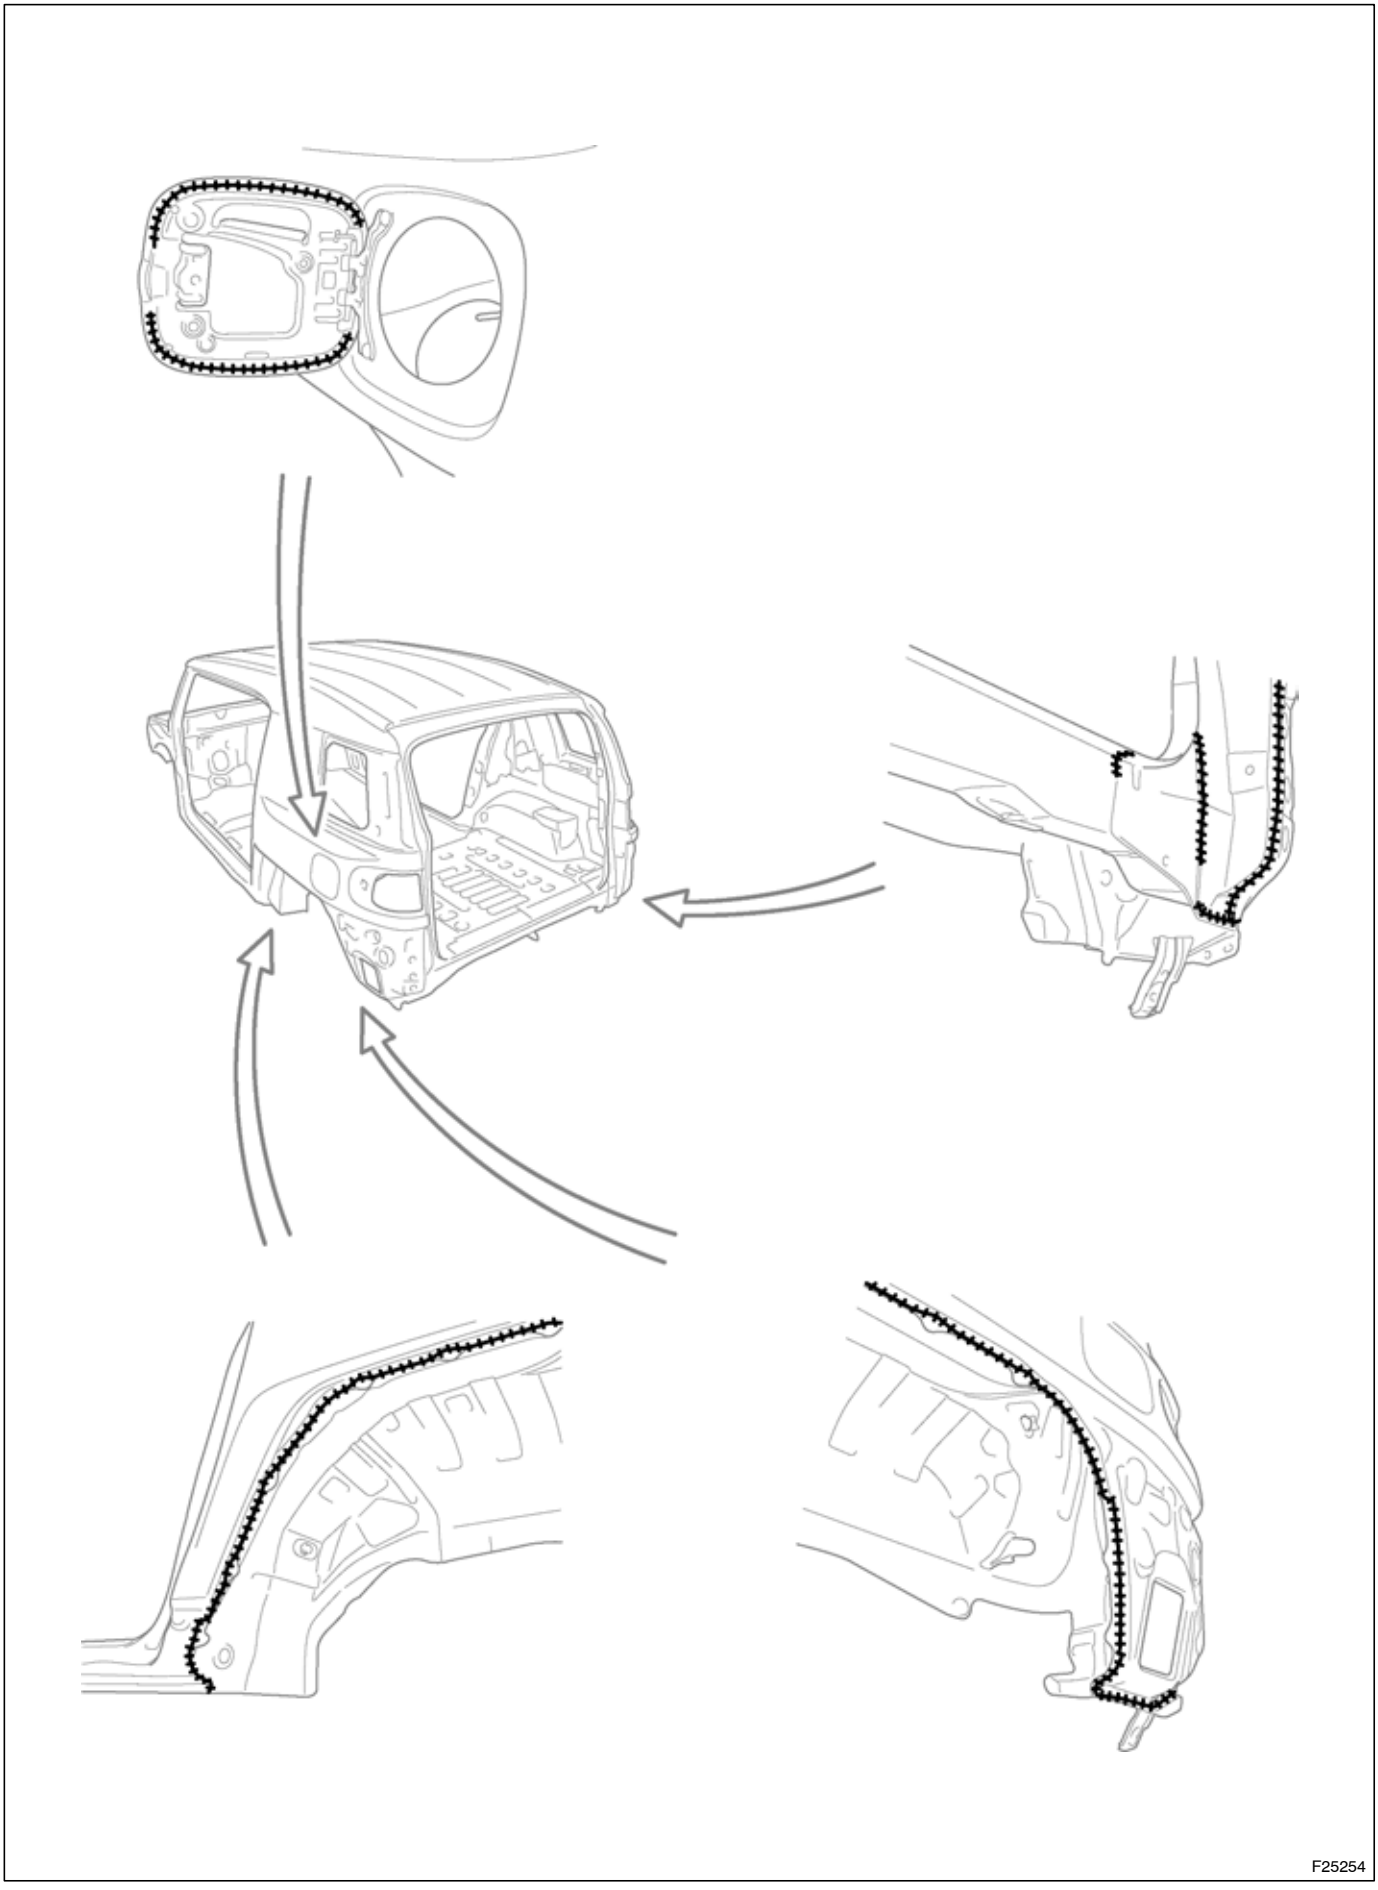
F25254

4. DOOR PARTS

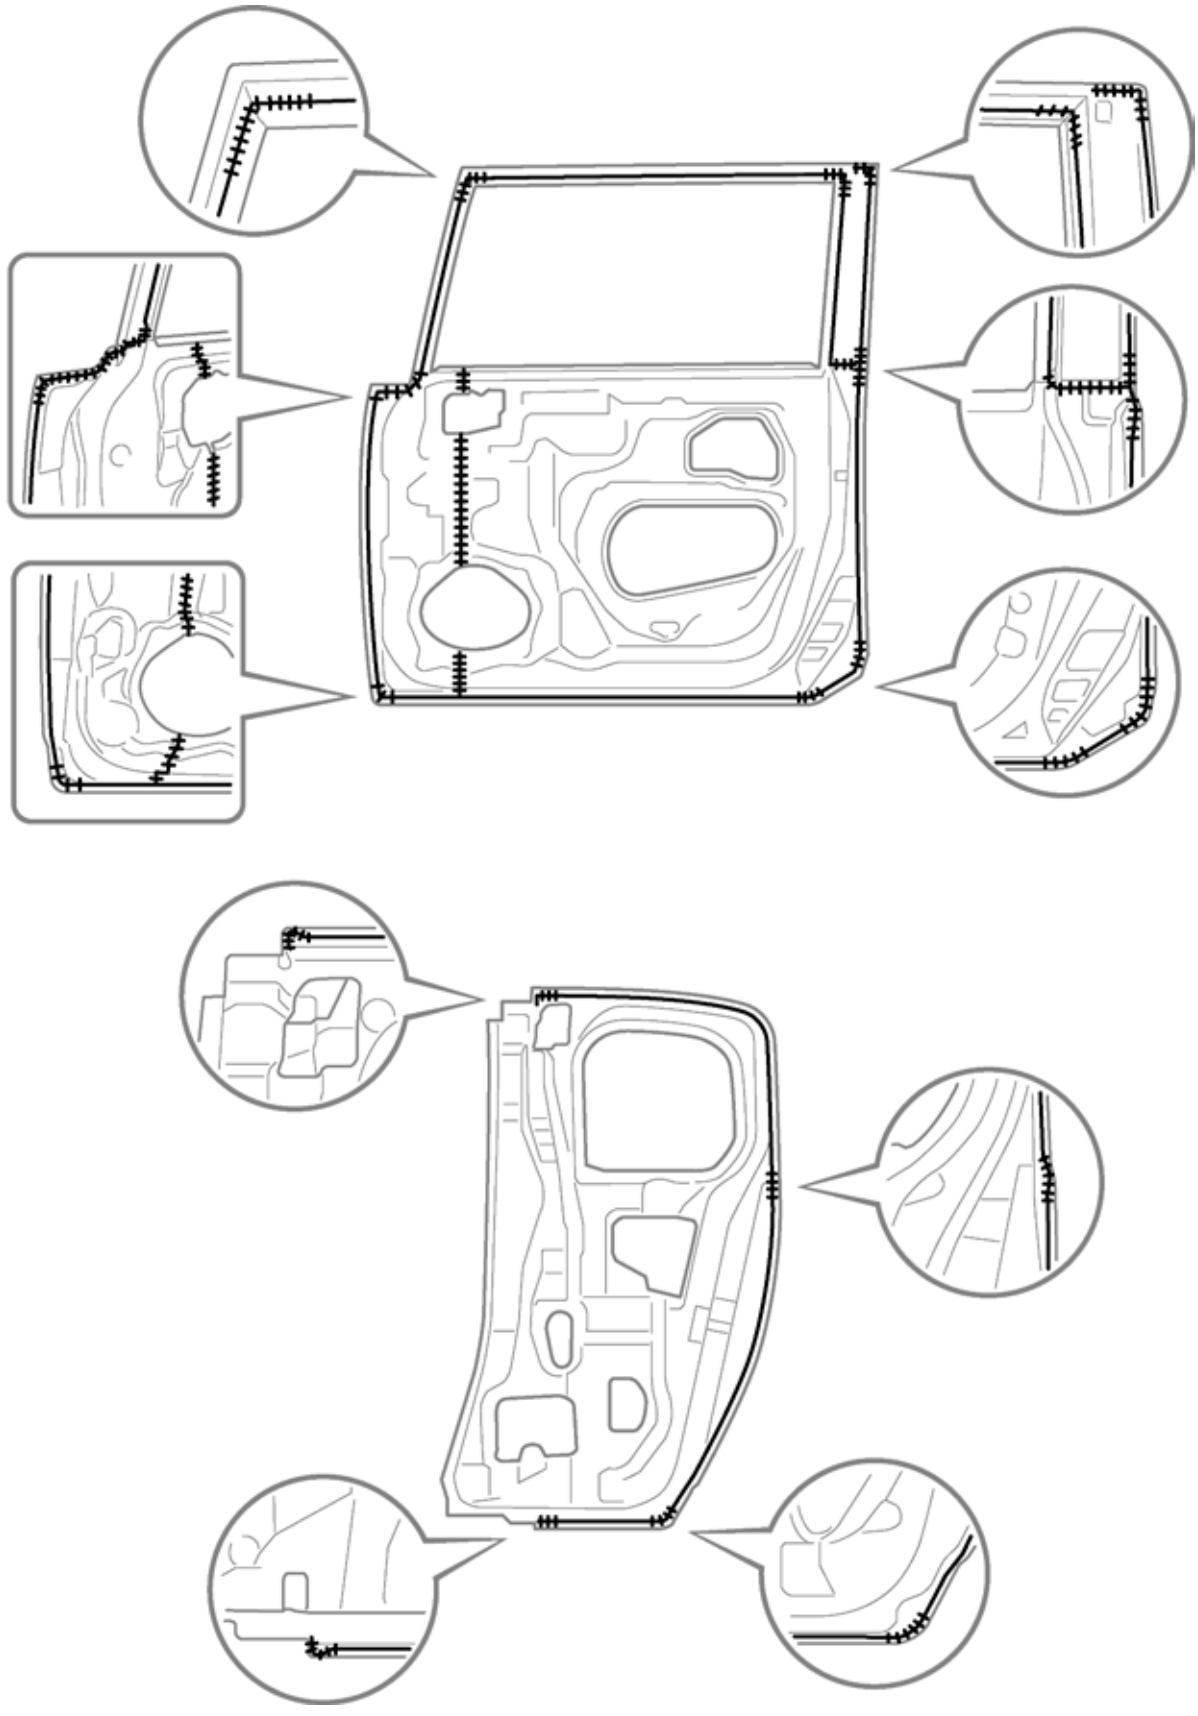

F25255

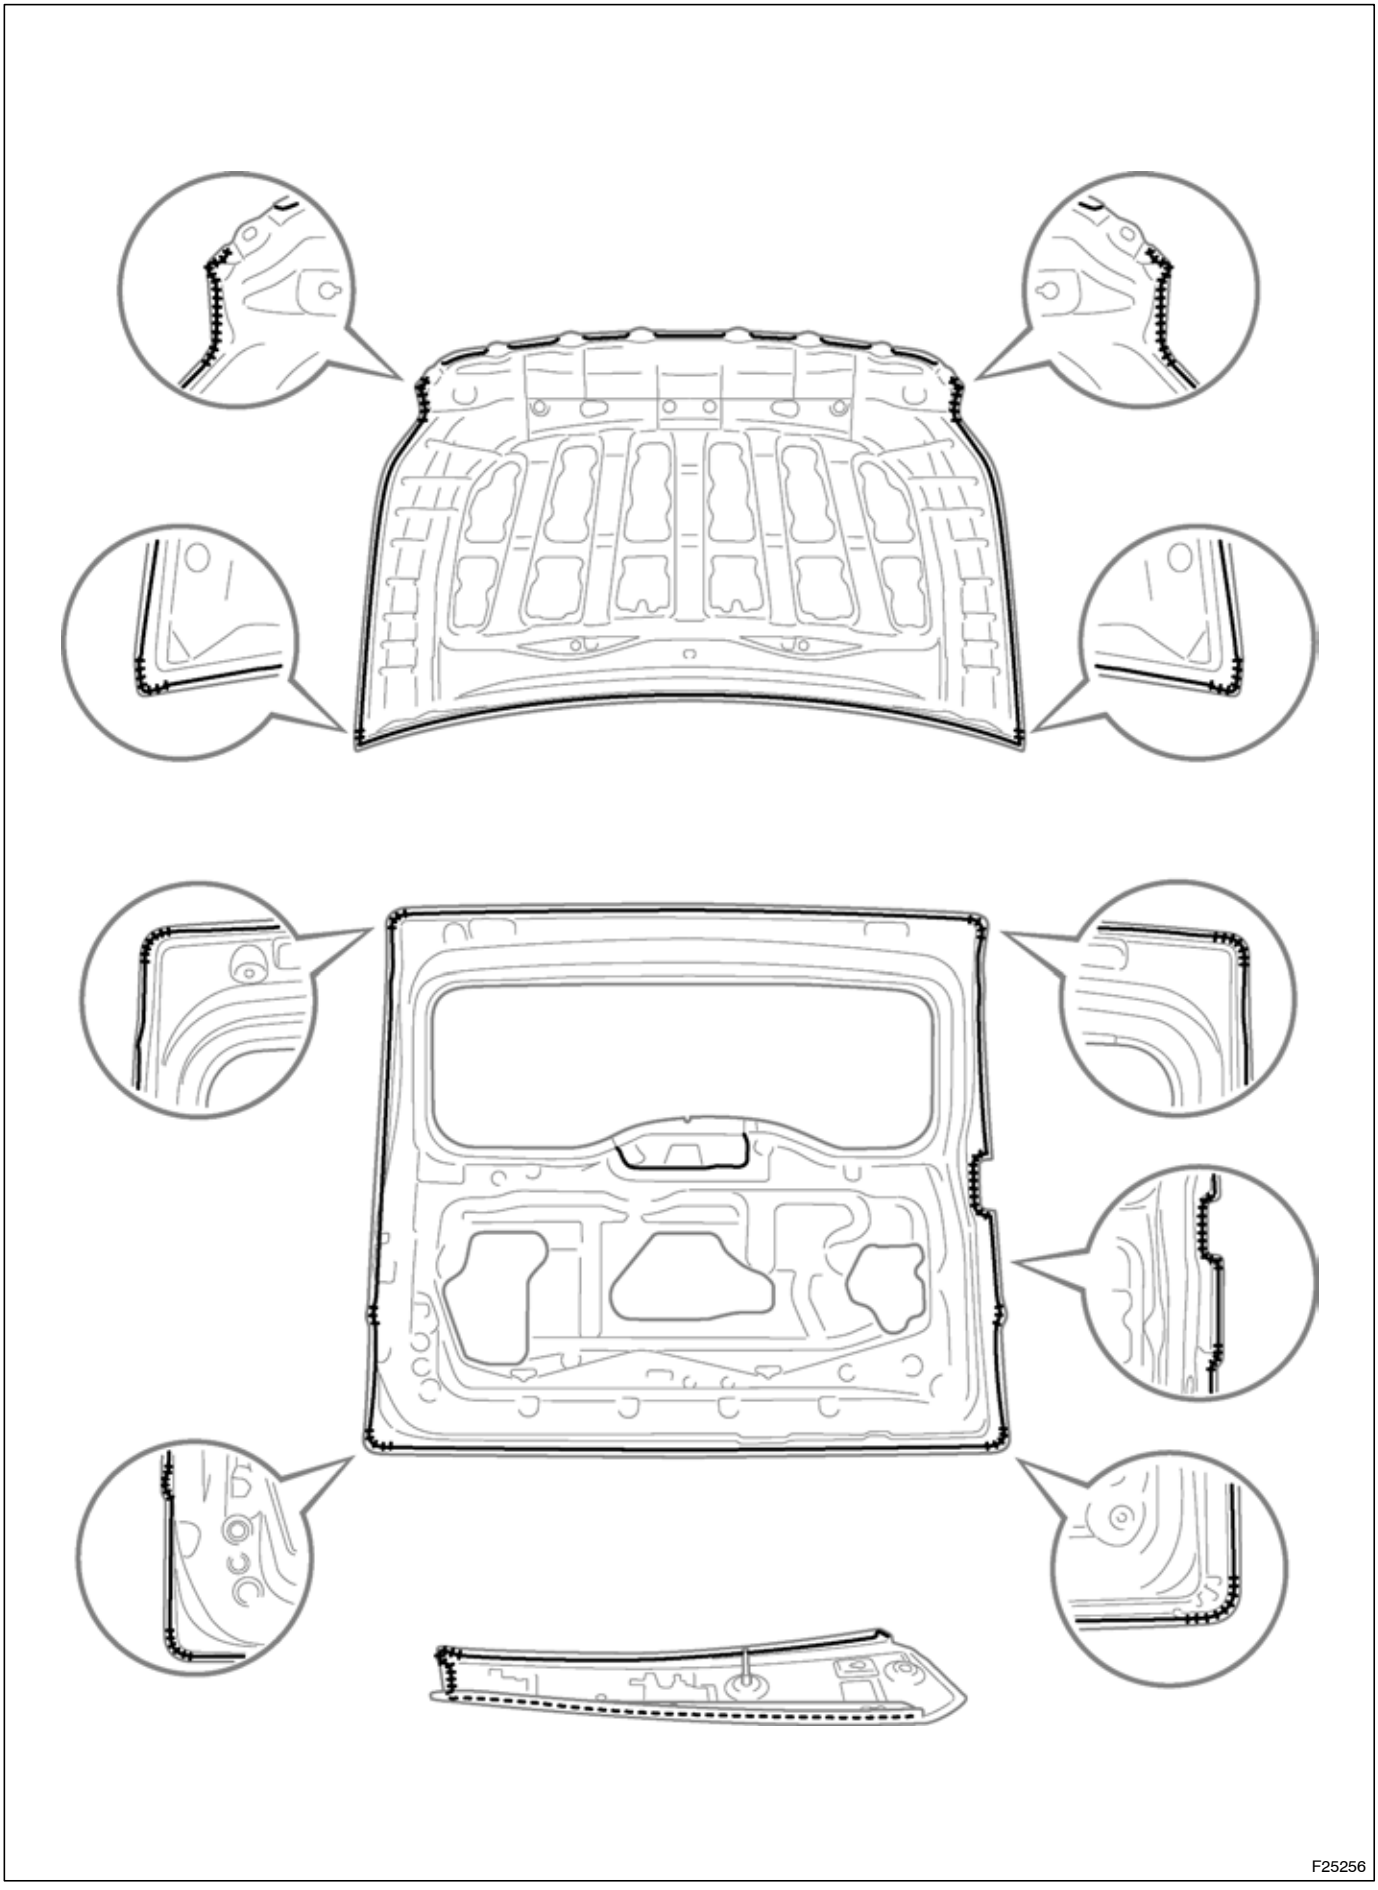

F25256