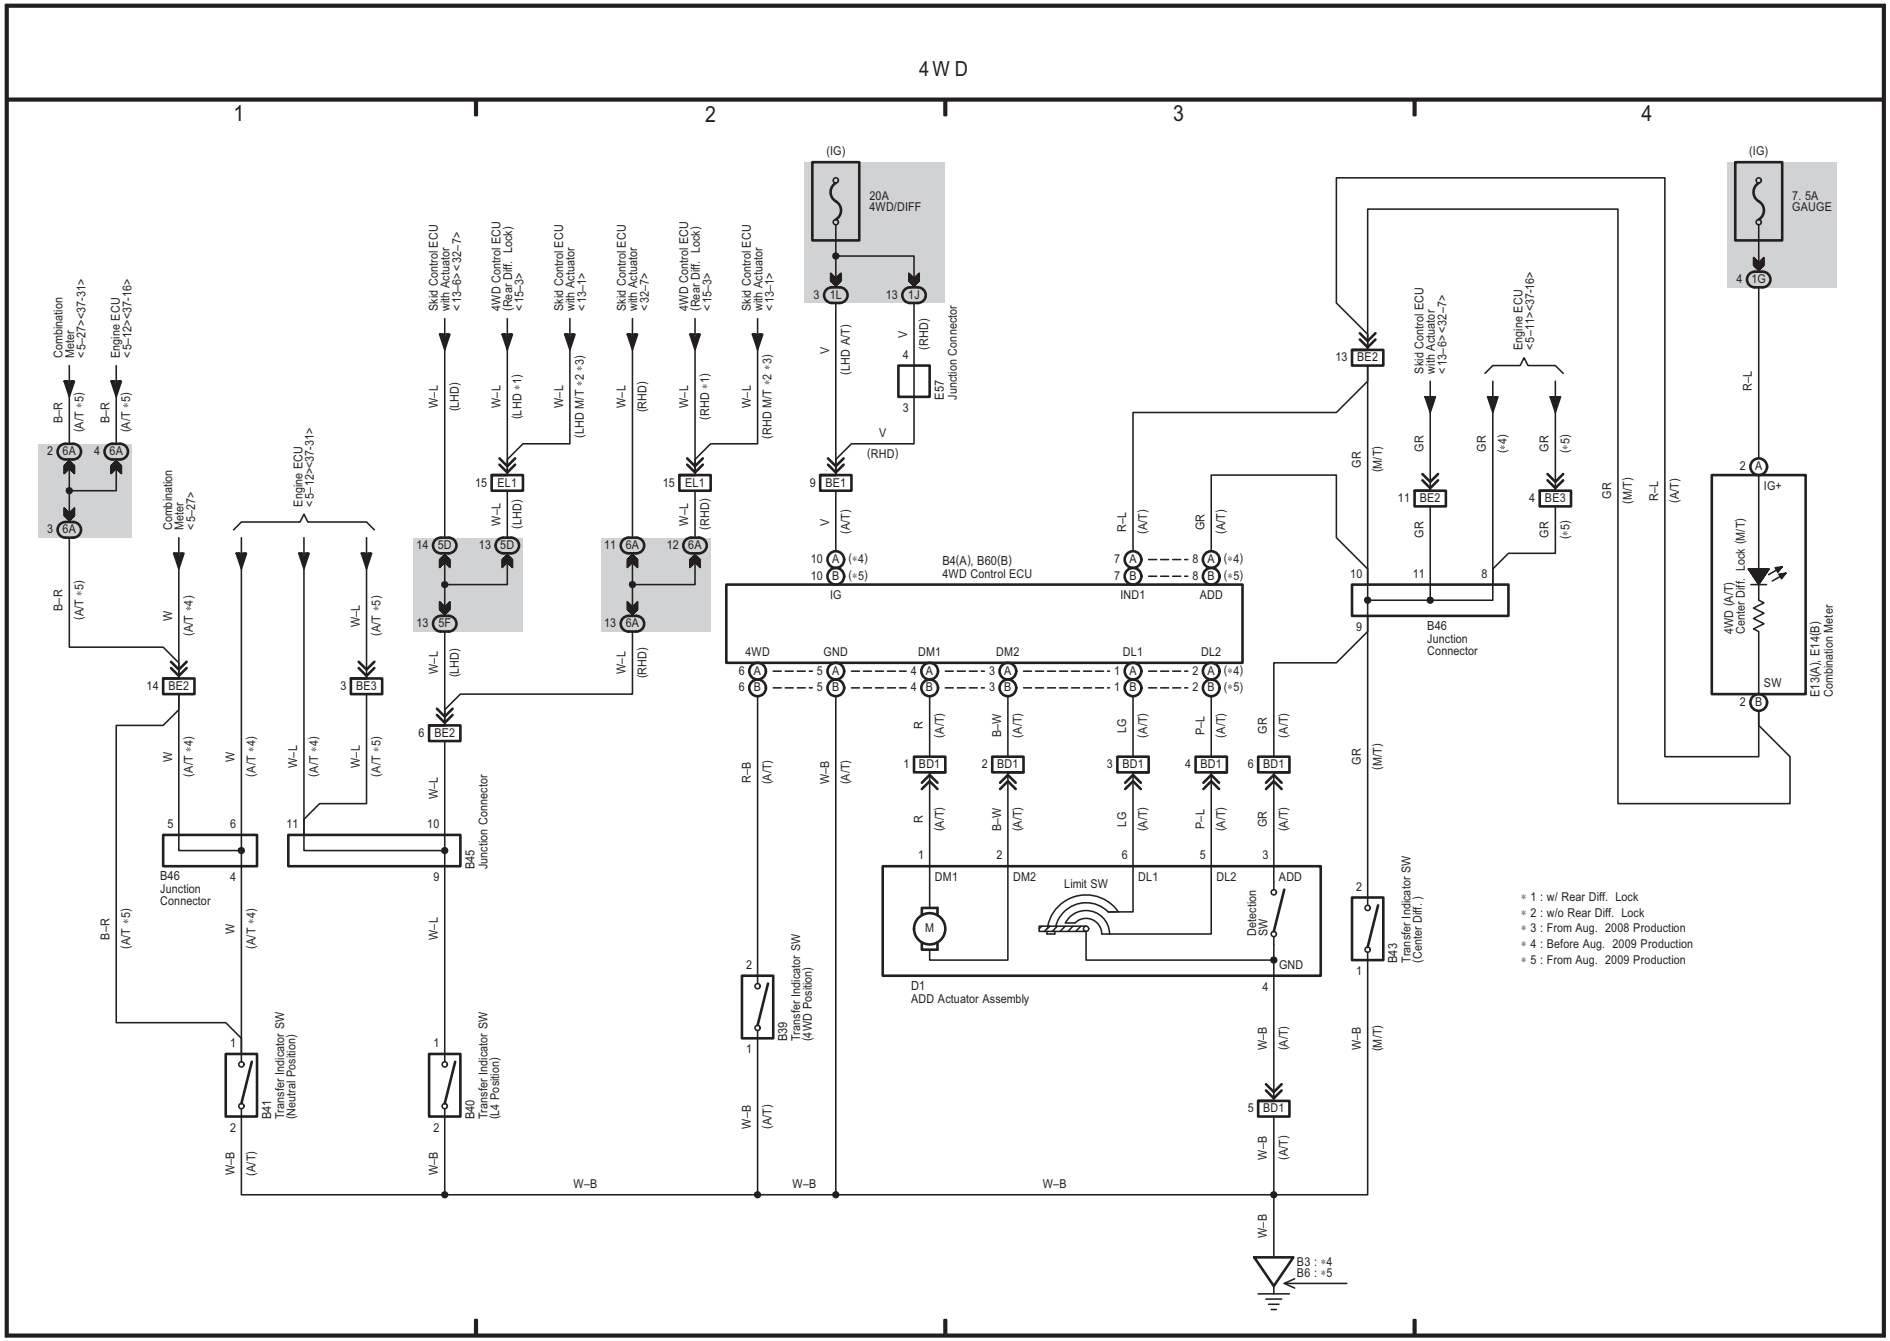

4WD
1
2
3
4
(IG)
20A
4WD/DIFF
(IG)
7. 5A
GAUGE
Combination Meter <5–27><37–31>
Engine ECU <5–12><37–16>
Skid Control ECU with Actuator <13–8><32–7>
4WD Control ECU (Rear Diff. Lock) <15–3>
Skid Control ECU with Actuator <13–1>
Skid Control ECU with Actuator <32–7>
4WD Control ECU (Rear Diff. Lock) <15–3>
Skid Control ECU with Actuator <13–1>
Engine ECU <5–11><37–16>
Skid Control ECU with Actuator <13–6><32–7>
B4(A), B60(B)
4WD Control ECU
IG
IND1
ADD
4WD
GND
DM1
DM2
DL1
DL2
B46
Junction Connector
B45
Junction Connector
E57
Junction Connector
B41
Transfer Indicator SW
(Neutral Position)
B40
Transfer Indicator SW
(L4 Position)
B39
Transfer Indicator SW
(4WD Position)
B43
Transfer Indicator SW
(Center Diff.)
D1
ADD Actuator Assembly
Limit SW
Detection SW
E13(A), E14(B)
Combination Meter
4WD (A/T) Center Diff. Lock (M/T)
IG+
SW
B3 : *4
B6 : *5
* 1 : w/ Rear Diff. Lock
* 2 : w/o Rear Diff. Lock
* 3 : From Aug. 2008 Production
* 4 : Before Aug. 2009 Production
* 5 : From Aug. 2009 Production