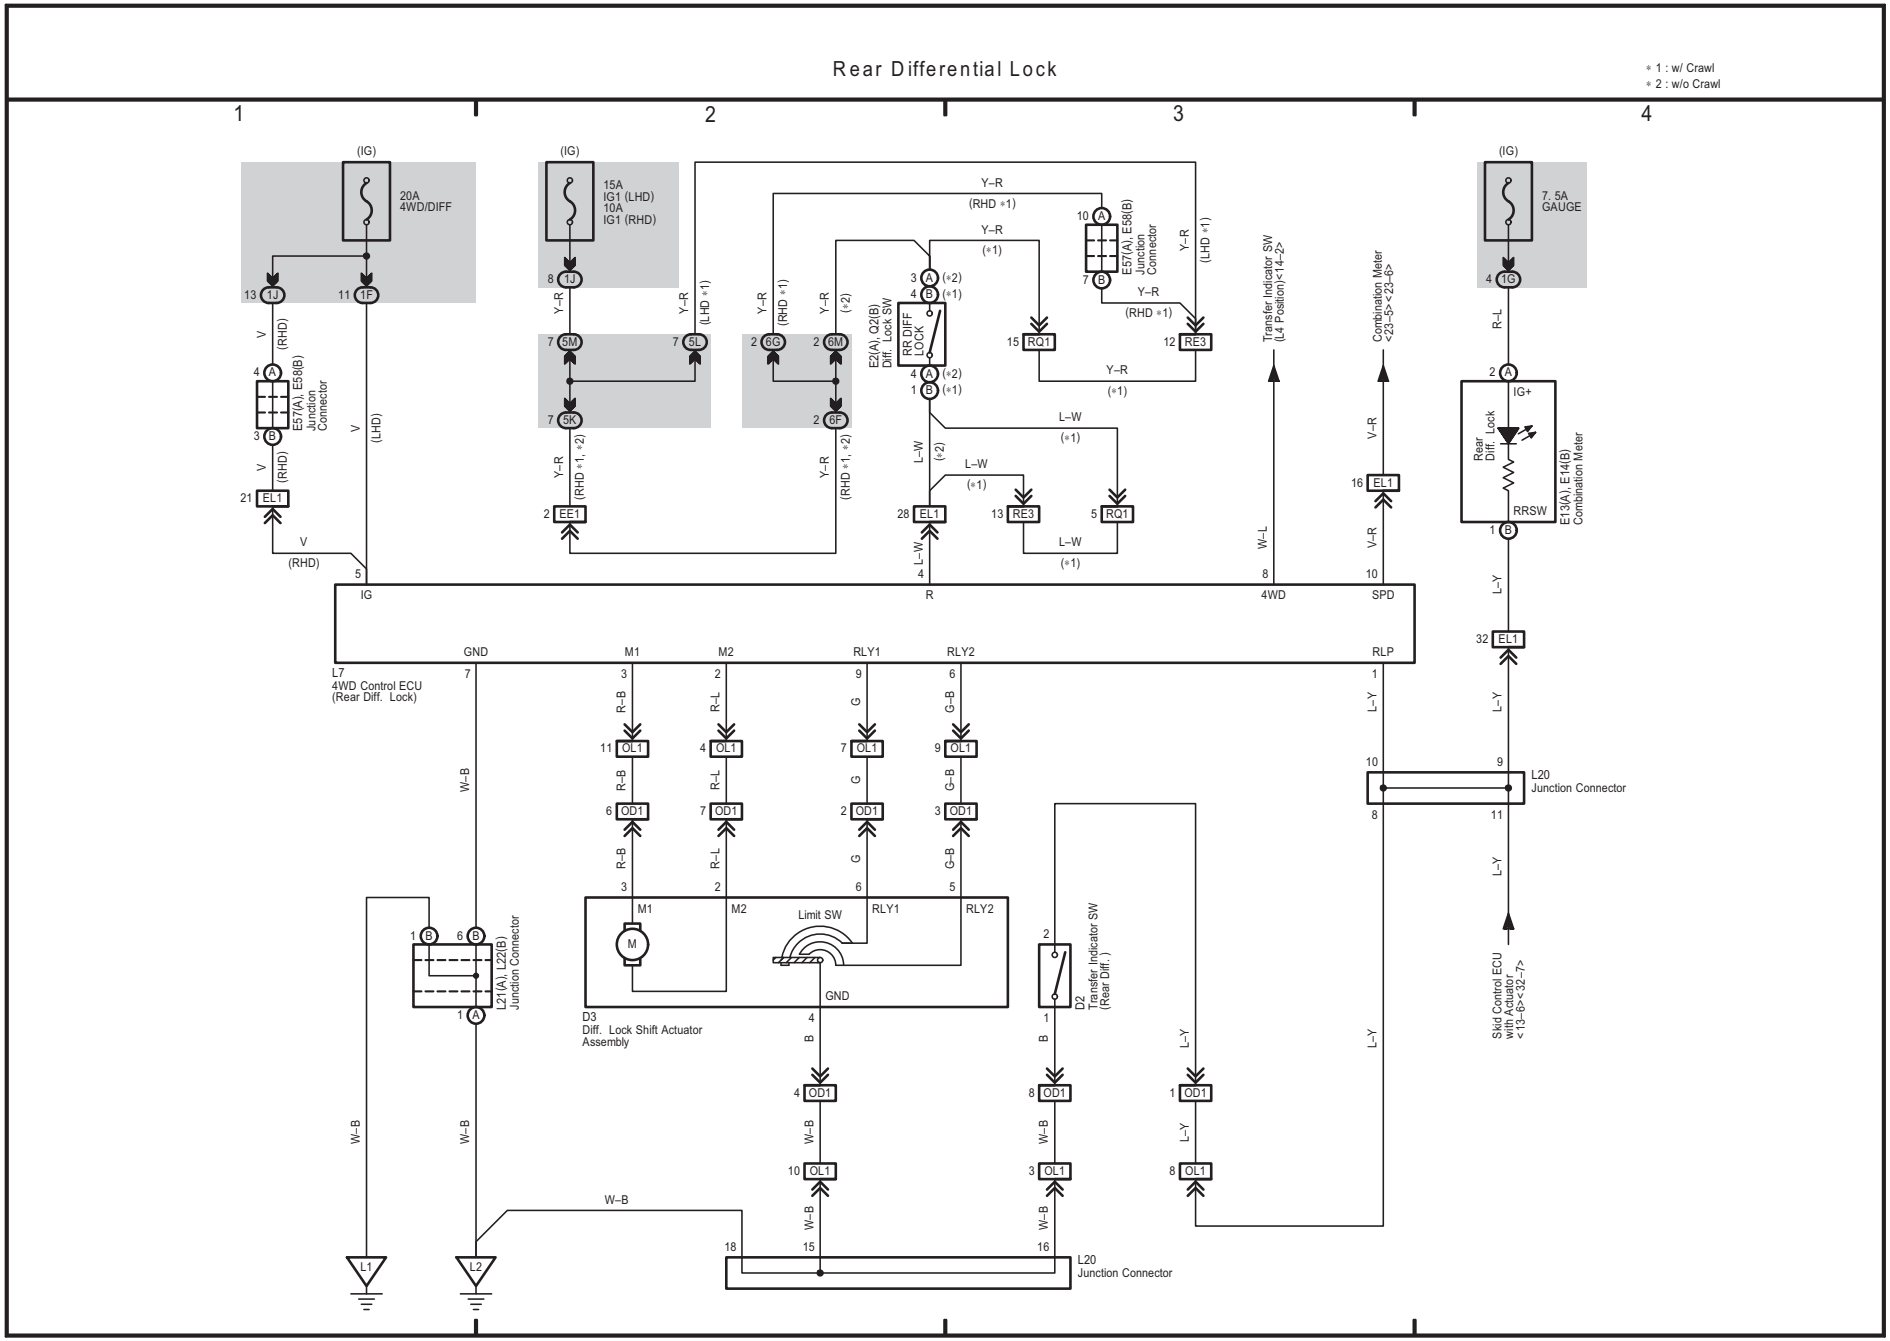

Rear Differential Lock
* 1 : w/ Crawl
* 2 : w/o Crawl
1
2
3
4
(IG)
20A
4WD/DIFF
15A
IG1 (LHD)
10A
IG1 (RHD)
7. 5A
GAUGE
E57(A), E58(B)
Junction
Connector
E2(A), Q2(B)
Diff. Lock SW
RR DIFF
LOCK
Transfer Indicator SW
(L4 Position)<14-2>
Combination Meter
<23-5><23-6>
Rear
Diff. Lock
RRSW
E13(A), E14(B)
Combination Meter
IG+
IG
R
4WD
SPD
RLP
GND
M1
M2
RLY1
RLY2
L7
4WD Control ECU
(Rear Diff. Lock)
L21(A), L22(B)
Junction Connector
D3
Diff. Lock Shift Actuator
Assembly
Limit SW
D2
Transfer Indicator SW
(Rear Diff.)
L20
Junction Connector
Skid Control ECU
with Actuator
<13-6><32-7>
L1
L2