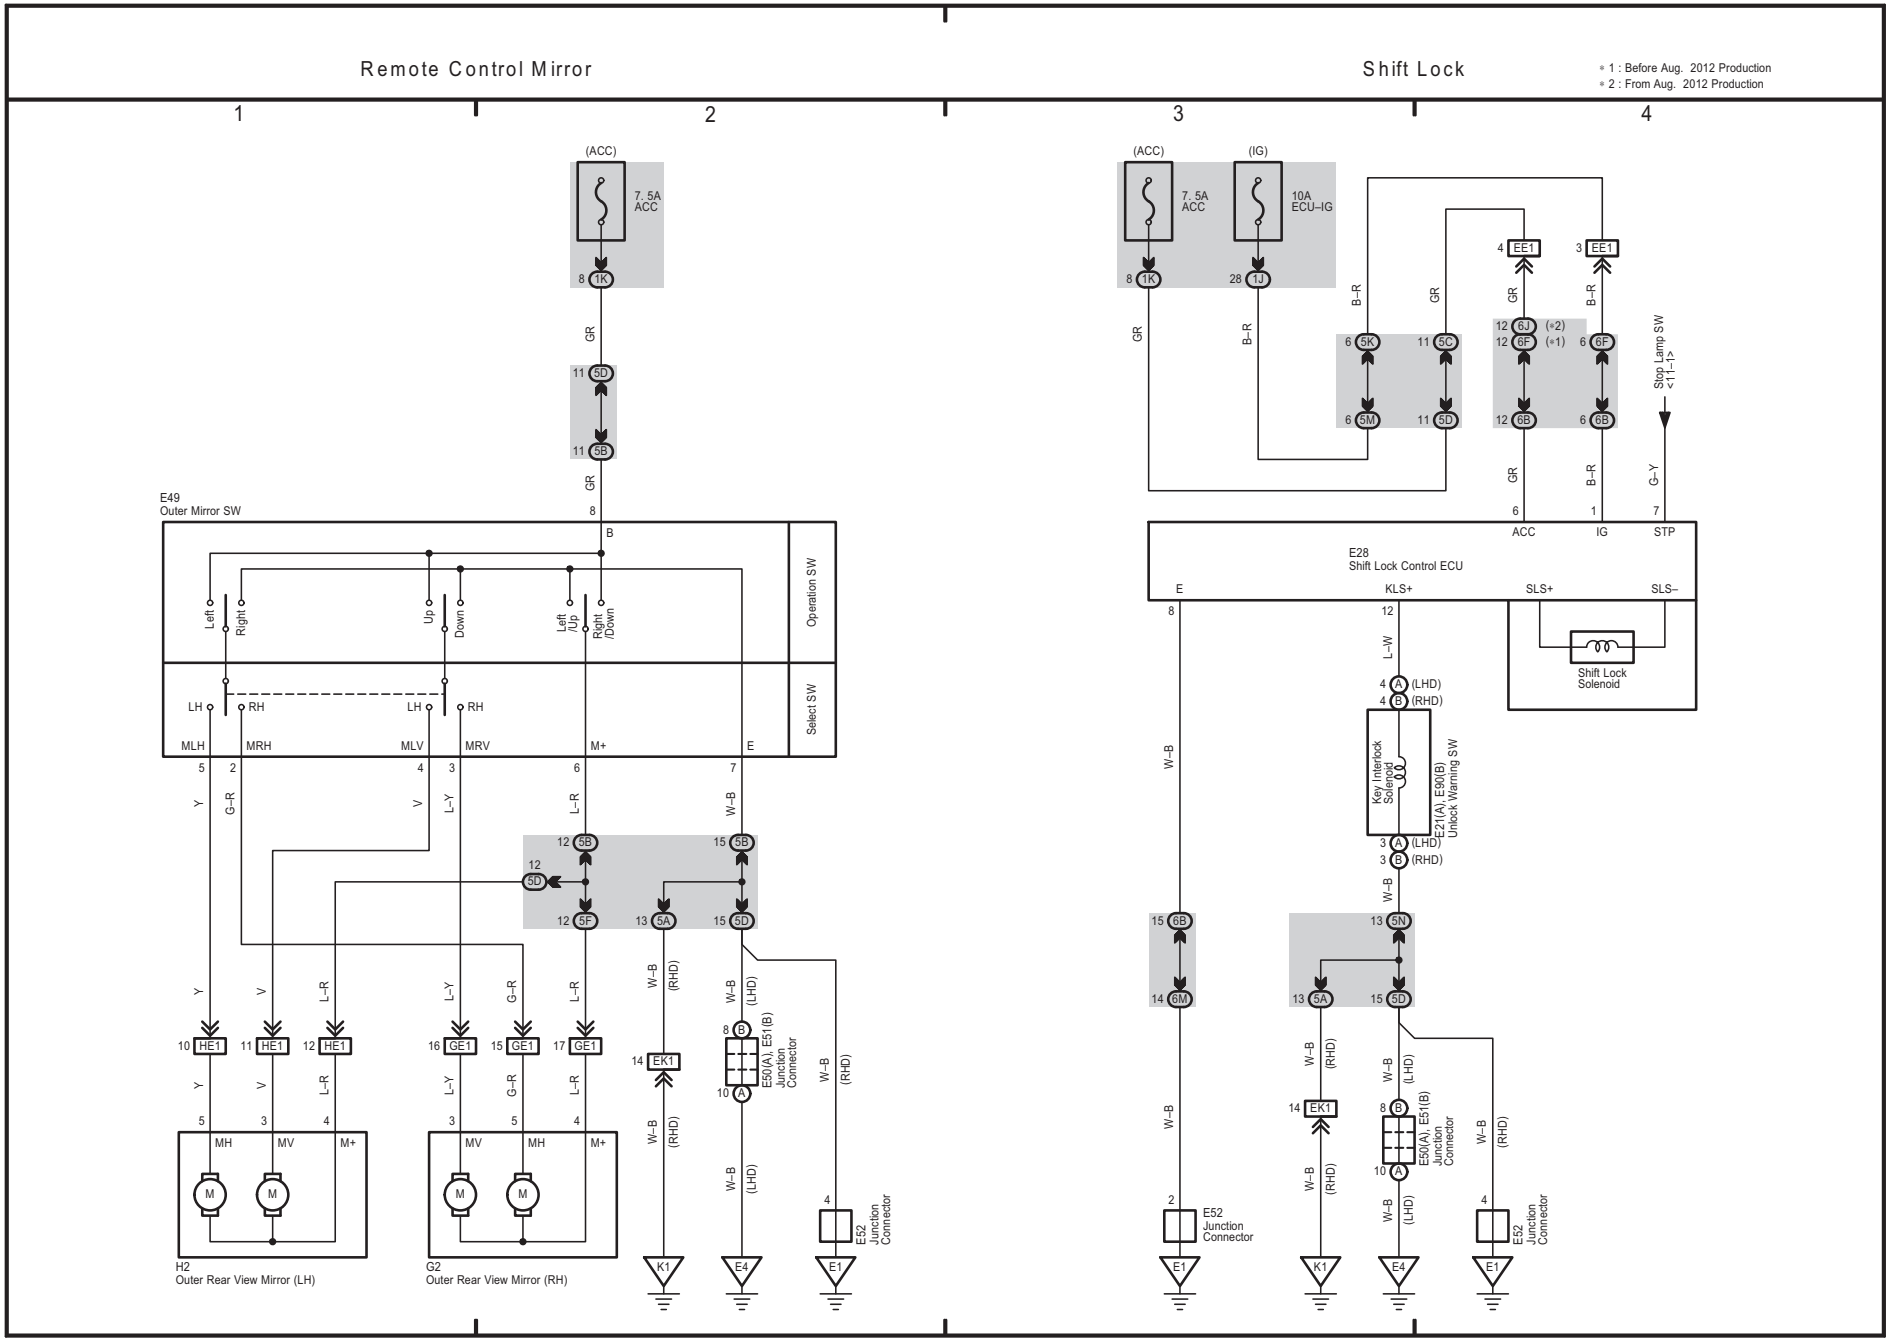

Remote Control Mirror
Shift Lock
* 1 : Before Aug. 2012 Production
* 2 : From Aug. 2012 Production
1
2
3
4
(ACC)
7.5A ACC
8 1K
GR
11 5D
11 5B
E49
Outer Mirror SW
Left
Right
Up
Down
Left /Up
Right /Down
Operation SW
Select SW
LH
RH
MLH
MRH
MLV
MRV
M+
E
Y
G–R
V
L–Y
L–R
W–B
12 5B
12 5D
12 5F
15 5B
13 5A
15 5D
10 HE1
11 HE1
12 HE1
16 GE1
15 GE1
17 GE1
14 EK1
8 B
10 A
E50(A), E51(B) Junction Connector
W–B (RHD)
W–B (LHD)
4
E52 Junction Connector
MH
MV
M
H2
Outer Rear View Mirror (LH)
G2
Outer Rear View Mirror (RH)
K1
E4
E1
(IG)
10A ECU–IG
8 1K
28 1J
B–R
6 5K
11 5C
6 5M
11 5D
4 EE1
3 EE1
12 6J (*2)
12 6F (*1)
6 6F
12 6B
6 6B
Stop Lamp SW
<11–1>
G–Y
6
ACC
1
IG
7
STP
E28
Shift Lock Control ECU
E
KLS+
SLS+
SLS–
8
12
L–W
4 A (LHD)
4 B (RHD)
Shift Lock Solenoid
Key Interlock Solenoid
E21(A), E80(B) Unock Warning SW
3 A (LHD)
3 B (RHD)
15 6B
14 6M
13 5N
13 5A
15 5D
2
E52 Junction Connector