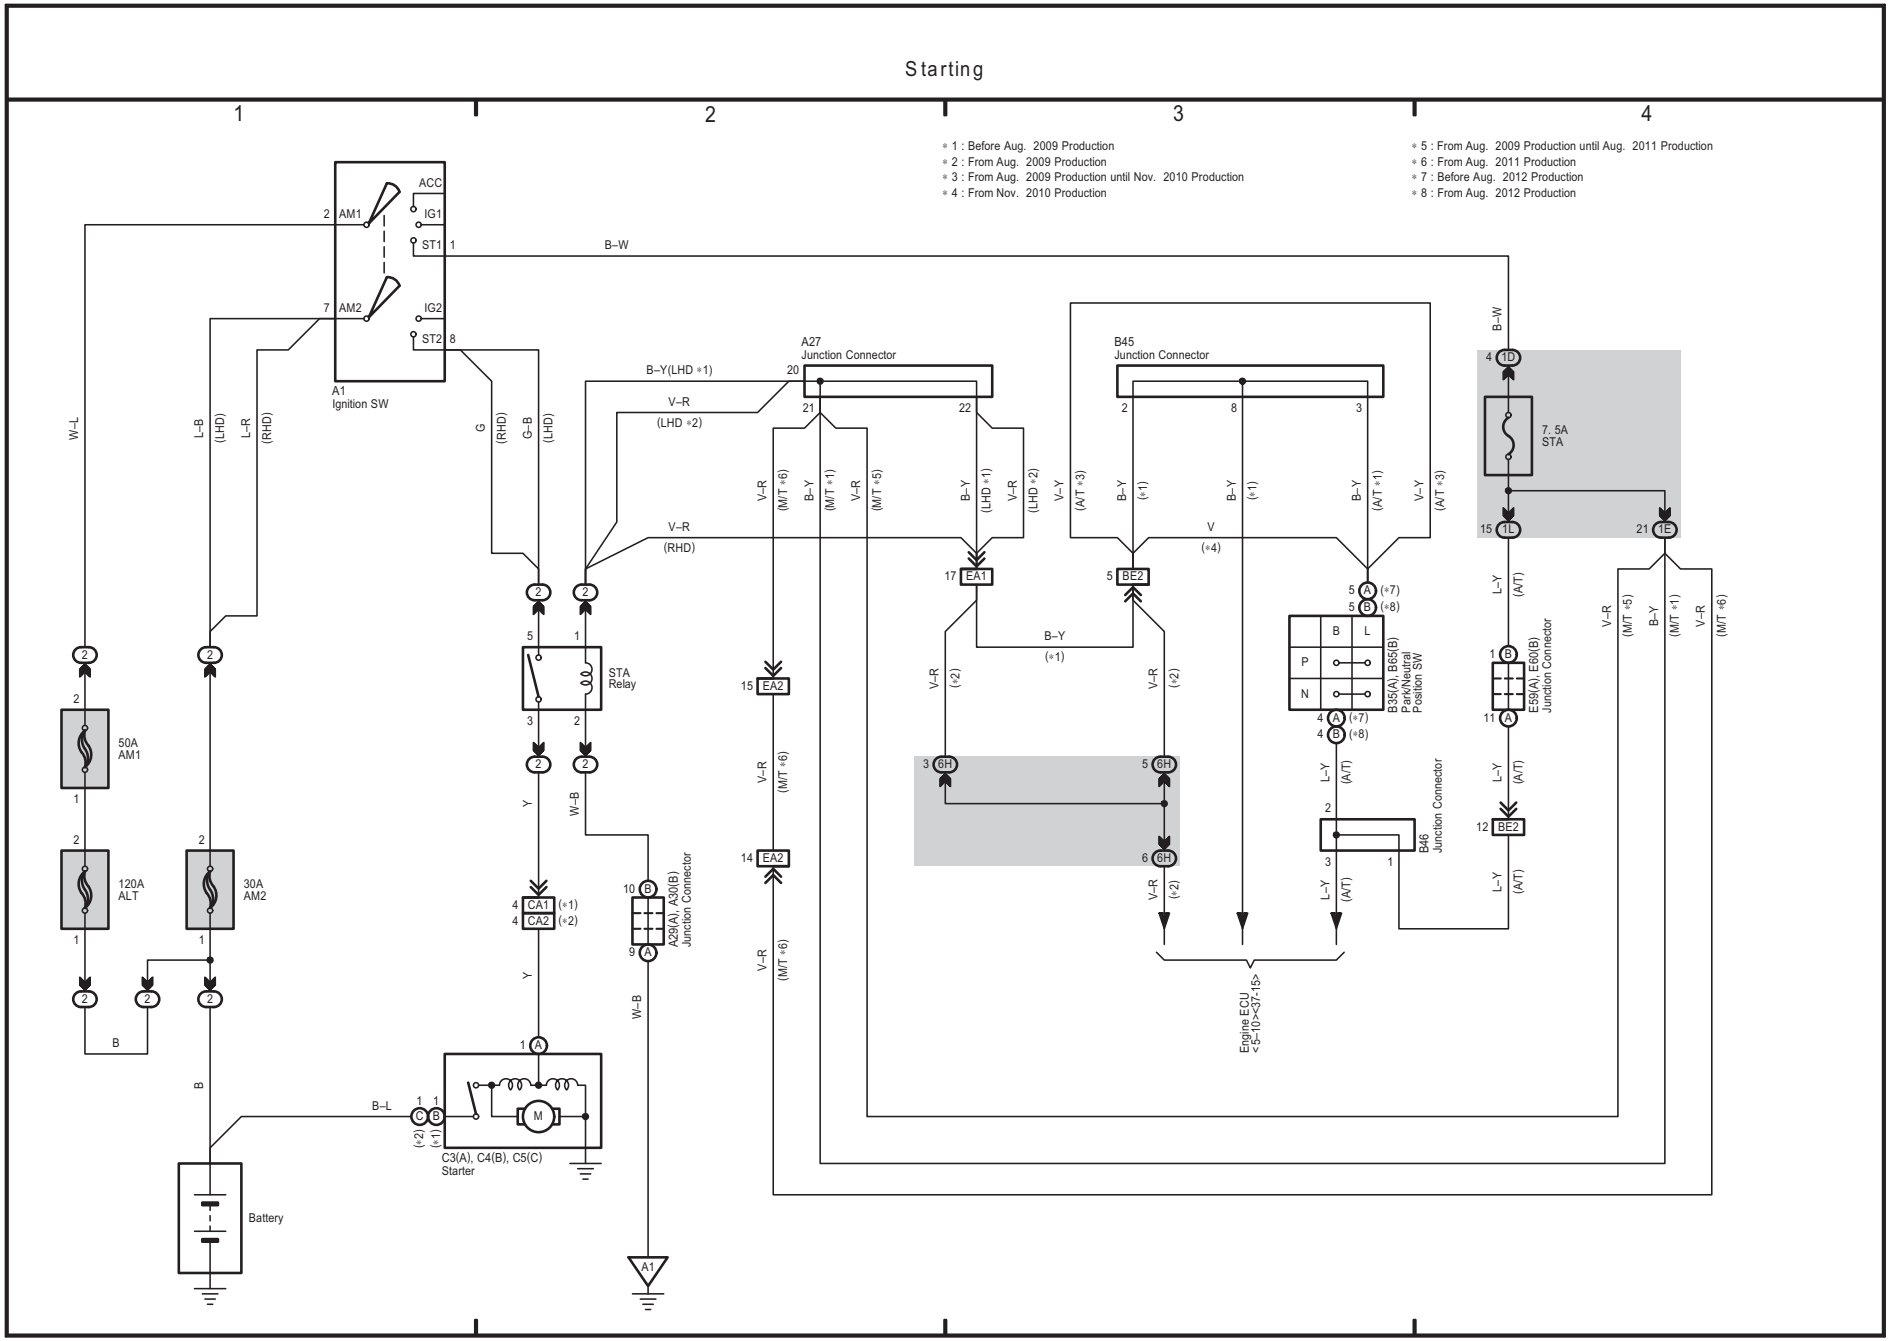

Starting
1
2
3
4
∗1 : Before Aug. 2009 Production
∗2 : From Aug. 2009 Production
∗3 : From Aug. 2009 Production until Nov. 2010 Production
∗4 : From Nov. 2010 Production
∗5 : From Aug. 2009 Production until Aug. 2011 Production
∗6 : From Aug. 2011 Production
∗7 : Before Aug. 2012 Production
∗8 : From Aug. 2012 Production
A1
Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
B–W
W–L
L–B (LHD)
L–R (RHD)
G
G–B (RHD)
G–B (LHD)
B–Y(LHD ∗1)
V–R (LHD ∗2)
V–R (RHD)
A27
Junction Connector
B45
Junction Connector
7. 5A
STA
50A
AM1
120A
ALT
30A
AM2
STA
Relay
CA1 (∗1)
CA2 (∗2)
A29(A), A30(B)
Junction Connector
EA1
EA2
BE2
6H
B35(A), B65(B)
Park/Neutral
Position SW
B46
Junction Connector
E59(A), E60(B)
Junction Connector
Engine ECU
<5–10><3J–15>
B–L
C3(A), C4(B), C5(C)
Starter
M
Battery
A1