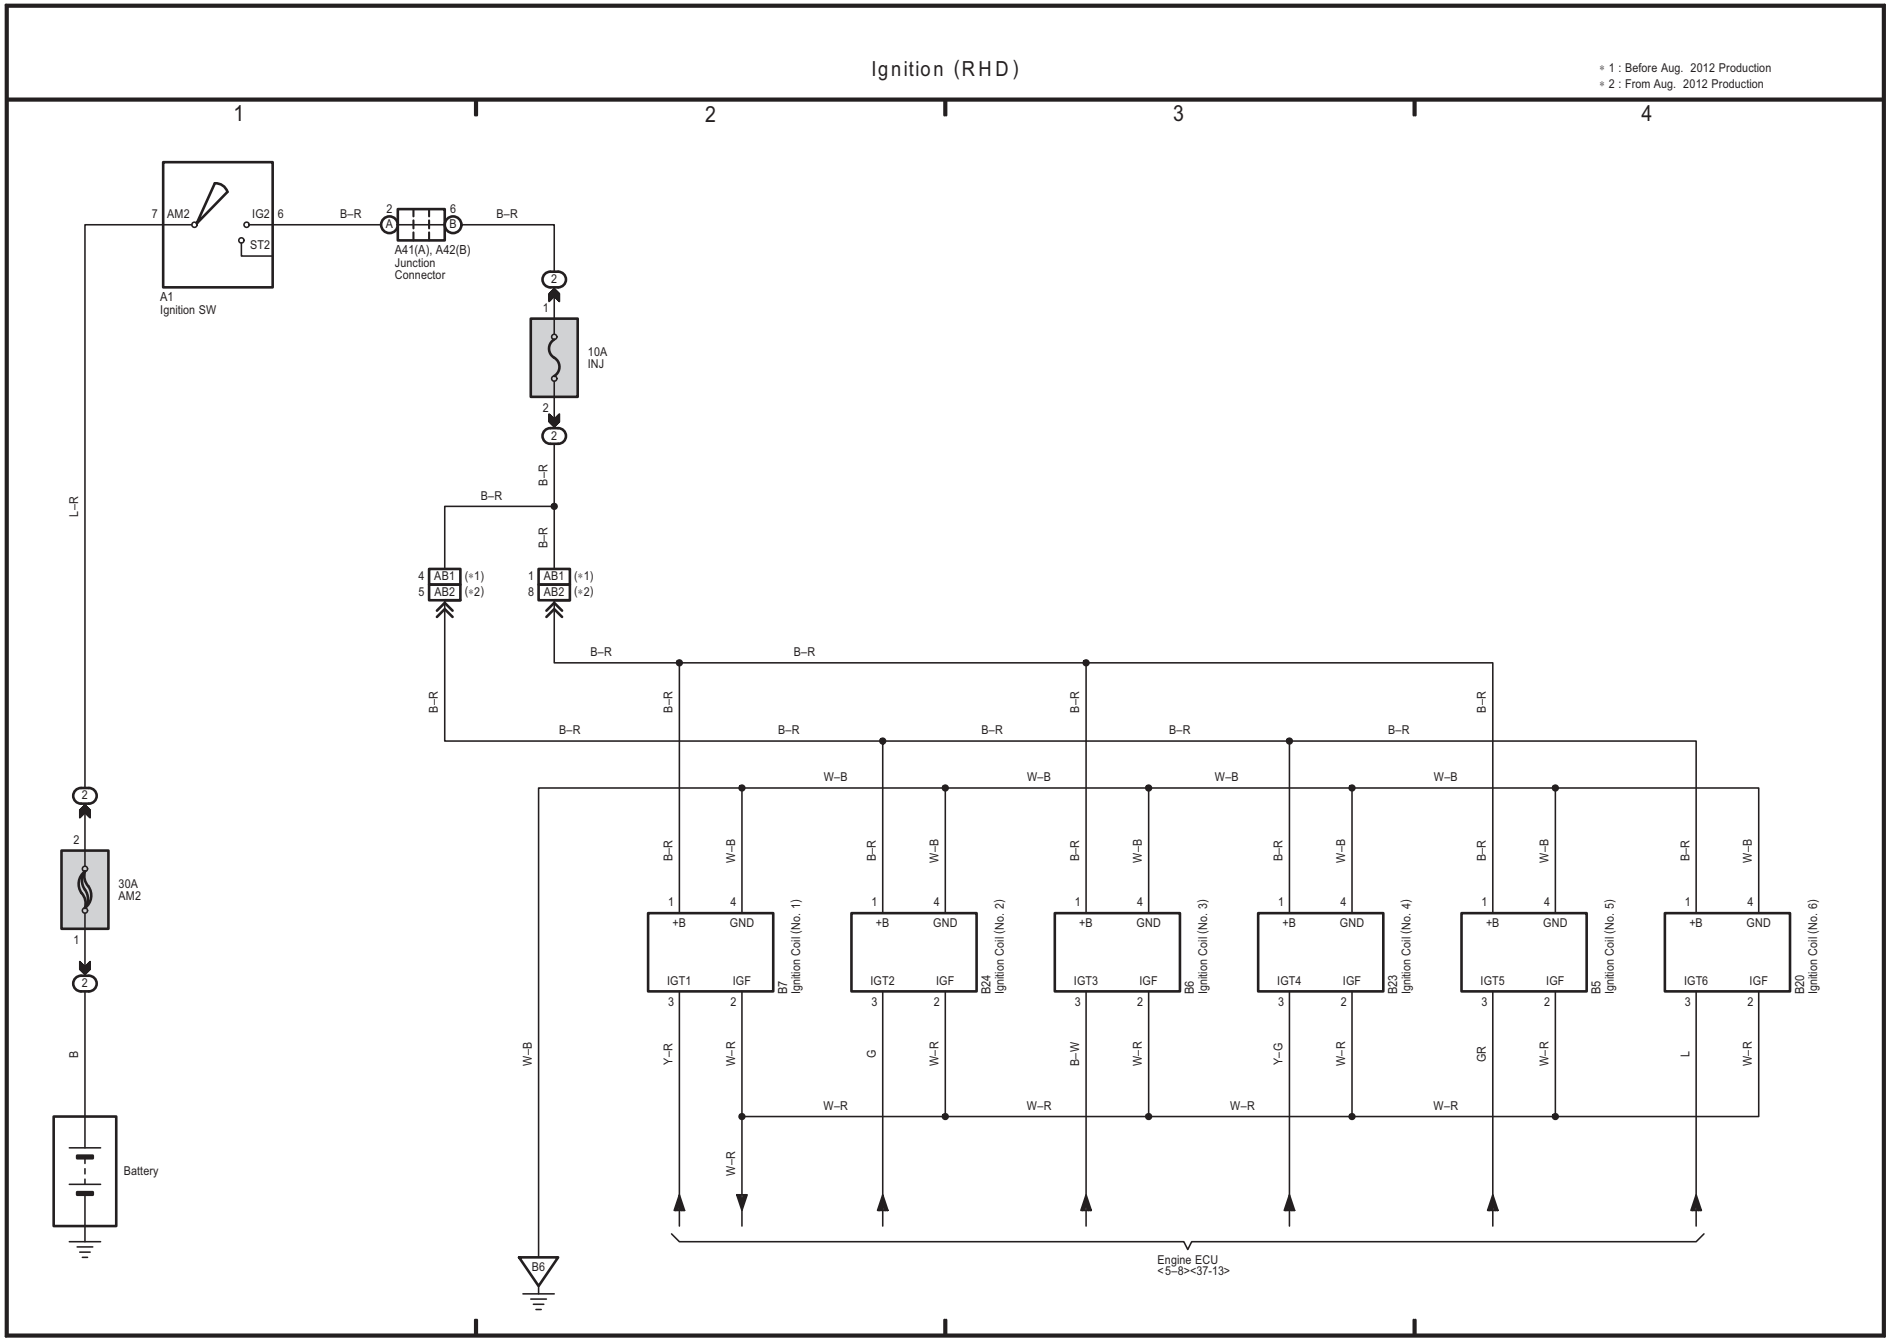

Ignition (RHD)
* 1 : Before Aug. 2012 Production
* 2 : From Aug. 2012 Production
1
2
3
4
7 AM2
IG2 6
ST2
A1
Ignition SW
B–R
2 A
6 B
A41(A), A42(B)
Junction
Connector
10A
INJ
L–R
30A
AM2
B
Battery
W–B
B6
4 AB1 (*1)
5 AB2 (*2)
1 AB1 (*1)
8 AB2 (*2)
+B
GND
IGT1
IGF
B7
Ignition Coil (No. 1)
IGT2
B24
Ignition Coil (No. 2)
IGT3
B6
Ignition Coil (No. 3)
IGT4
B23
Ignition Coil (No. 4)
IGT5
B5
Ignition Coil (No. 5)
IGT6
B20
Ignition Coil (No. 6)
Y–R
W–R
G
B–W
Y–G
GR
L
Engine ECU
<5–8><37-13>