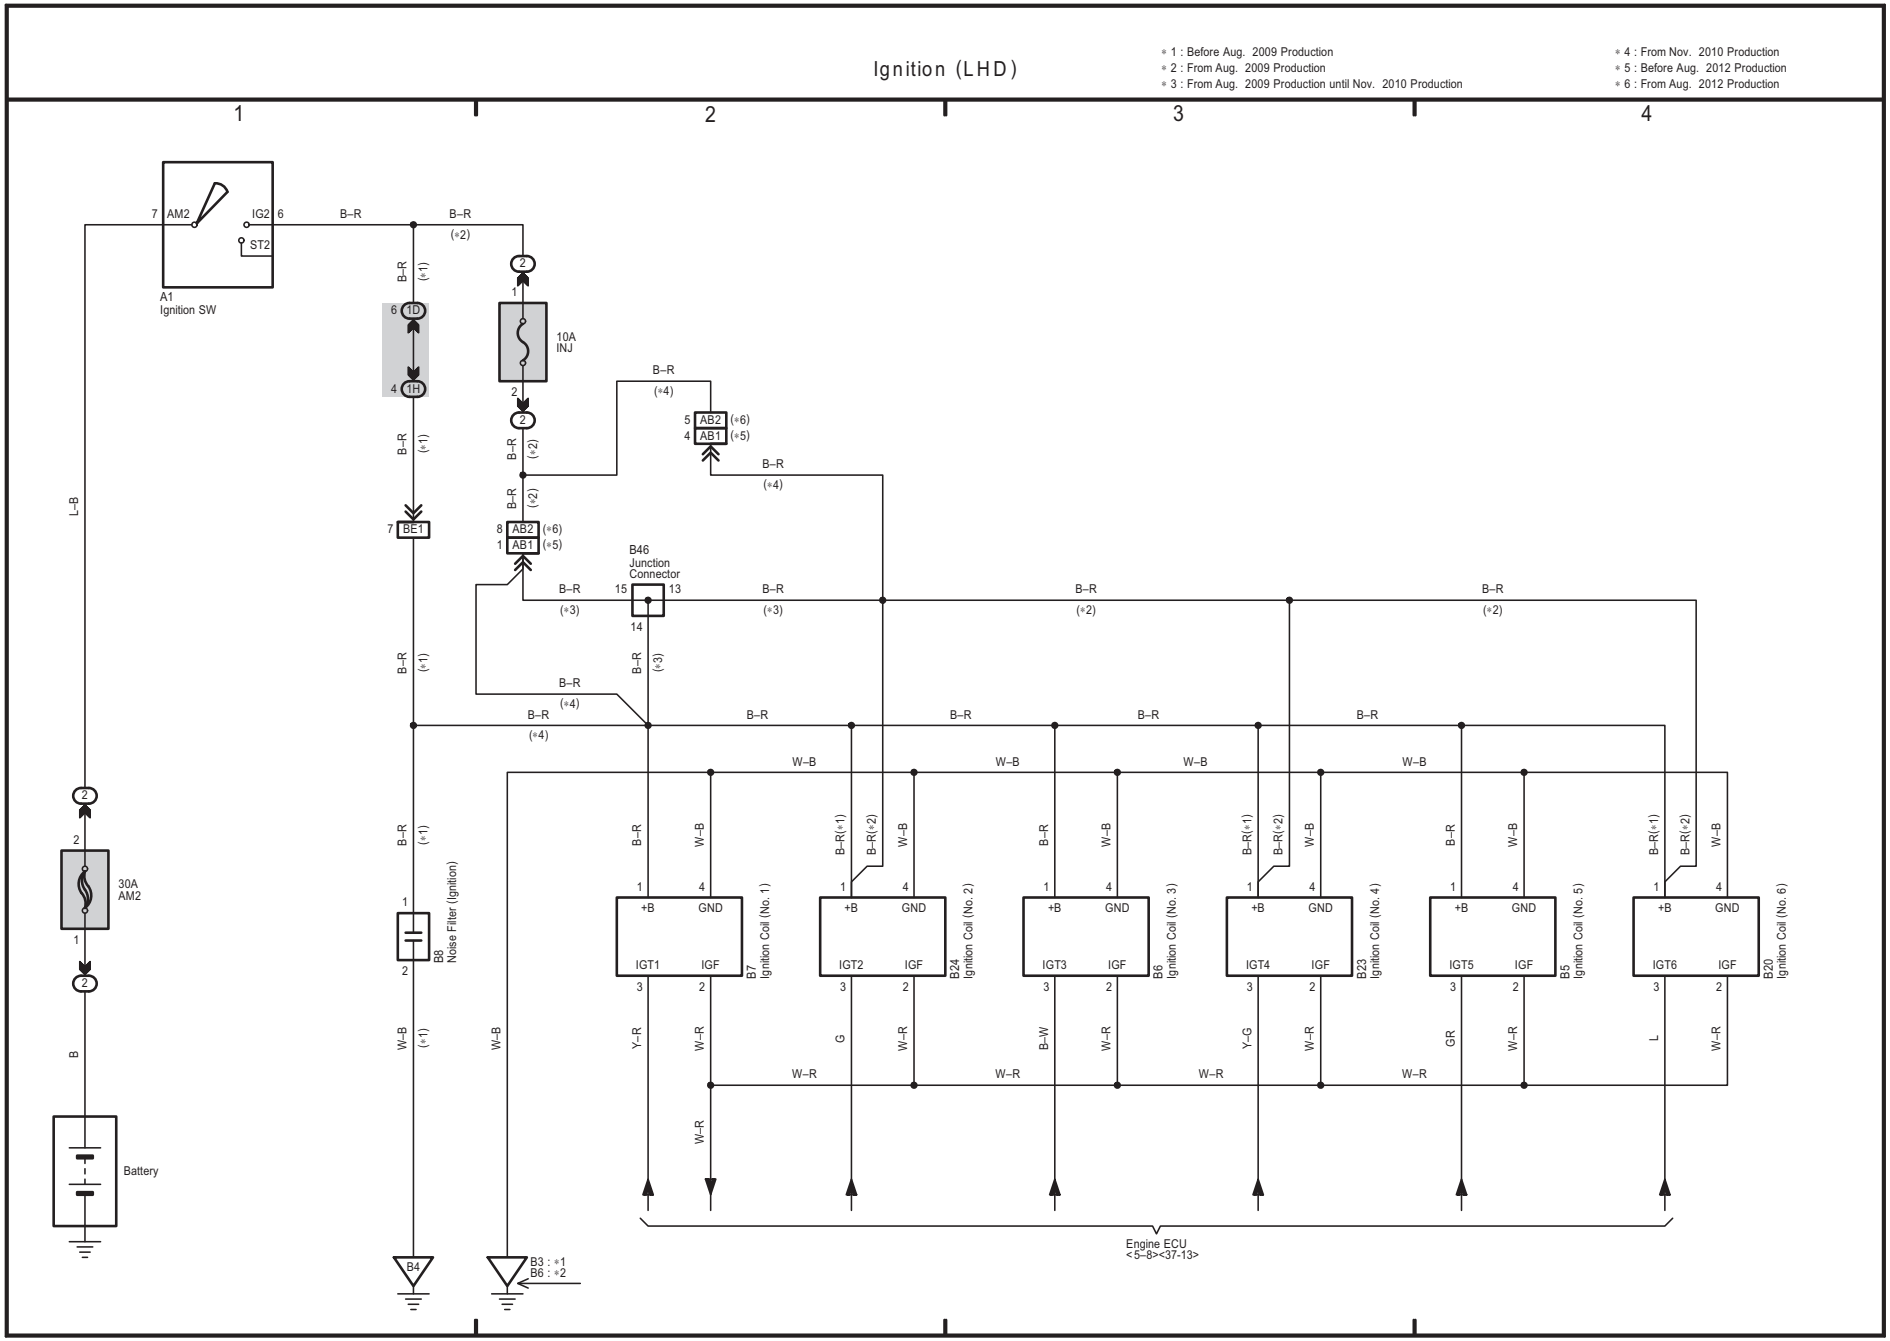

Ignition (LHD)
∗1 : Before Aug. 2009 Production
∗2 : From Aug. 2009 Production
∗3 : From Aug. 2009 Production until Nov. 2010 Production
∗4 : From Nov. 2010 Production
∗5 : Before Aug. 2012 Production
∗6 : From Aug. 2012 Production
1
2
3
4
A1
Ignition SW
AM2
IG2
ST2
10A
INJ
1D
1H
BE1
AB2
AB1
B46
Junction
Connector
30A
AM2
Battery
B8
Noise Filter (Ignition)
B4
B3 : ∗1
B6 : ∗2
B7
Ignition Coil (No. 1)
B24
Ignition Coil (No. 2)
B6
Ignition Coil (No. 3)
B23
Ignition Coil (No. 4)
B5
Ignition Coil (No. 5)
B20
Ignition Coil (No. 6)
+B
GND
IGT1
IGT2
IGT3
IGT4
IGT5
IGT6
IGF
Engine ECU
<5–8><37-13>
L–B
B–R
W–B
Y–R
W–R
G
B–W
Y–G
GR
L