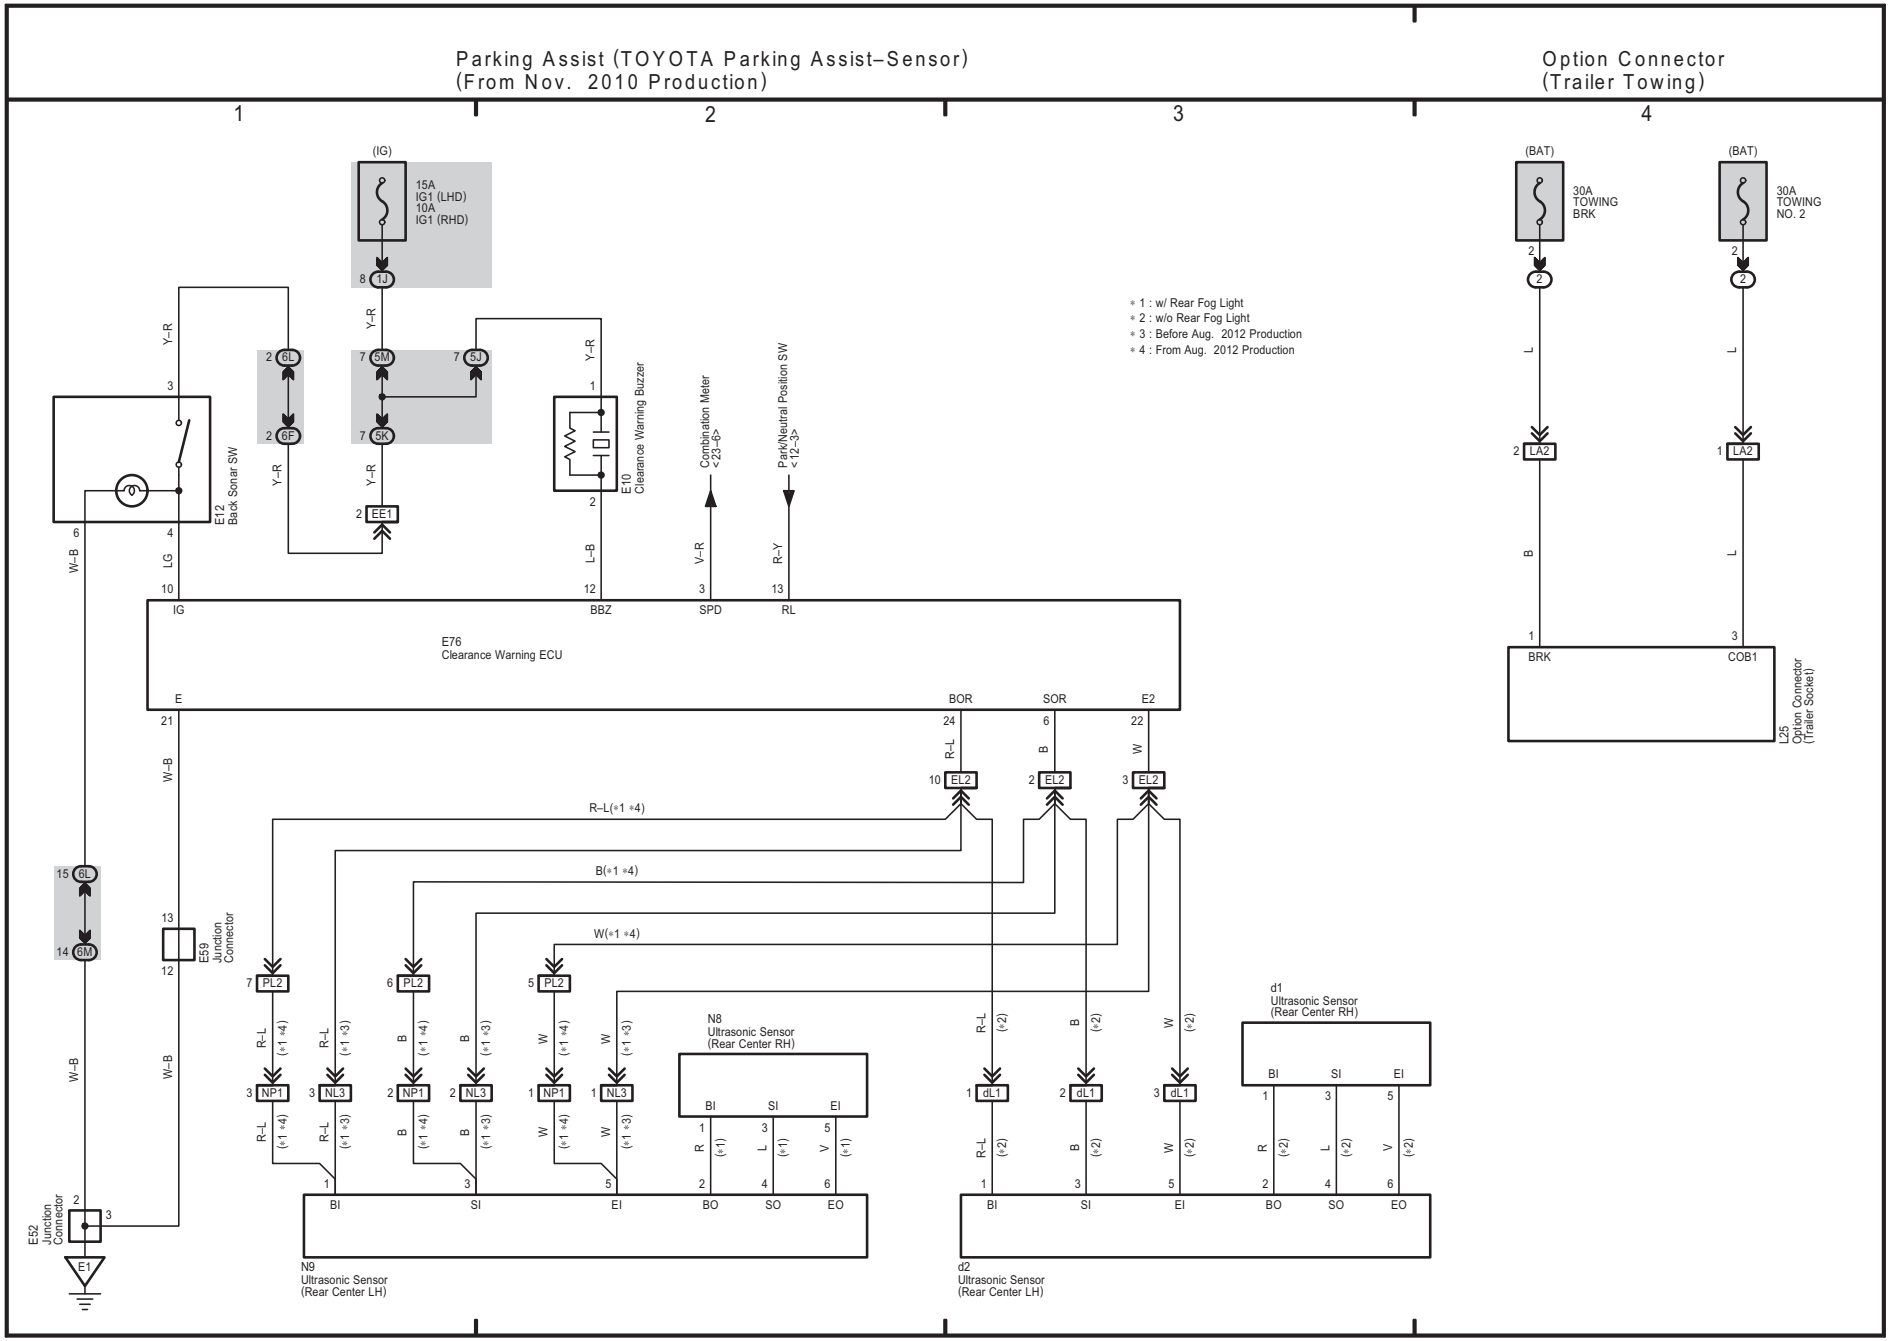

Parking Assist (TOYOTA Parking Assist–Sensor)
(From Nov. 2010 Production)
Option Connector
(Trailer Towing)
1
2
3
4
(IG)
15A
IG1 (LHD)
10A
IG1 (RHD)
8 1J
Y–R
2 6L
7 6M
7 5J
2 6F
7 5K
2 EE1
E12
Back Sonar SW
E10
Clearance Warning Buzzer
Combination Meter
<23–6>
Park/Neutral Position SW
<12–3>
∗1 : w/ Rear Fog Light
∗2 : w/o Rear Fog Light
∗3 : Before Aug. 2012 Production
∗4 : From Aug. 2012 Production
(BAT)
30A
TOWING
BRK
30A
TOWING
NO. 2
2 LA2
L
B
BRK
COB1
L25
Option Connector
(Trailer Socket)
W–B
LG
L–B
V–R
R–Y
IG
BBZ
SPD
RL
E76
Clearance Warning ECU
E
BOR
SOR
E2
21
24
6
22
R–L
B
W
10 EL2
2 EL2
3 EL2
R–L(∗1 ∗4)
B(∗1 ∗4)
W(∗1 ∗4)
15 6L
14 6M
13
12
E59
Junction
Connector
7 PL2
6 PL2
5 PL2
3 NP1
3 NL3
2 NP1
2 NL3
1 NP1
1 NL3
(∗1 ∗4)
(∗1 ∗3)
N8
Ultrasonic Sensor
(Rear Center RH)
BI
SI
EI
BO
SO
EO
R
L
V
(∗1)
1 dL1
2 dL1
3 dL1
(∗2)
d1
Ultrasonic Sensor
(Rear Center RH)
E52
Junction
Connector
E1
N9
Ultrasonic Sensor
(Rear Center LH)
d2
Ultrasonic Sensor
(Rear Center LH)