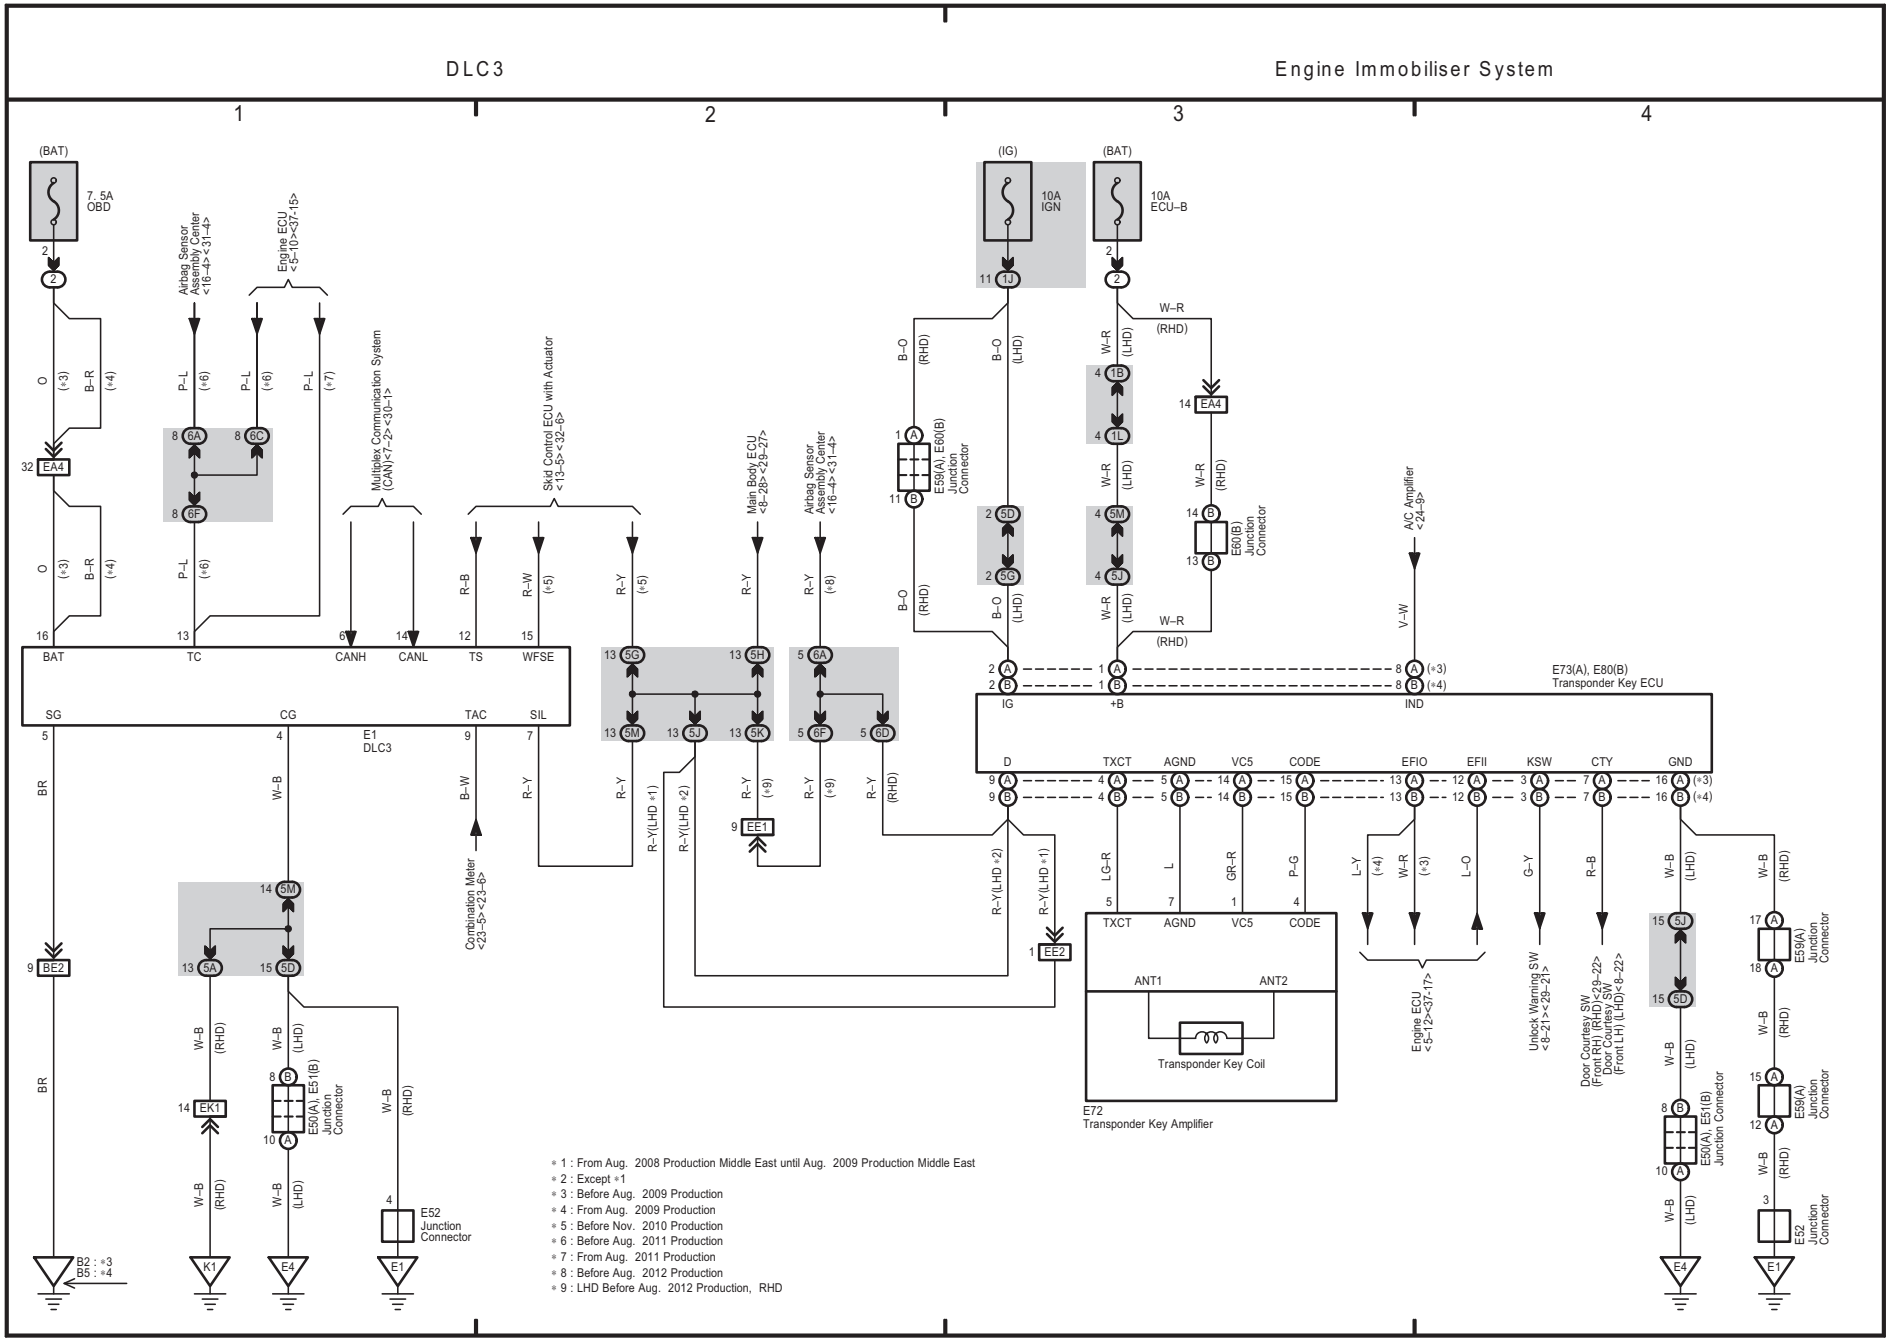

DLC3
Engine Immobiliser System
1
2
3
4
(BAT)
7. 5A
OBD
Airbag Sensor
Assembly Center
<16–4><31–4>
Engine ECU
<5–10><37–15>
Multiplex Communication System
(CAN)<7–2><33–1>
Skid Control ECU with Actuator
<13–5><32–6>
Main Body ECU
<9–28><29–27>
Airbag Sensor
Assembly Center
<16–4><31–4>
(IG)
10A
IGN
(BAT)
10A
ECU–B
A/C Amplifier
<24–9>
E59(A), E60(B)
Junction
Connector
E60(B)
Junction
Connector
E73(A), E80(B)
Transponder Key ECU
BAT
TC
CANH
CANL
TS
WFSE
IG
+B
IND
SG
CG
E1
DLC3
TAC
SIL
D
TXCT
AGND
VC5
CODE
EFIO
EFII
KSW
CTY
GND
Combination Meter
<23–5><23–6>
E72
Transponder Key Amplifier
ANT1
ANT2
Transponder Key Coil
Engine ECU
<5–12><37–17>
Unlock Warning SW
<8–21><29–21>
Door Courtesy SW
(Front RH) (RHD)<29–22>
Door Courtesy SW
(Front LH) (LHD)<9–22>
E50(A), E51(B)
Junction Connector
E59(A)
Junction
Connector
E52
Junction
Connector
B2 : *3
B5 : *4
K1
E4
E1
* 1 : From Aug. 2008 Production Middle East until Aug. 2009 Production Middle East
* 2 : Except *1
* 3 : Before Aug. 2009 Production
* 4 : From Aug. 2009 Production
* 5 : Before Nov. 2010 Production
* 6 : Before Aug. 2011 Production
* 7 : From Aug. 2011 Production
* 8 : Before Aug. 2012 Production
* 9 : LHD Before Aug. 2012 Production, RHD