

G4
G3
G1
G2
G8
K2
G7
L9
K5
K3
L18
L16
H2
H3
H7
H4
H6
L14
L2
L25
K4
L4
L6
L8
L22
L5
L21
L20
L11
L13
D2
D3
K16
K17

D 2 Transfer Indicator SW (Rear Diff.)
D 3 Diff. Lock Shift Actuator Assembly
G 1 Junction Connector
G 2 Outer Rear View Mirror (RH)
G 3 Power Window Regulator Motor (Front RH)
G 4 Speaker (Front RH)
G 7 Door Lock Assembly (Front RH)
G 8 Power Window Master SW
H 2 Outer Rear View Mirror (LH)
H 3 Power Window Regulator Motor (Front LH)
H 4 Speaker (Front LH)
H 6 Door Lock Assembly (Front LH)
H 7 Power Window SW (Front LH)
K 2 Side Airbag Sensor (Front RH)
K 3 Side Airbag Sensor (Rear RH)
K 4 Speaker (Woofer w/ Amplifier)
K 5 Curtain Shield Airbag Squib (RH)
K 16 No. 1 Rear Power Outlet Socket (Rear Power Point Socket Assembly)
K 17 No. 2 Rear Power Outlet Socket (Rear Power Point Socket Assembly)
L 2 Door Courtesy SW (Back Door)
L 4 Side Airbag Sensor (Front LH)
L 5 Fuel Suction Pump and Gage Assembly
L 6 Side Airbag Sensor (Rear LH)
L 8 Curtain Shield Airbag Squib (LH)
L 9 Tweeter (Rear LH)
L 11 Rear Combination Lamp (LH)
L 13 Rear Combination Lamp (LH)
L 14 Rear Combination Lamp (RH)
L 16 Rear Combination Lamp (RH)
L 18 Tweeter (Rear RH)
L 20 Junction Connector
L 21 Junction Connector
L 22 Junction Connector
L 25 Option Connector (Trailer Socket)


D2
Gray

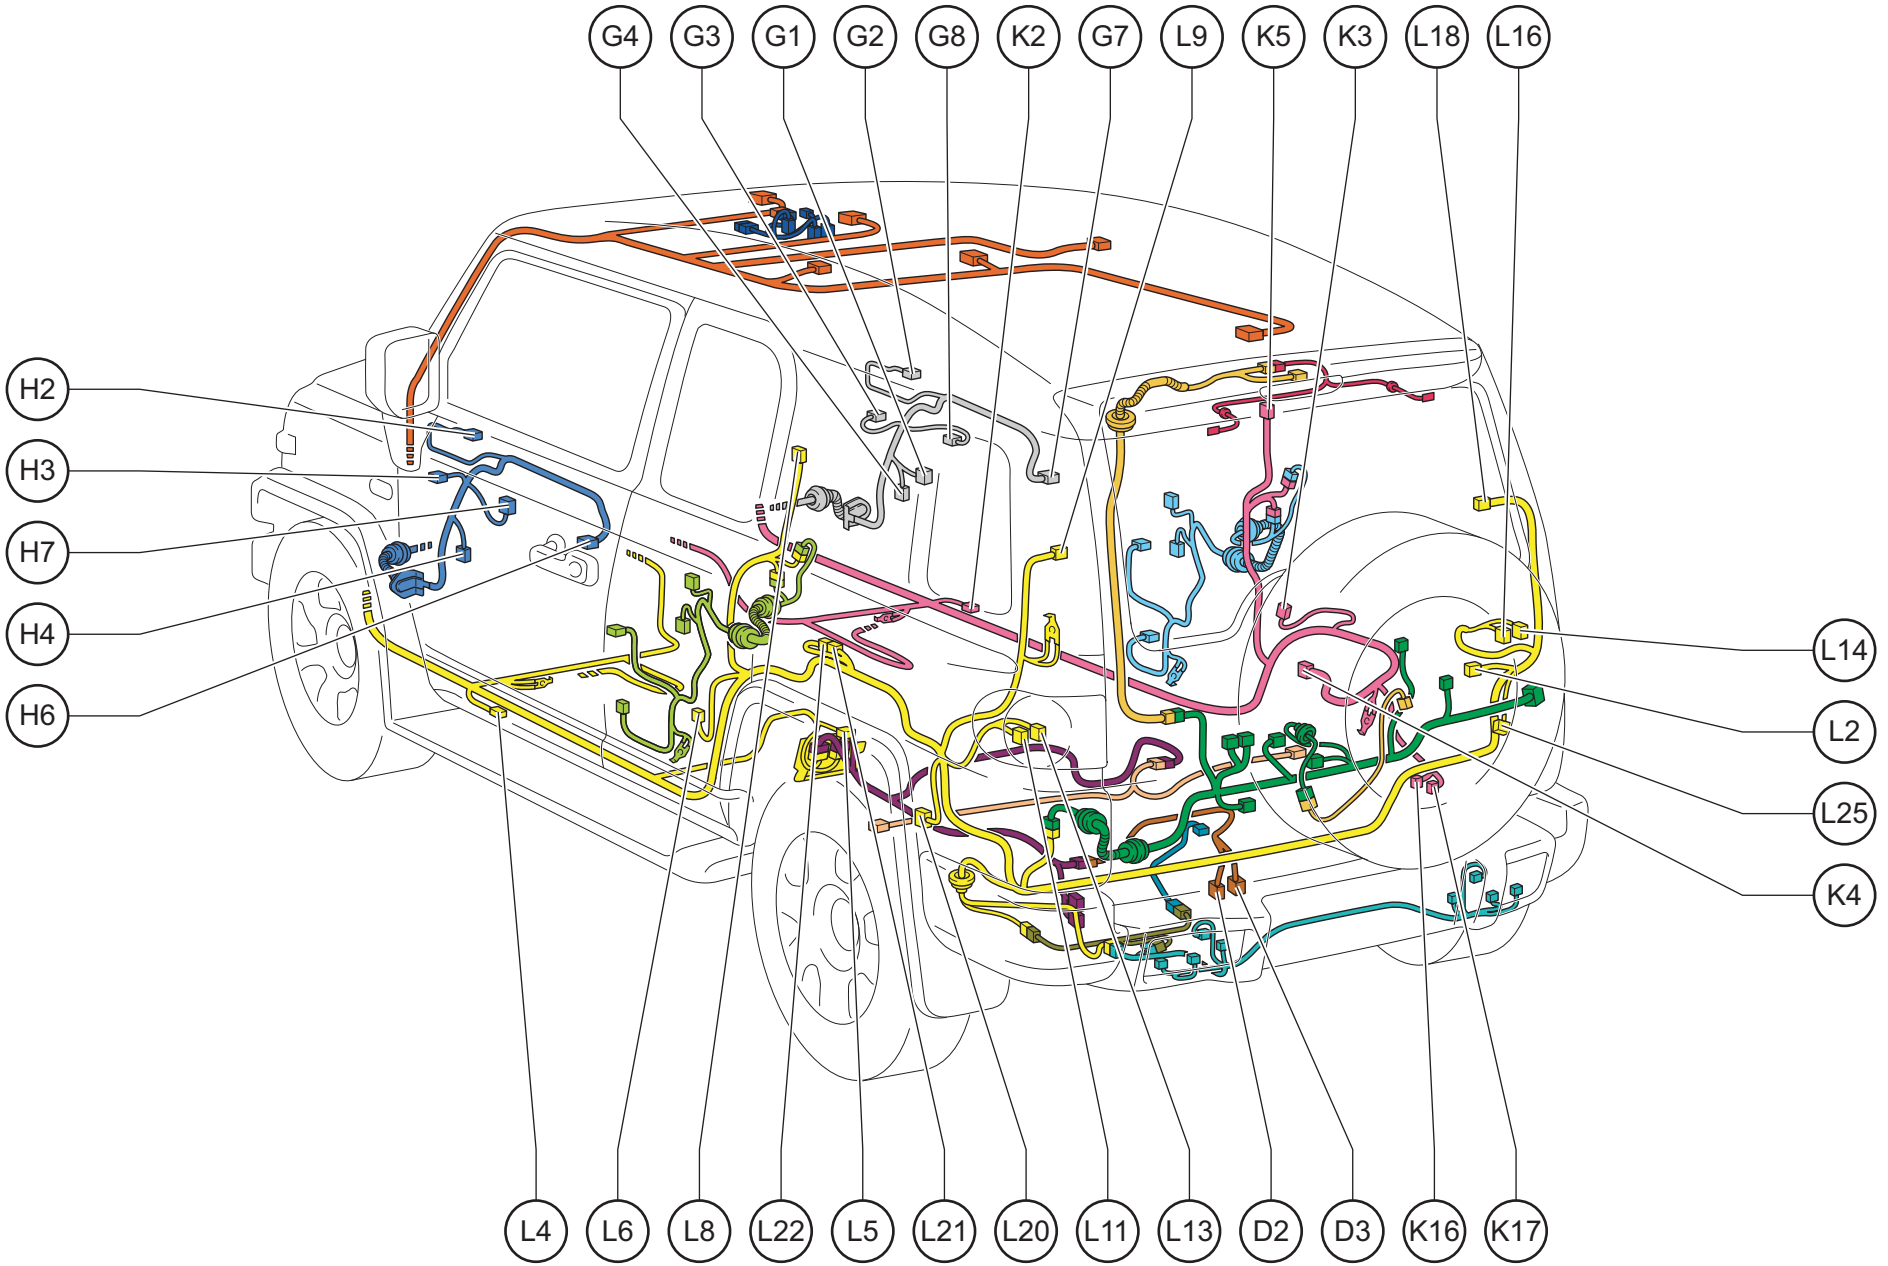

D3
Gray



G1
White

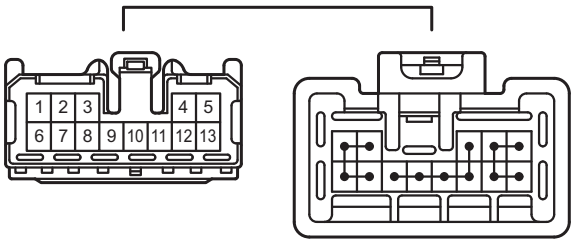

G2
Gray




G3
Black




G4
White



G7
White

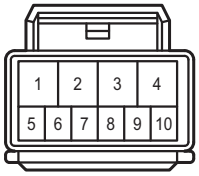

G8
White

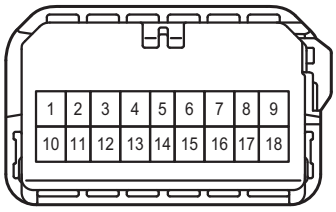

H2
Gray




H3
Black




H4
White




H6
White

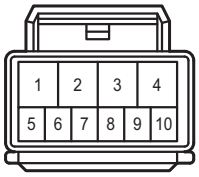


H7
White

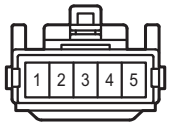


K2
Yellow

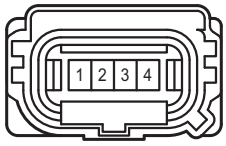

K3
Yellow

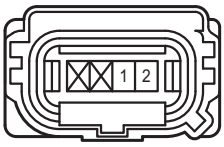

K4
White

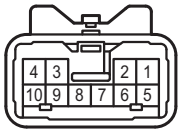

K5
Yellow



K16
White



K17
White



L2
Black




L4
Yellow



L5
White




L6
Yellow

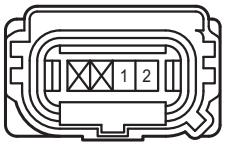


L8
Yellow



L9
White

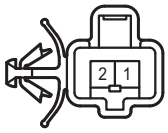


L11
White

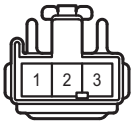

L13
Black




L14
White

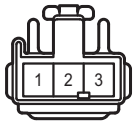


L16
Black




L18
White

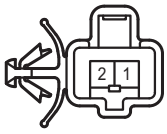


L20
Black

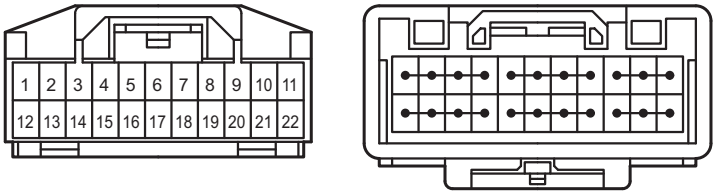

L21
Gray

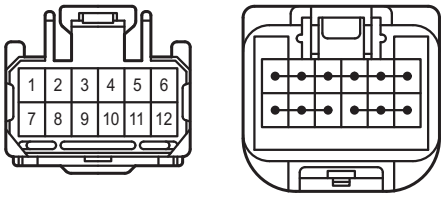

L22
Gray

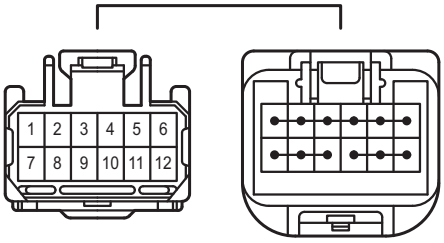

L25
White

