


(M/T)
(A/T)
B33
B42
B36
B35
B36
B43
B39
B38
B44
B41
B40
B37
B34
B32
B31
B30
B29
B28
B26
B27

B 26 Camshaft Timing Oil Control Valve (LH)
B 27 VVT Sensor (Bank 2)
B 28 Engine Oil Pressure SW
B 29 Crankshaft Position Sensor
B 30 A/C Compressor
B 31 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
B 32 Transmission Revolution Sensor (Turbine)
B 33 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 34 Heated Oxygen Sensor (Bank 2 Sensor 2)
B 35 Park/Neutral Position SW
B 36 Heated Oxygen Sensor (Bank 1 Sensor 2)
B 37 ECT Solenoid
B 38 Transmission Revolution Sensor (ECT)
B 39 Transfer Indicator SW (4WD Position)
B 40 Transfer Indicator SW (L4 Position)
B 41 Transfer Indicator SW (Neutral Position)
B 42 Back-Up Lamp SW
B 43 Transfer Indicator SW (Center Diff.)
B 44 Vehicle Speed Sensor (Combination Meter)

B 26
Black

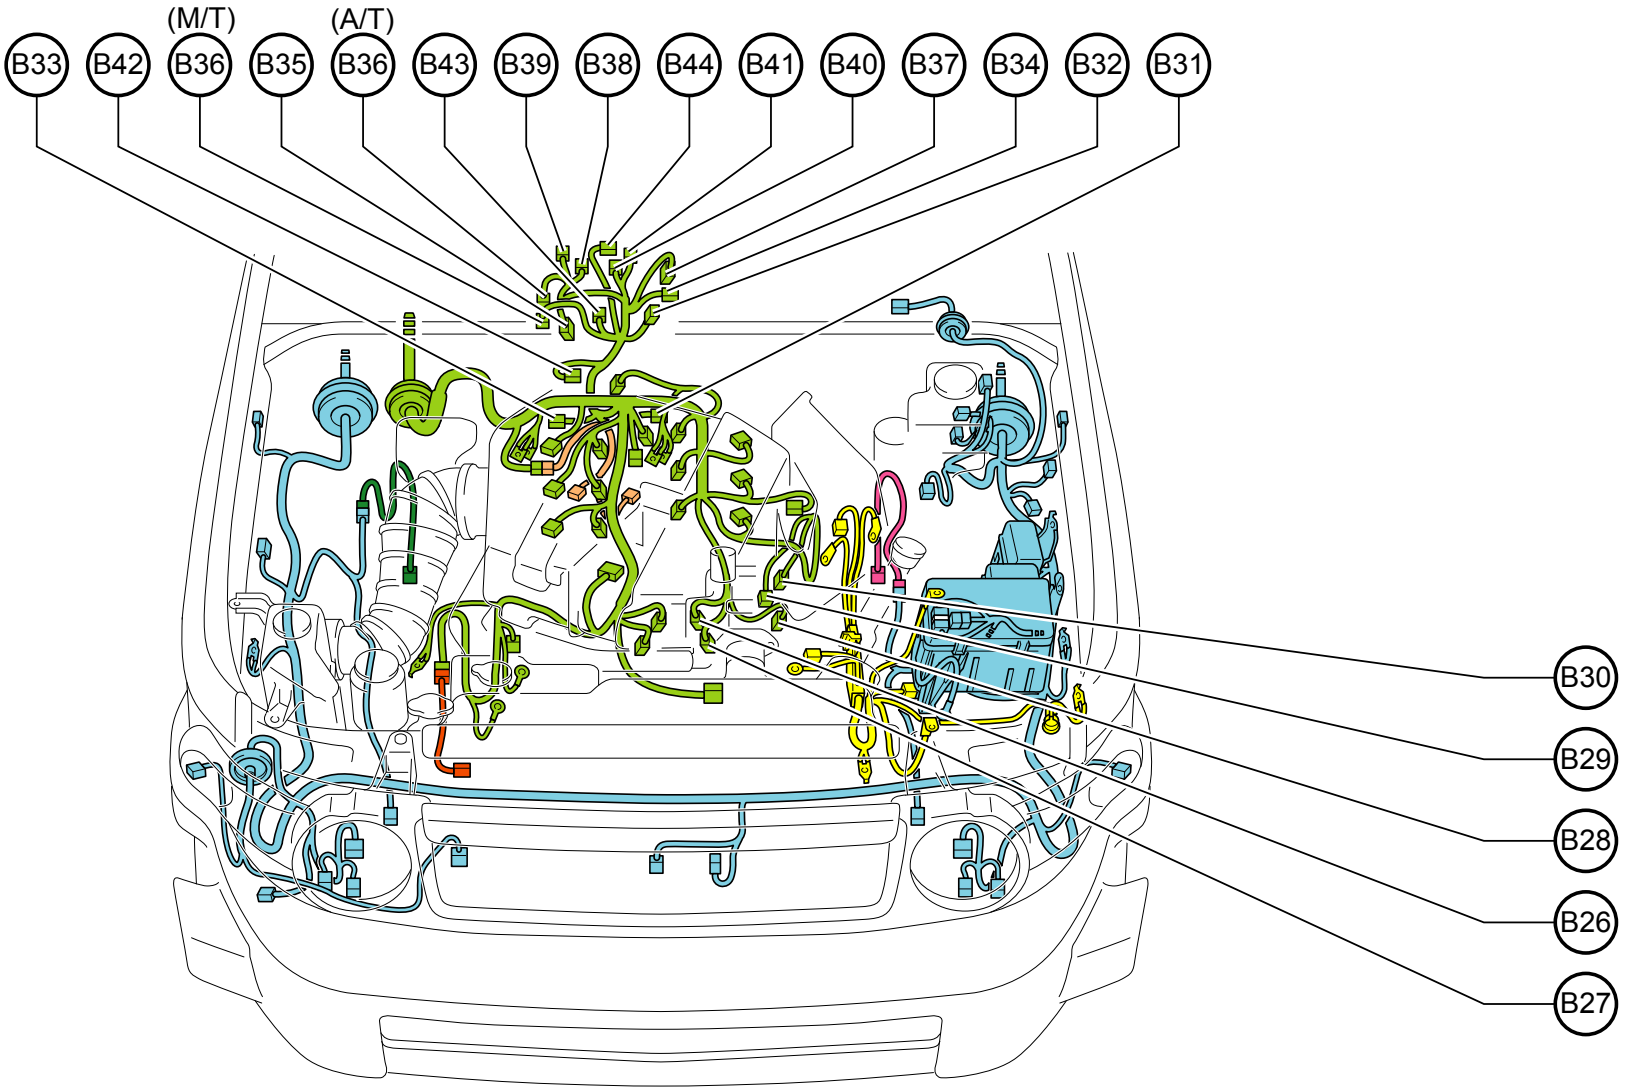


B 27
Black

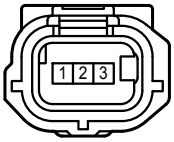

B 28
Gray



B 29
Black

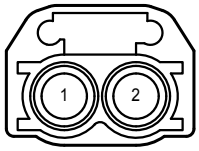


B 30
Gray



B 31
Dark Gray



B 32
Black

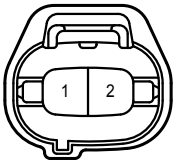


B 33
Dark Gray



B 34
Dark Gray




B 35
Gray

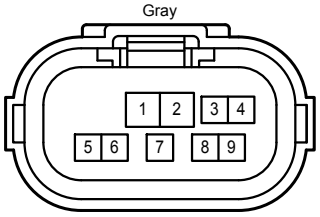


B 36
Dark Gray




B 37
Gray

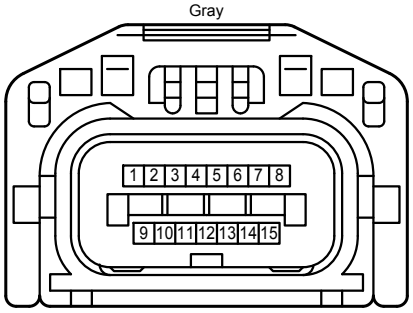


B 38
Black

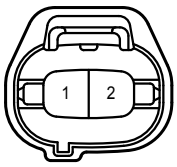


B 39
Blue

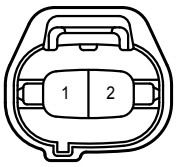


B 40
Blue

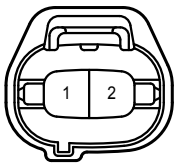


B 41
Gray

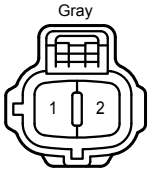

B 42
Gray

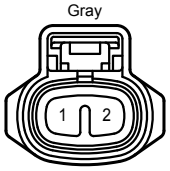

B 43
Blue

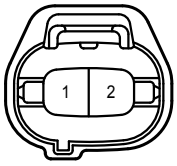

B 44
Black

