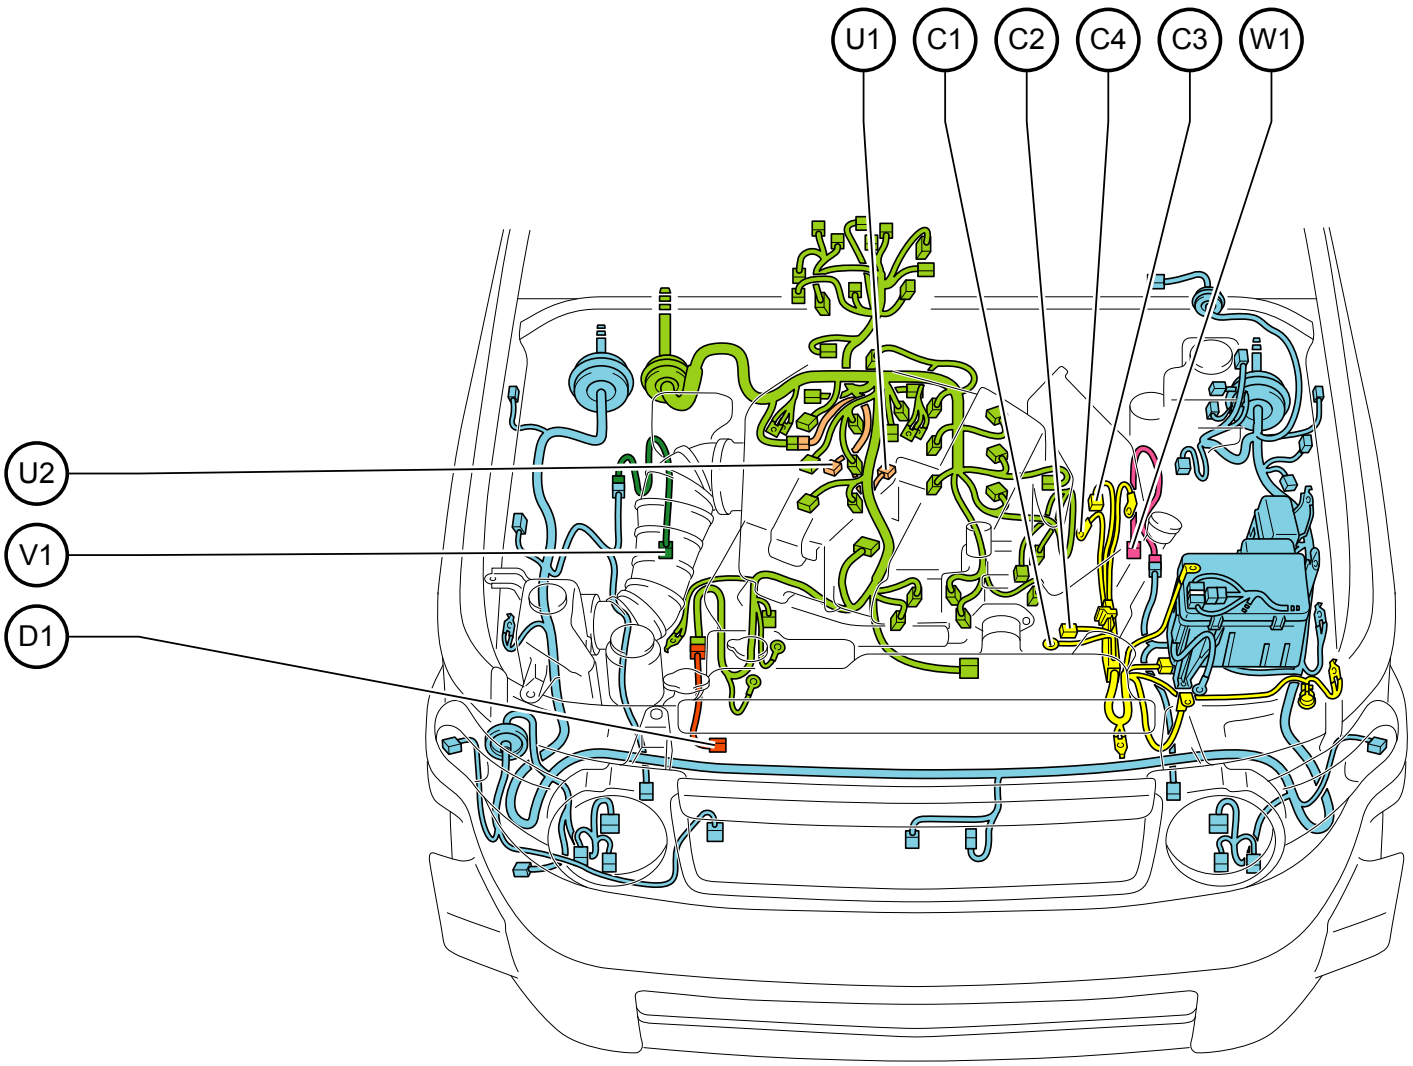

U1
C1
C2
C4
C3
W1
U2
V1
D1

C 1 Alternator
C 2 Alternator
C 3 Starter
C 4 Starter


D 1 ADD Actuator Assembly

U 1 Knock Control Sensor (Bank 2)
U 2 Knock Control Sensor (Bank 1)

V 1 Speed Sensor (Front RH)

W 1 Speed Sensor (Front LH)

C 1



C 2

Black




C 3

Black




C 4




D 1

Black

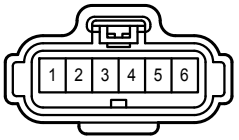


U 1

Black



U 2

Black



V 1

Black



W 1

Black

