



B33
B9
B18
B32
B31
B5
B6
B10
B7
B11
B20
B21
B23
B24
B25
B28
B14
B29
B30

B 5 Ignition Coil (No.5)
B 6 Ignition Coil (No.3)
B 7 Ignition Coil (No.1)
B 9 Fuel Injector (No.5)
B 10 Fuel Injector (No.3)
B 11 Fuel Injector (No.1)
B 14 Throttle Body Assembly
B 18 Fuel Injector (No.6)
B 20 Ignition Coil (No.6)
B 21 Fuel Injector (No.4)
B 23 Ignition Coil (No.4)
B 24 Ignition Coil (No.2)
B 25 Fuel Injector (No.2)
B 28 Engine Oil Pressure SW
B 29 Crankshaft Position Sensor
B 30 A/C Compressor
B 31 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
B 32 Transmission Revolution Sensor (Turbine)
B 33 Air Fuel Ratio Sensor (Bank 1 Sensor 1)


B5
Black

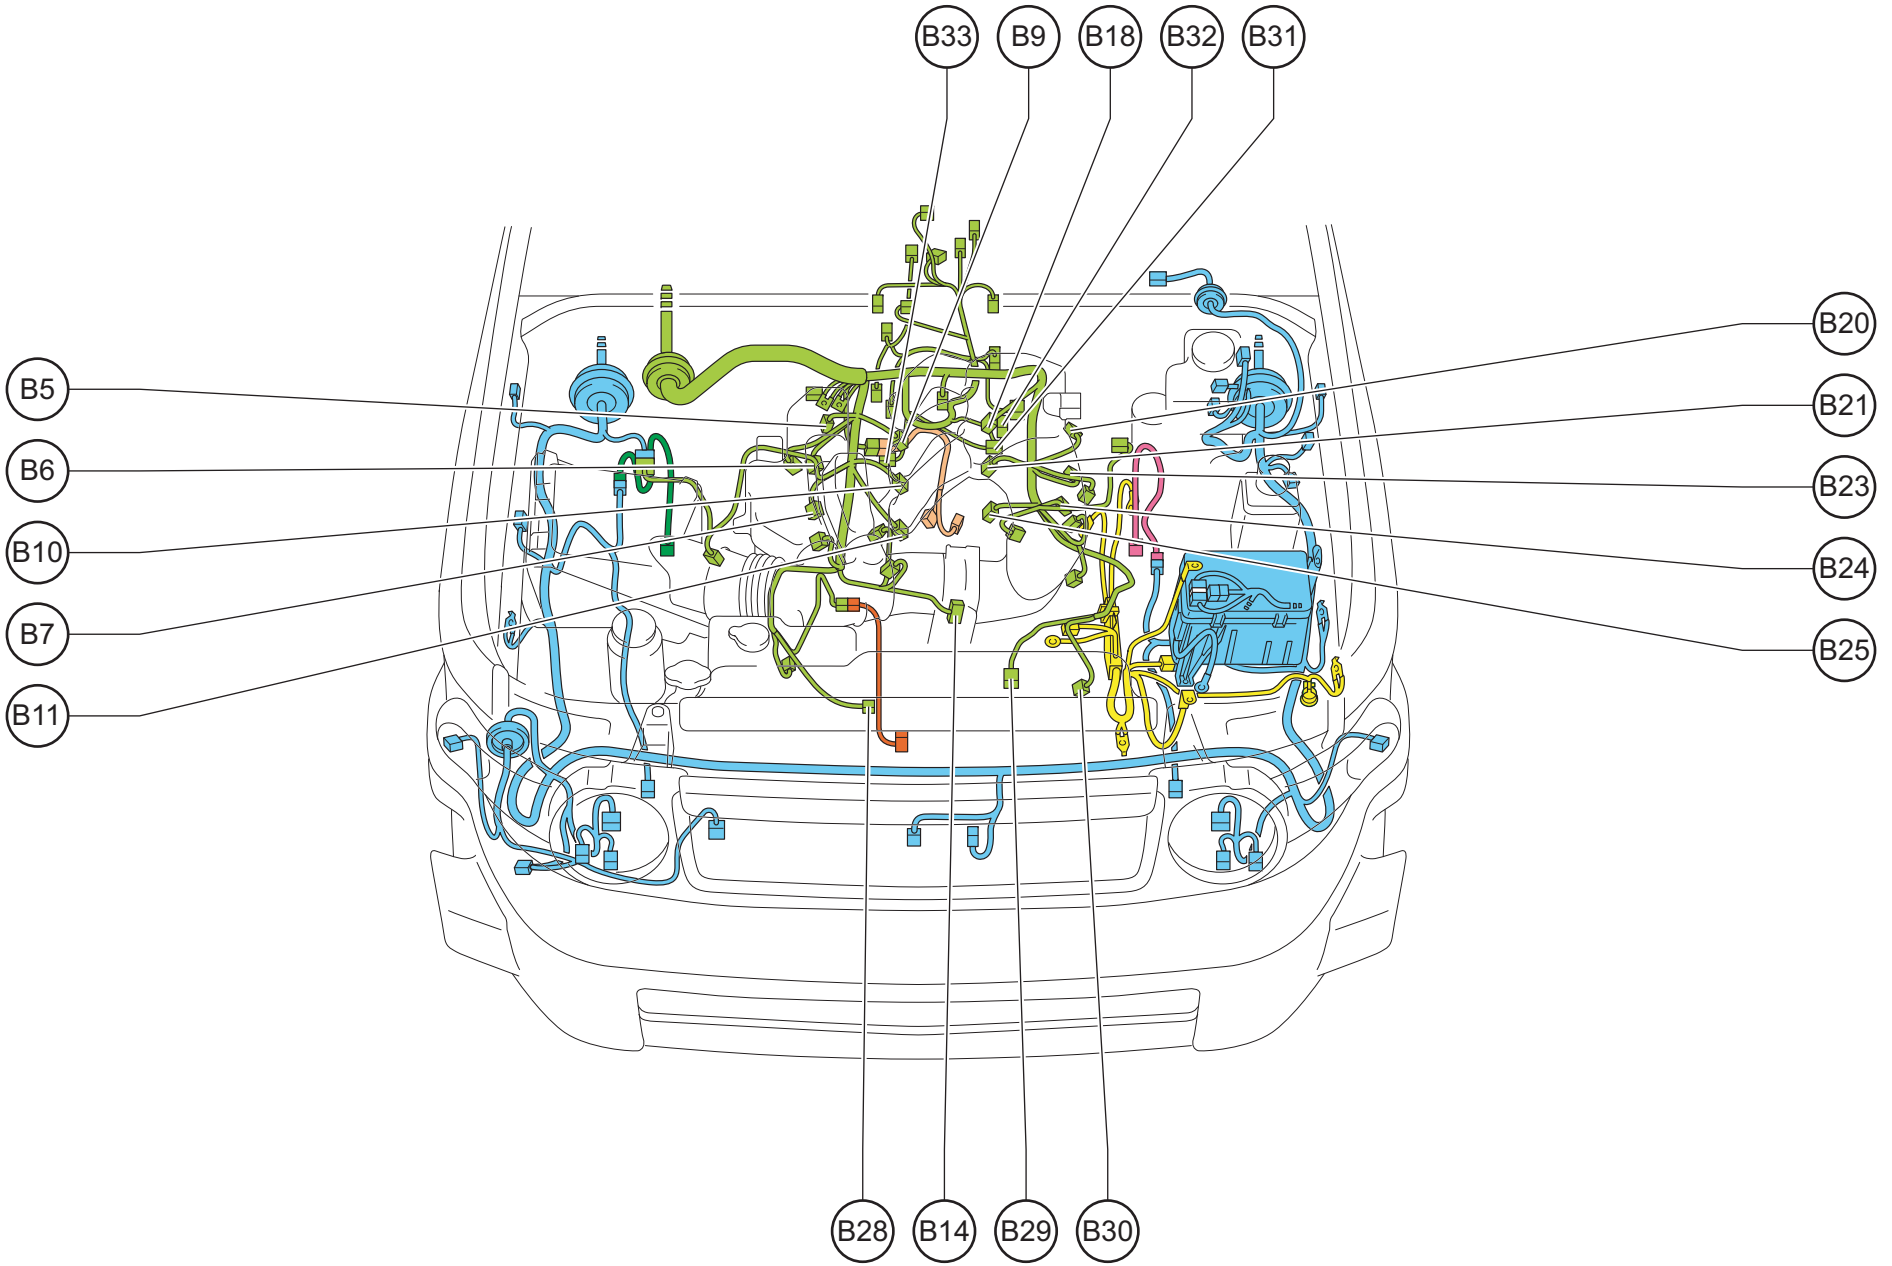


B6
Black




B7
Black




B9
Gray




B10
Gray




B11
Gray




B14
Black

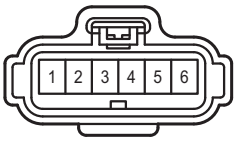


B18
Gray




B20
Black




B21
Gray




B23
Black



B24
Black




B25
Gray



B28
Gray



B29
Black

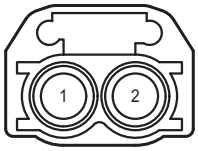


B30
Gray



B31
Dark Gray



B32
Black

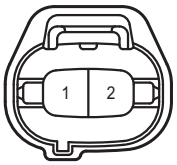

B33
Dark Gray

