

(*2)
(*2)
(*1)
B38
B54
B42
B39
B43
B40
B41
B34
B37
B34
(*1)
B54
B52
B65
B57
B67
B51
B55
B61
B59
B53
B68
B58
B56
B62
B64
B63


* 1:A/T
* 2:M/T

B 34 Heated Oxygen Sensor (Bank 2 Sensor 2)
B 37 ECT Solenoid
B 38 Transmission Revolution Sensor (ECT)
B 39 Transfer Indicator SW (4WD Position)
B 40 Transfer Indicator SW (L4 Position)
B 41 Transfer Indicator SW (Neutral Position)
B 42 Back-Up Lamp SW
B 43 Transfer Indicator SW (Center Diff.)
B 51 Air Flow Meter
B 52 Water Temp. Sensor
B 53 VSV (Purge)
B 54 Heated Oxygen Sensor (Bank 1 Sensor 2)
B 55 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
B 56 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
B 57 VVT Sensor (Bank 1 Exhaust Side)
B 58 VVT Sensor (Bank 2 Exhaust Side)
B 59 Power Steering Oil Pressure Switch
B 61 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
B 62 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
B 63 VVT Sensor (Bank 1 Intake Side)
B 64 VVT Sensor (Bank 2 Intake Side)
B 65 Park/Neutral Position SW
B 67 Air Switching Valve (Bank 1)
B 68 Air Switching Valve (Bank 2)


B34
Dark Gray

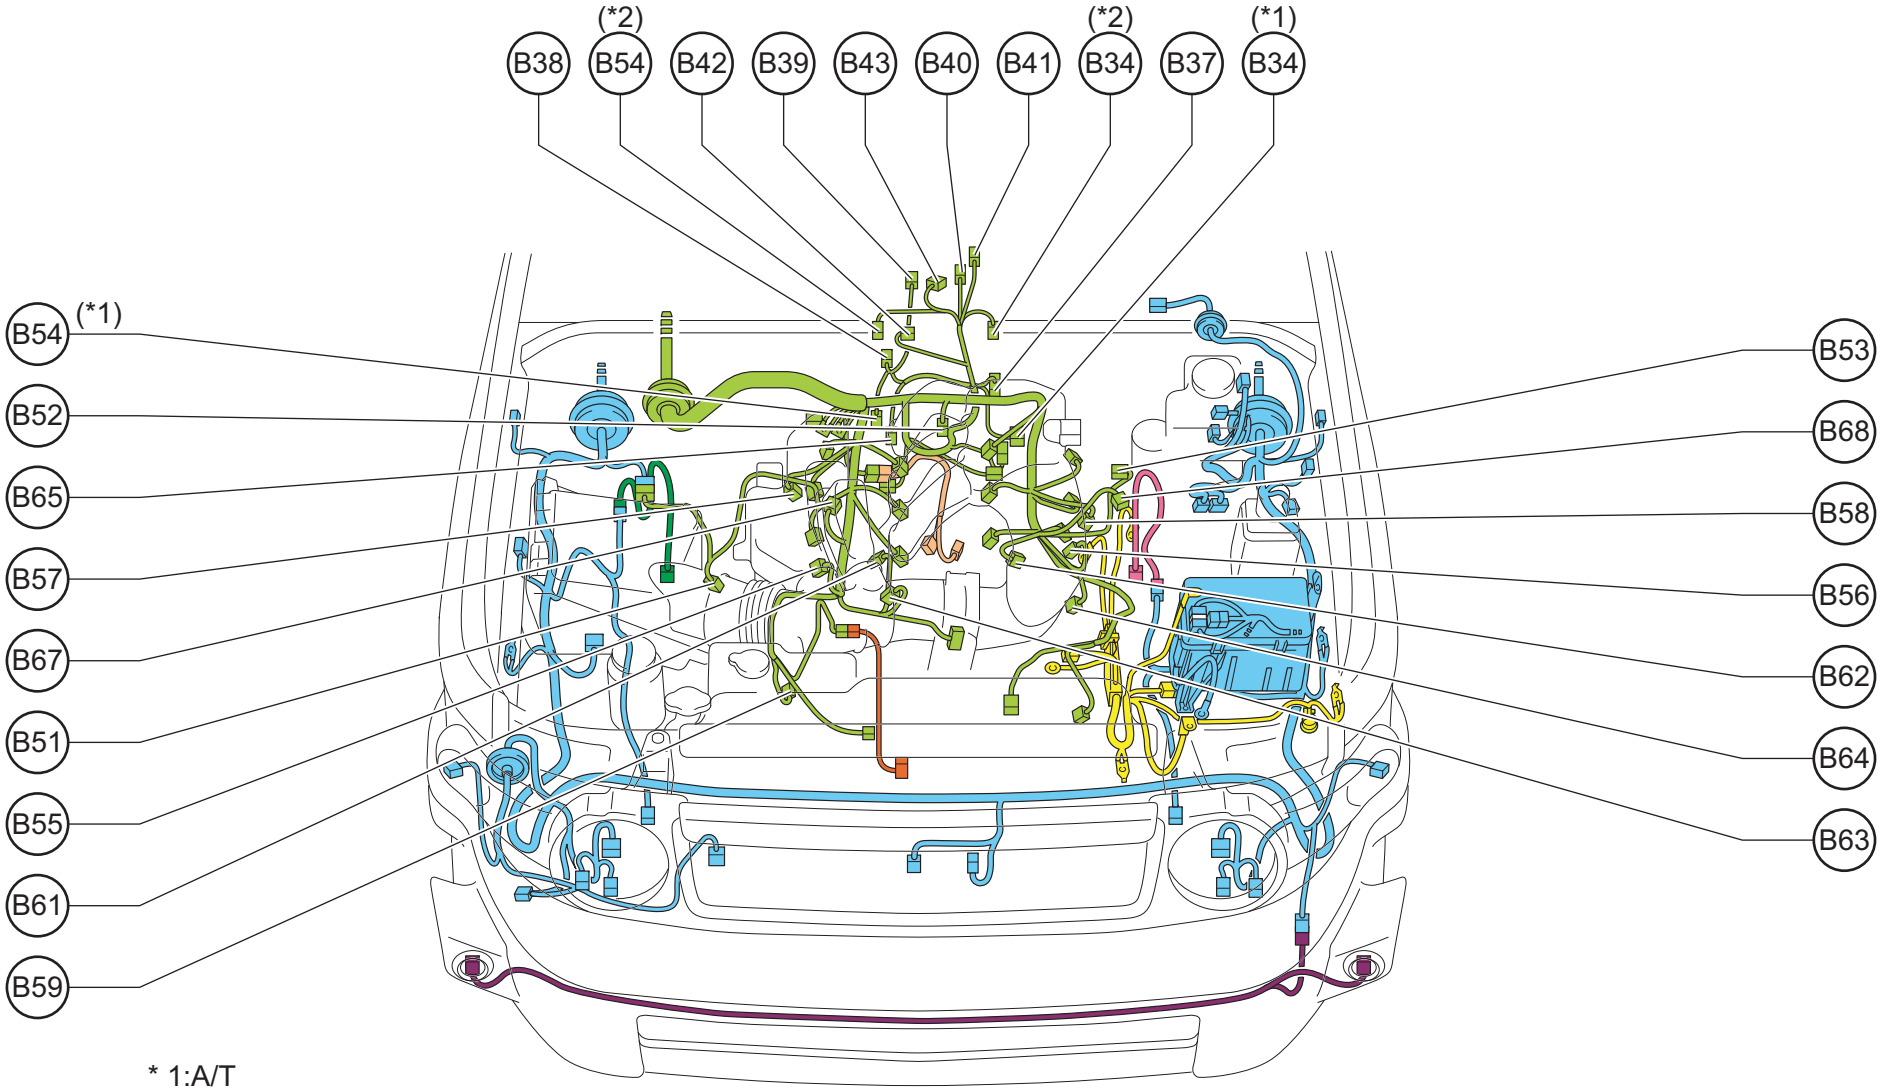


B37
Gray

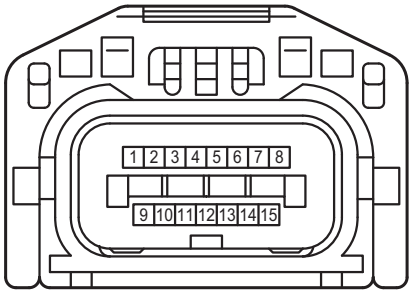


B38
Black

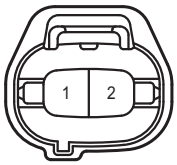


B39
Blue

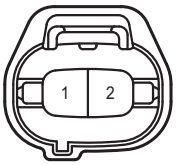


B40
Blue

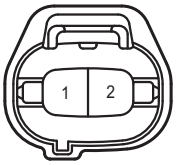


B41
Gray

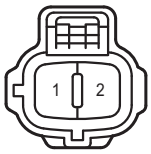

B42
Gray

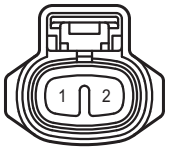

B43
Blue

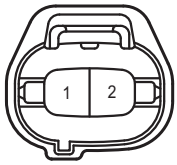


B51
Black



B52
Black



B53
Black

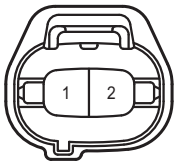

B54
Dark Gray



B55
Black



B56
Black



B57
Black



B58
Black



B59
Gray



B61
Black



B62
Black




B63
Black



B64
Black



B65
Gray

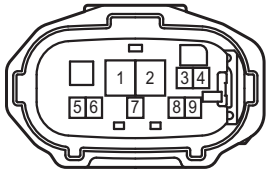

B67
Black



B68
Black

