

B39
B40
B41
B52
B37
B34
B38
B54
B65
B57
B51
B55
B61
B53
B58
B56
B62
B64
B59
B63
B33

B 33 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
B 34 Heated Oxygen Sensor (Bank 2 Sensor 2)
B 37 ECT Solenoid
B 38 Transmission Revolution Sensor (ECT)
B 39 Transfer Indicator SW (4WD Position)
B 40 Transfer Indicator SW (L4 Position)
B 41 Transfer Indicator SW (Neutral Position)
B 51 Air Flow Meter
B 52 Water Temp. Sensor
B 53 VSV (Purge)
B 54 Heated Oxygen Sensor (Bank 1 Sensor 2)
B 55 Camshaft Timing Oil Control Valve (Bank 1 Exhaust Side)
B 56 Camshaft Timing Oil Control Valve (Bank 2 Exhaust Side)
B 57 VVT Sensor (Bank 1 Exhaust Side)
B 58 VVT Sensor (Bank 2 Exhaust Side)
B 59 Power Steering Oil Pressure Switch
B 61 Camshaft Timing Oil Control Valve (Bank 1 Intake Side)
B 62 Camshaft Timing Oil Control Valve (Bank 2 Intake Side)
B 63 VVT Sensor (Bank 1 Intake Side)
B 64 VVT Sensor (Bank 2 Intake Side)
B 65 Park/Neutral Position SW


B33
Dark Gray

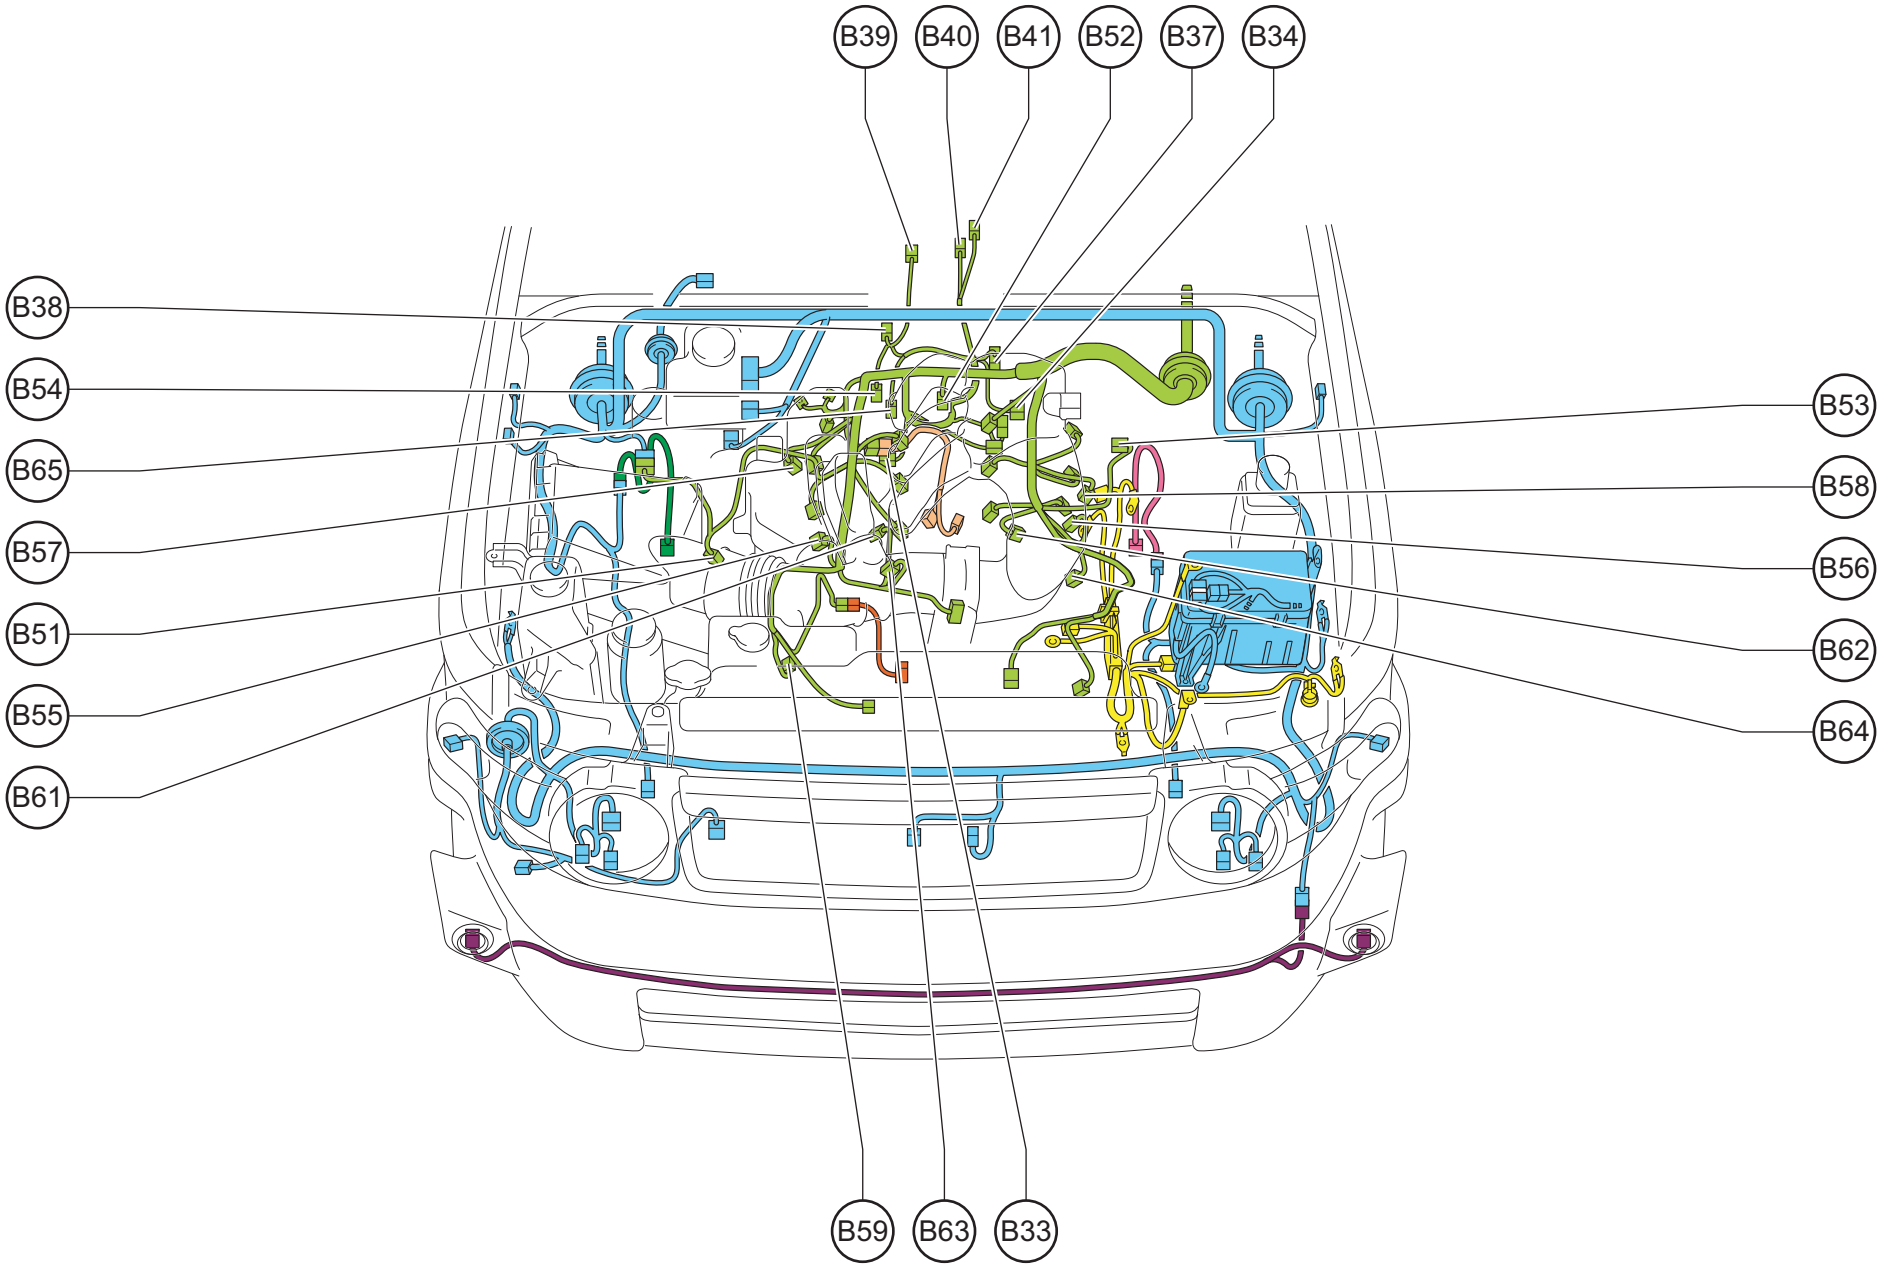


B34
Dark Gray




B37
Gray

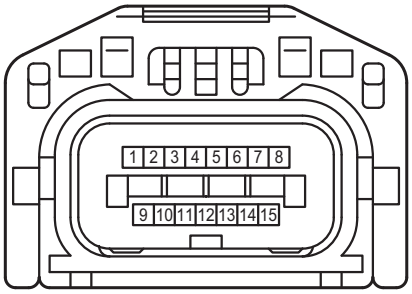


B38
Black

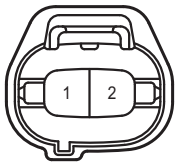


B39
Blue

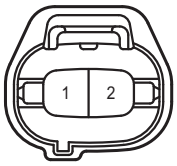

B40
Blue

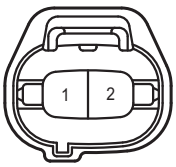

B41
Gray

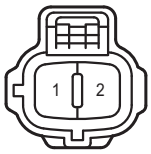


B51
Black



B52
Black



B53
Black

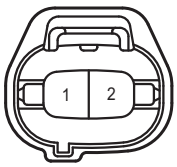

B54
Dark Gray



B55
Black



B56
Black



B57
Black



B58
Black



B59
Gray



B61
Black



B62
Black



B63
Black



B64
Black



B65
Gray

