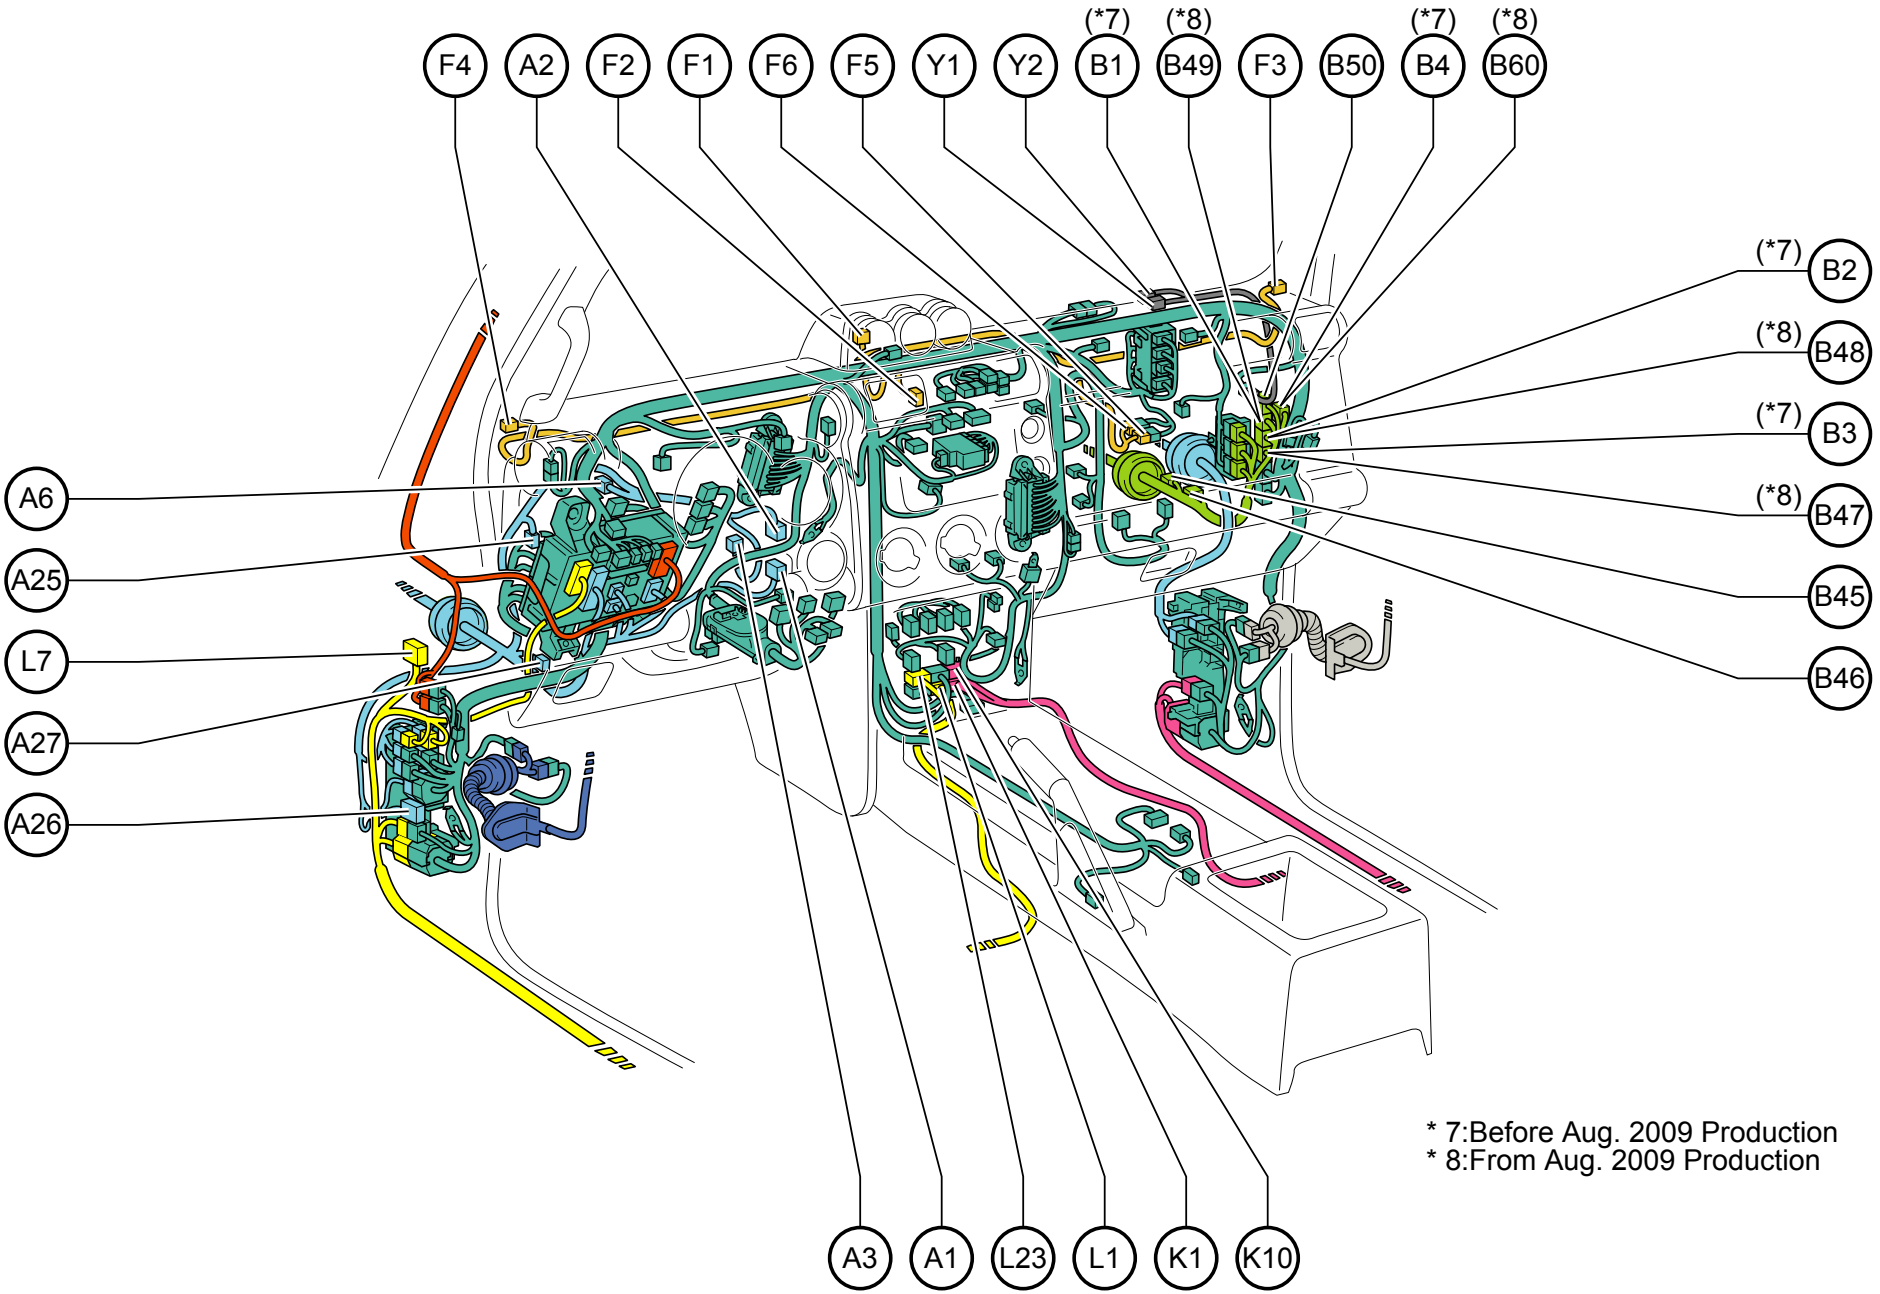

F4
A2
F2
F1
F6
F5
Y1
Y2
(*7)
B1
(*8)
B49
F3
B50
(*7)
B4
(*8)
B60
(*7)
B2
(*8)
B48
(*7)
B3
(*8)
B47
B45
B46
A6
A25
L7
A27
A26
A3
A1
L23
L1
K1
K10
* 7:Before Aug. 2009 Production
* 8:From Aug. 2009 Production

A 1 Ignition SW
A 2 Accelerator Position Sensor
A 3 Stop Lamp SW
A 6 VSC Warning Buzzer
A 25 Cruise Control Clutch SW
A 26 Option Connector (Driving Lamp SW)
A 27 Junction Connector

B 1 Engine ECU
B 2 Engine ECU
B 3 Engine ECU
B 4 4WD Control ECU
B 45 Junction Connector
B 46 Junction Connector
B 47 Engine ECU
B 48 Engine ECU
B 49 Engine ECU
B 50 Engine ECU
B 60 4WD Control ECU


F 1 Accessory Meter
F 2 Clock
F 3 Tweeter (Front RH)
F 4 Tweeter (Front LH)
F 5 Junction Connector
F 6 Junction Connector

K 1 Airbag Sensor Assembly Center
K 10 Airbag Sensor Assembly Center


L 1 Airbag Sensor Assembly Center
L 7 4WD Control ECU (Rear Diff. Lock)
L 23 Airbag Sensor Assembly Center

Y 1 Airbag Squib (Front Passenger's Airbag Assembly)
Y 2 Airbag Squib (Front Passenger's Airbag Assembly)


A 1
White

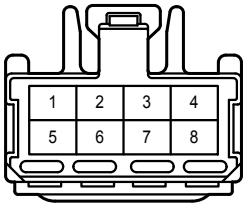


A 2
Black

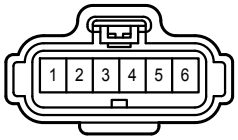


A 3
White

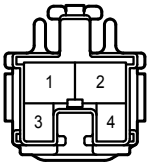


A 6
Black




A 25
White




A 26
White

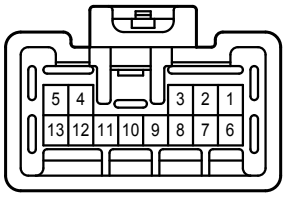


A 27
Black

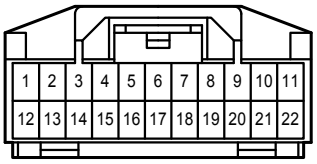


B 1
White

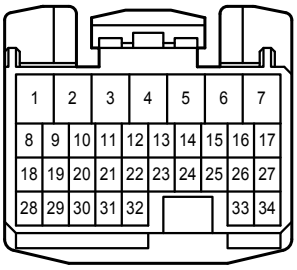


B 2
White

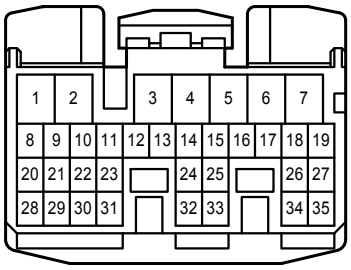


B 3
White

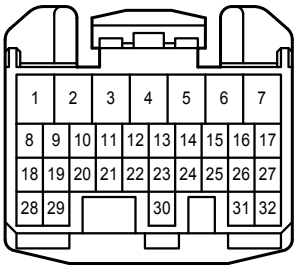


B 4
Black

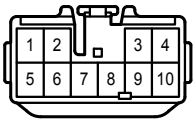


B 45
Blue

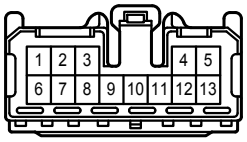


B 46
White

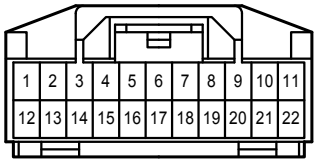


B 47
White

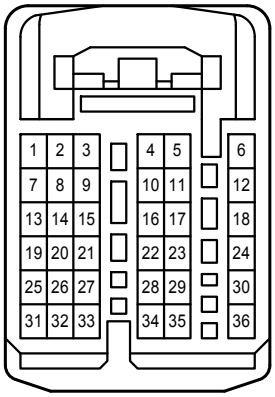


B 48
White

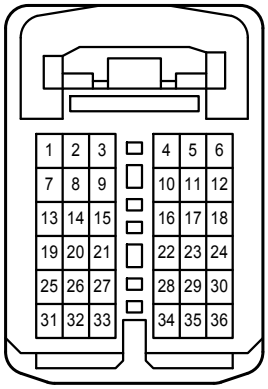


B 49
White

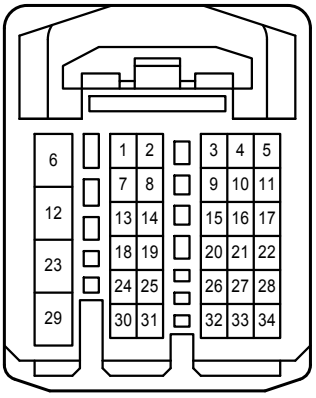

B 50
White

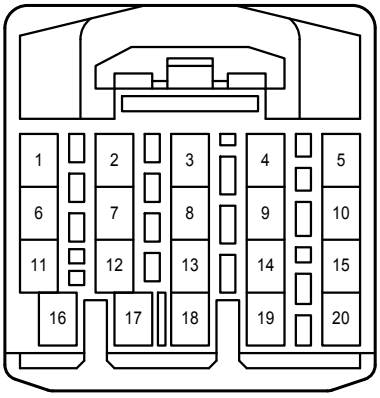


B 60
Black

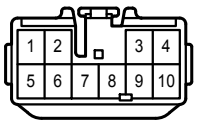


F 1
White




F 2
Black

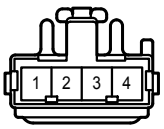


F 3
White

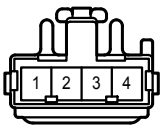


F 4
White

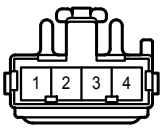


F 5
Blue

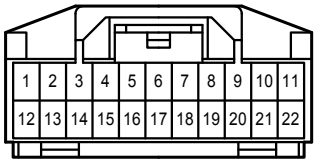


F 6
White

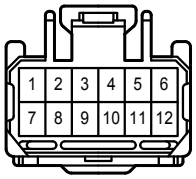


K 1
Yellow

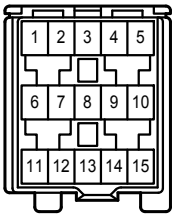


K 10
Yellow

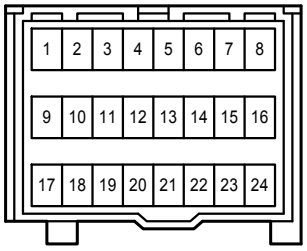


L 1
Yellow

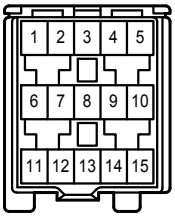


L 7
White

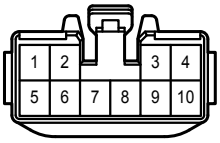

L 23
Yellow

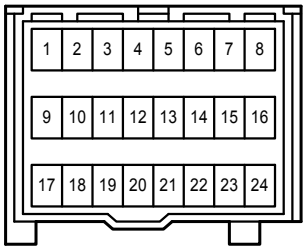

Y 1
Orange



Y 2
Black

