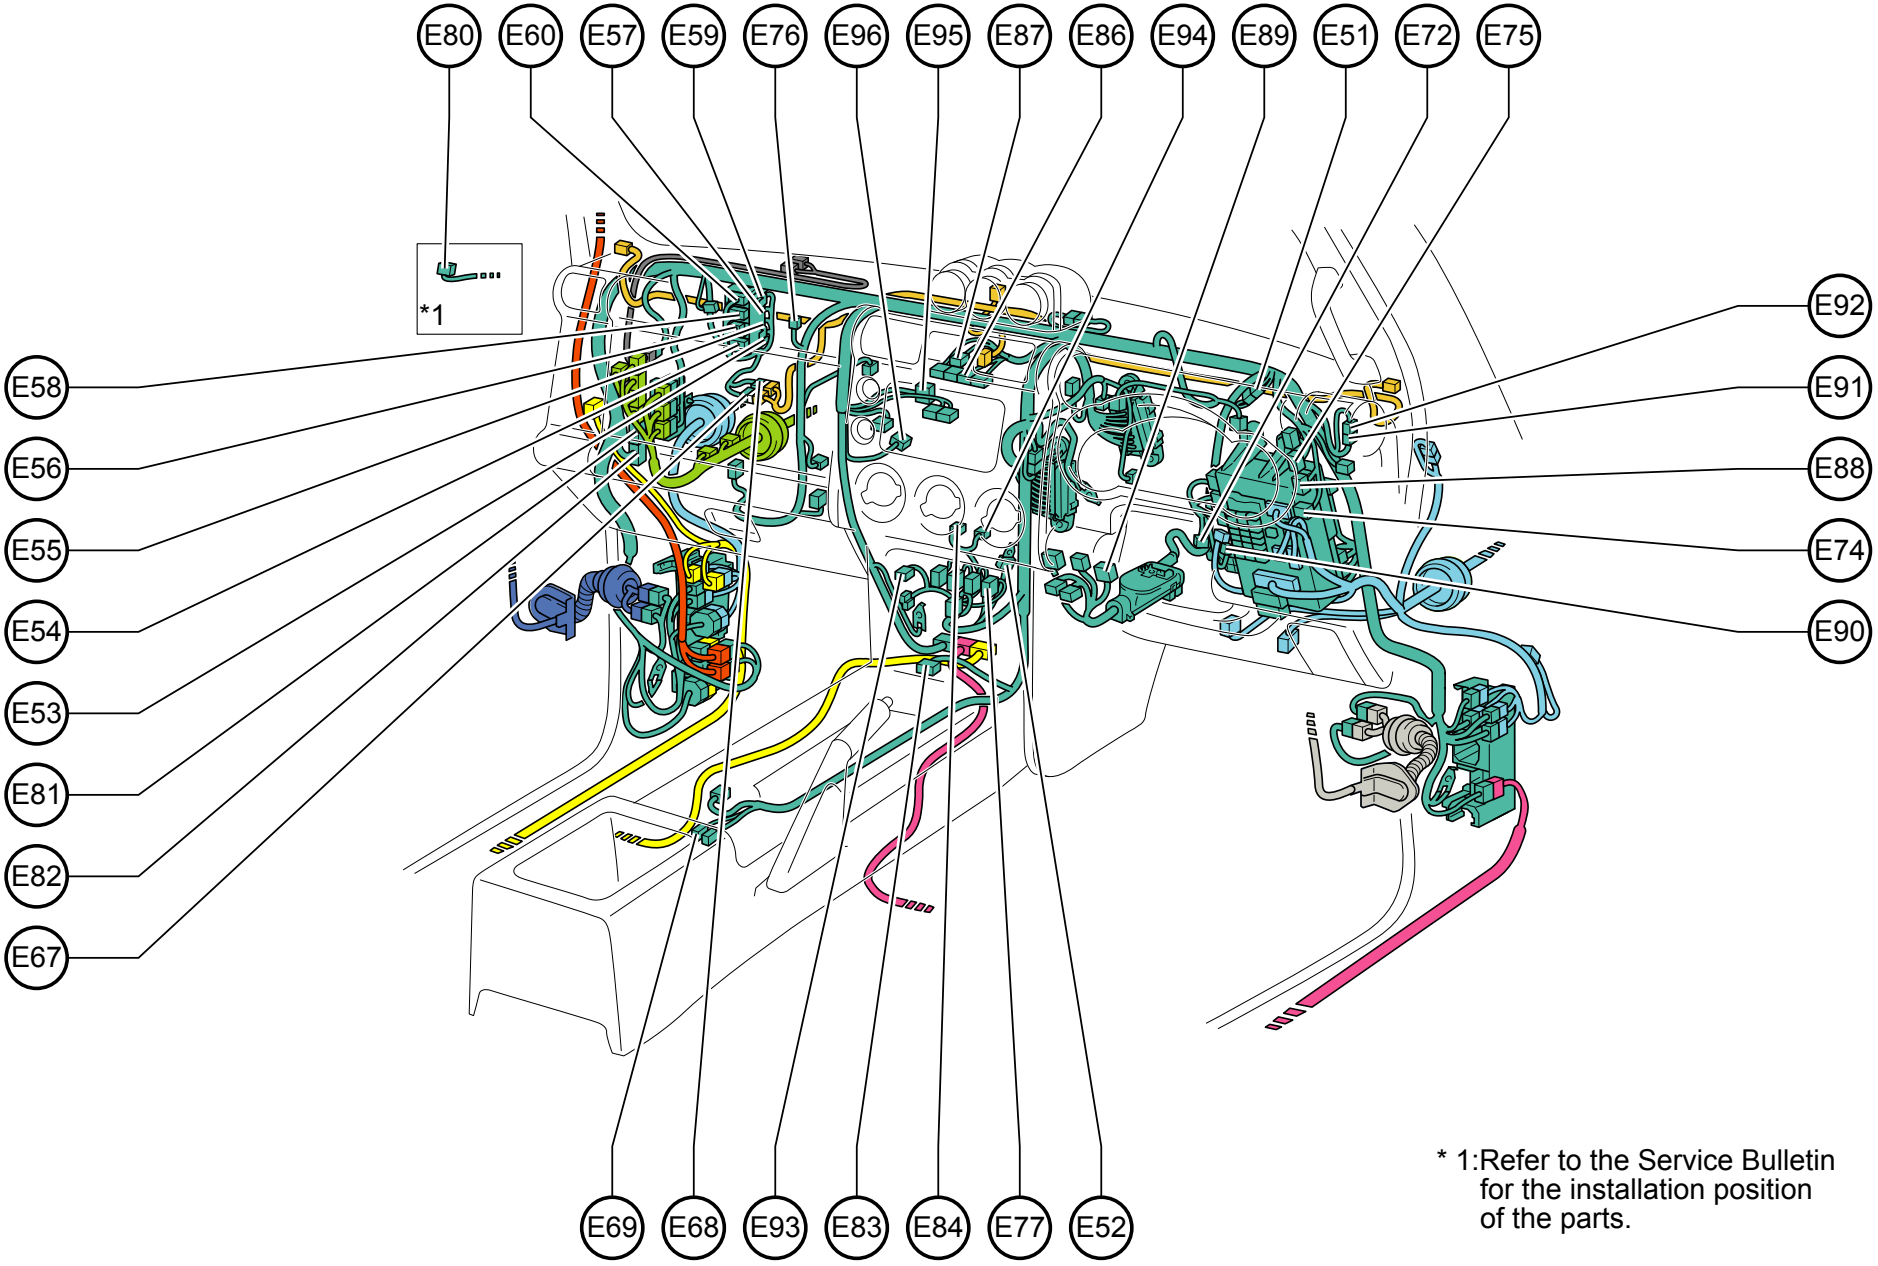
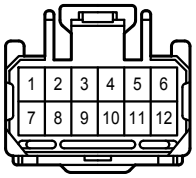


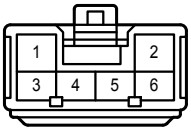

* 1:Refer to the Service Bulletin for the installation position of the parts.

E 51 Junction Connector
E 52 Junction Connector
E 53 Junction Connector
E 54 Junction Connector
E 55 Junction Connector
E 56 Junction Connector
E 57 Junction Connector
E 58 Junction Connector
E 59 Junction Connector
E 60 Junction Connector
E 67 Junction Connector
E 68 Junction Connector
E 69 A/T Shift Lever Illumination
E 72 Transponder Key Amplifier
E 74 Headlight Leveling Switch
E 75 Rear Fog Light Switch
E 76 Clearance Warning ECU
E 77 Traction Control Switch (VSC OFF)
E 80 Transponder Key ECU
E 81 Engine ECU
E 82 Engine ECU
E 83 Yaw Rate Sensor
E 84 Multi-Media Interface ECU
E 86 Radio Receiver Assembly
E 87 Radio Receiver Assembly
E 88 Light Control Rheostat
E 89 Headlamp Dimmer SW Assembly
E 90 Unlock Warning SW
E 91 Junction Connector
E 92 Junction Connector
E 93 No.1 Stereo Jack Adapter Assembly
E 94 Multi-Media Interface ECU
E 95 Junction Connector
E 96 Driving Support Switch Control ECU

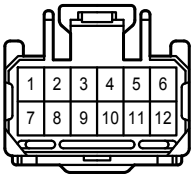
E 51
Black



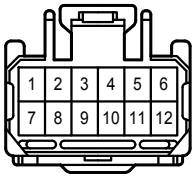

E 52
White



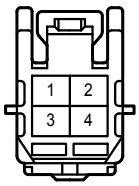

E 53
White



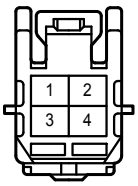

E 54
White



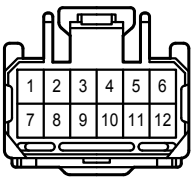

E 55
White



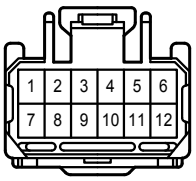

E 56
White



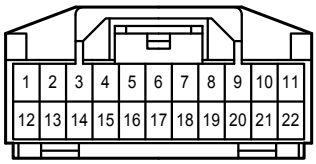

E 57
Black



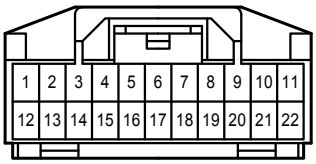

E 58
Black



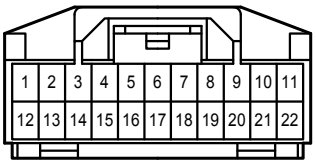

E 59
Blue



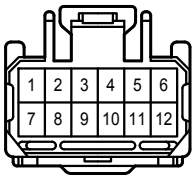

E 60
Blue




E 67
Blue



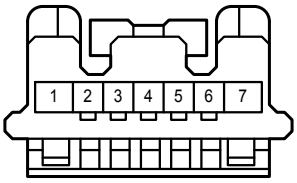

E 68
White



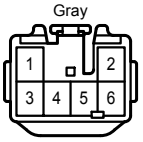

E 69
Black



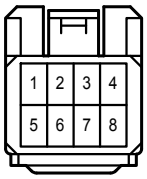

E 72
Black



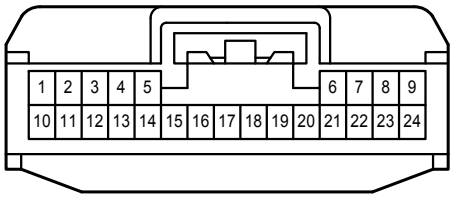

E 74
Gray





E 75
White



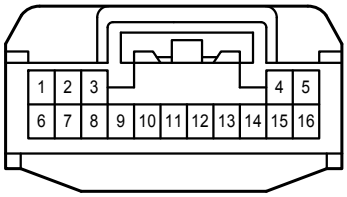

E 76
White



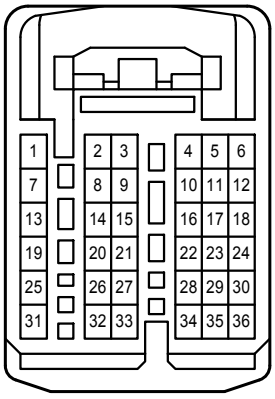

E 77
Blue



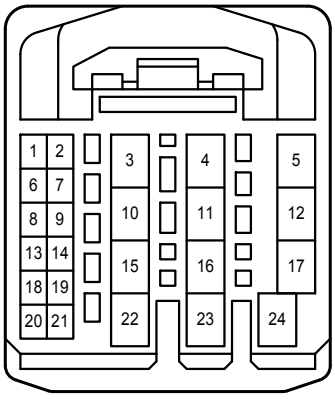

E 80
Black



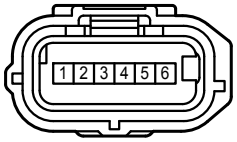

E 81
White




E 82
White



E 83
Black



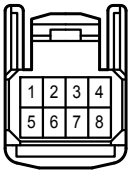

E 84
White



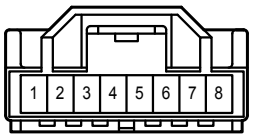

E 86
White



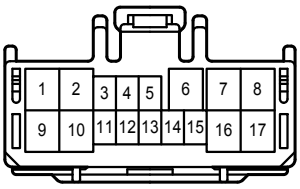

E 87
White





E 88
White



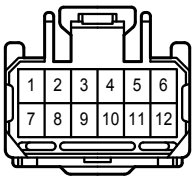

E 89
White



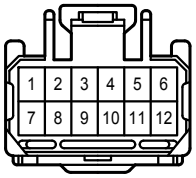

E 90
White



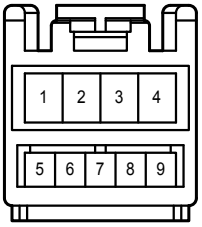

E 91
White



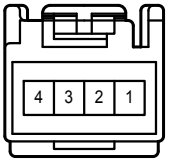

E 92
White



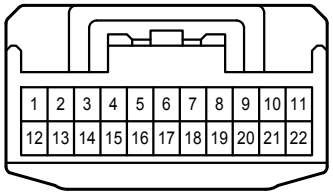

E 93
Black




E 94
Brown




E 95
Gray




E 96
Black

