



(IG)
20A
4WD/DIFF
3 1L
V (A/T)
9 BE1
V (A/T)
10 A (*6)
10 B (*7)
IG
B4(A), B60(B)
4WD Control ECU
4WD
GND
DM1
DM2
DL1
DL2
7 A (*6)
7 B (*7)
IND1
8 A (*6)
8 B (*7)
ADD
R–L (A/T)
GR (A/T)
R–L(A/T)
GR(M/T)
GR(*6)
GR(*7)
GR
13 BE2
4 BE3
11 BE2
GR (M/T)
GR (*6)
GR (*7)
GR
10
8
11
B46
Junction Connector
9
R–B (A/T)
W–B (A/T)
R (A/T)
B–W (A/T)
LG (A/T)
P–L (A/T)
GR (A/T)
GR (M/T)
1 BD1
2 BD1
3 BD1
4 BD1
6 BD1
B39
Transfer Indicator SW
(4WD Position)
DM1
DM2
Limit SW
DL1
DL2
ADD
Detection SW
GND
D1
ADD Actuator Assembly
M
W–B (A/T)
5 BD1
B43
Transfer Indicator SW
(Center Diff.)
W–B (M/T)
W–B (A/T)
W–B
W–B (*6)
W–B (*7)
B3
B6

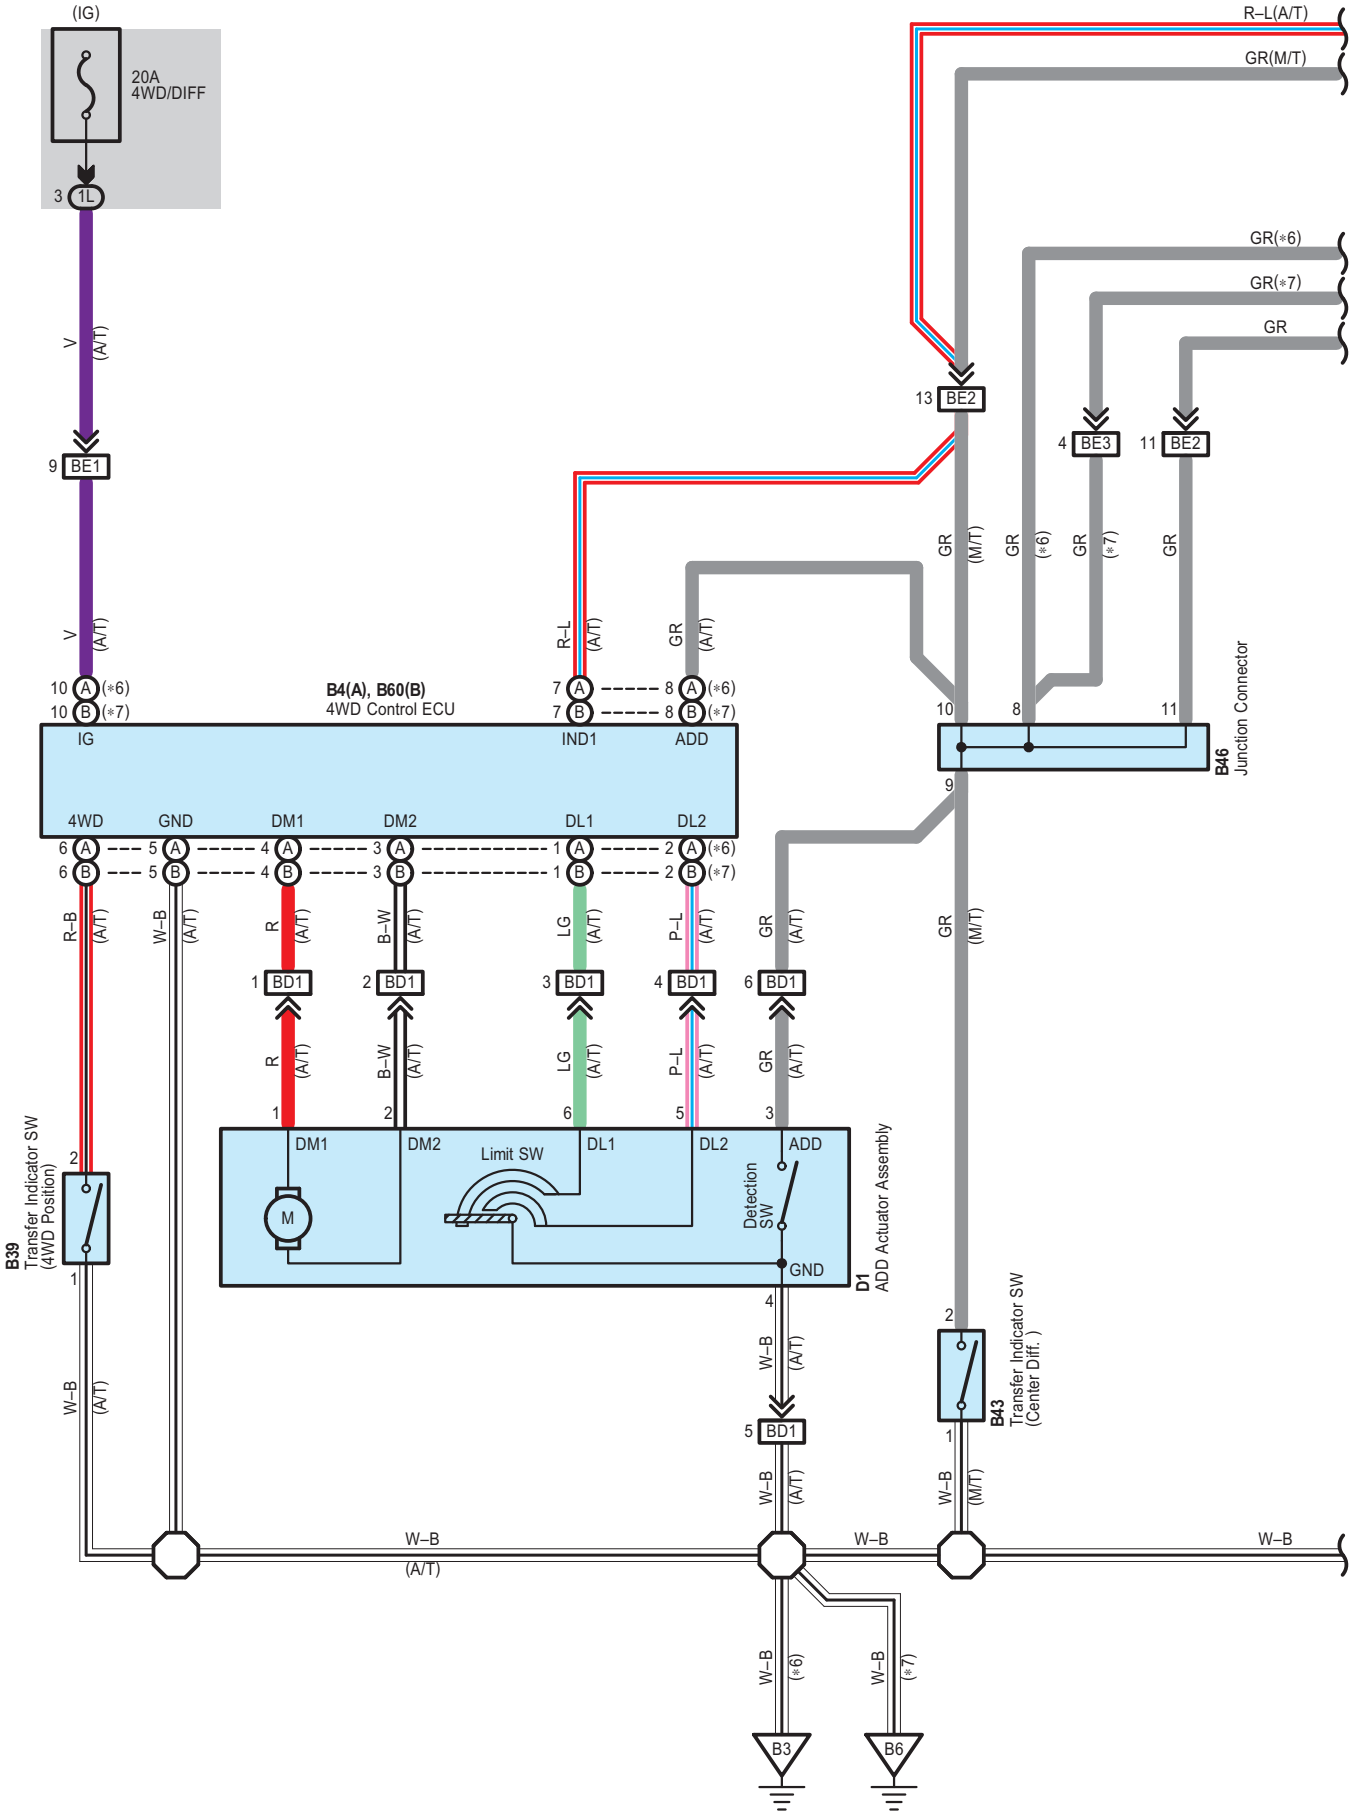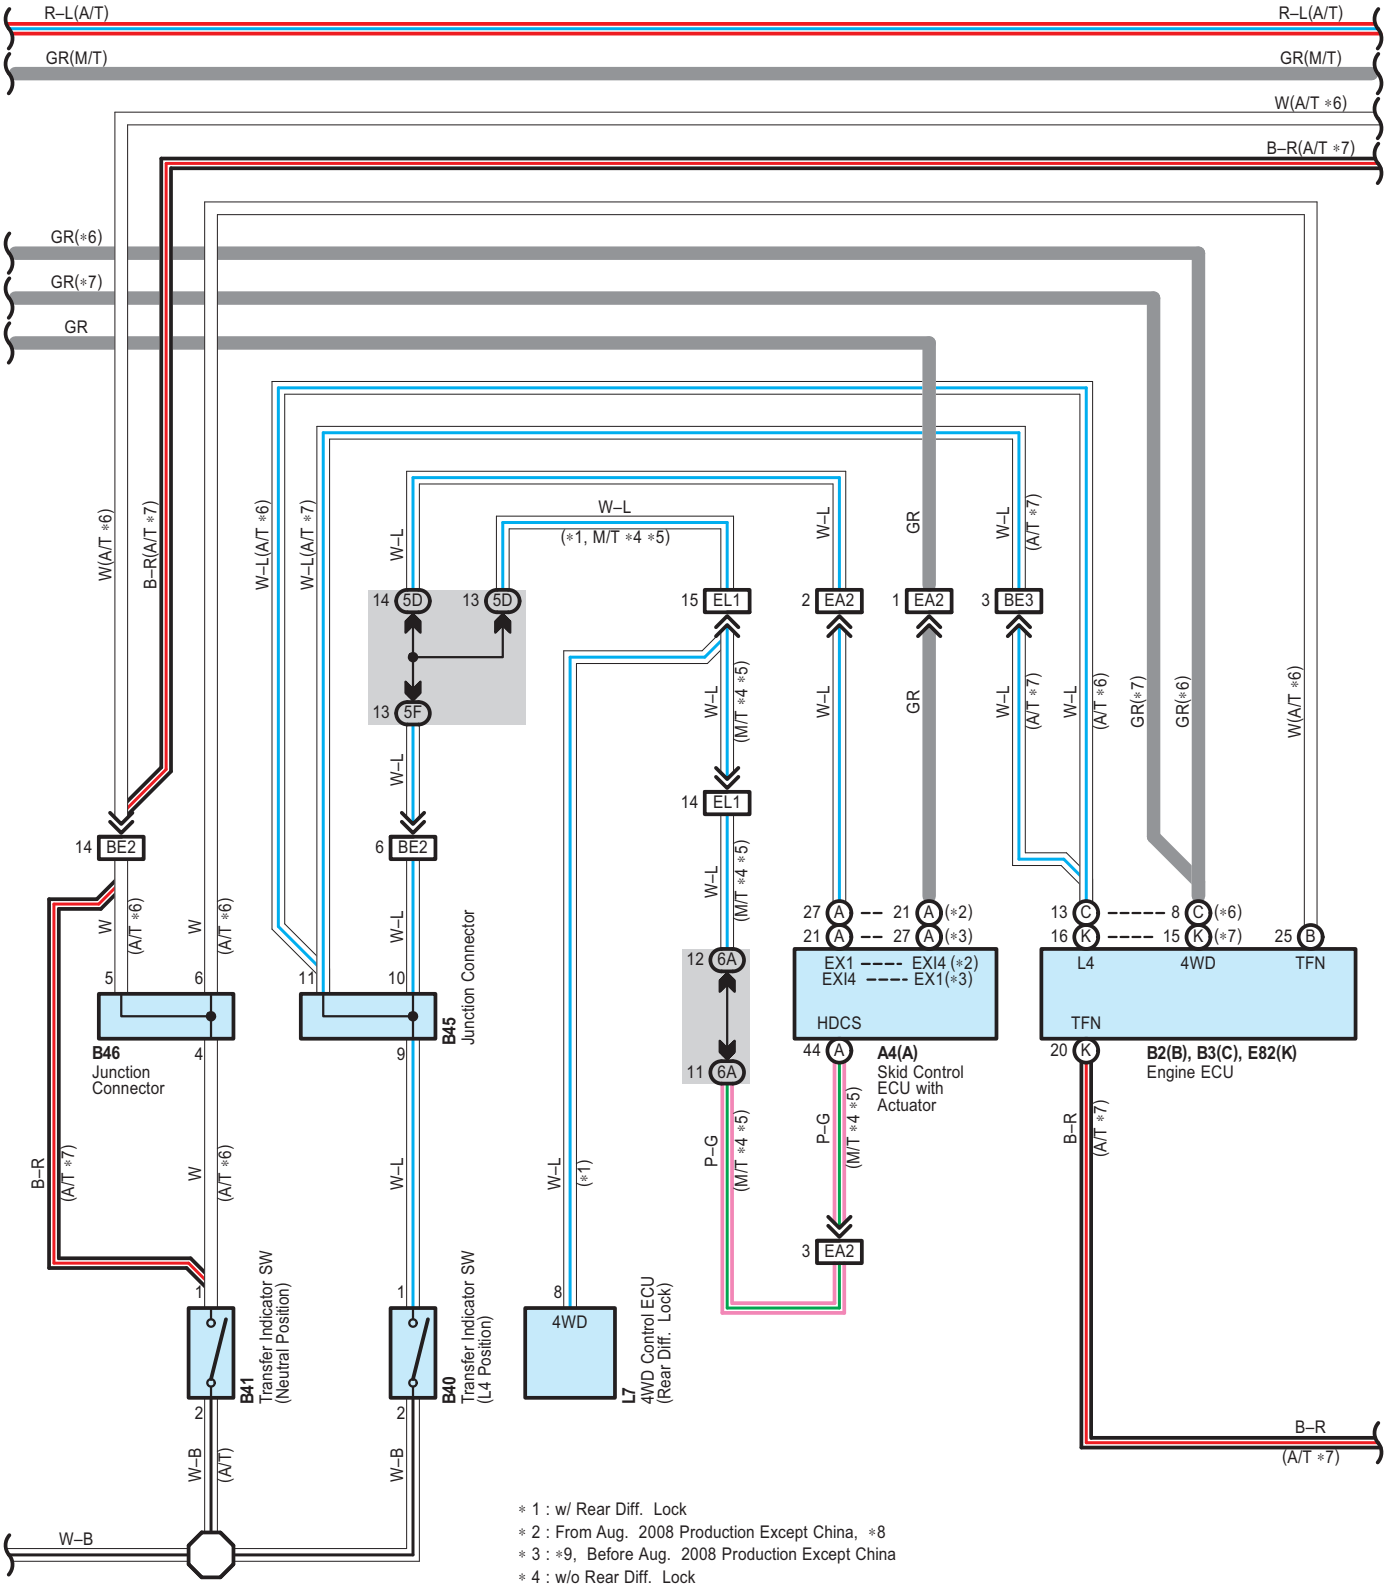


∗ 1 : w/ Rear Diff. Lock
∗ 2 : From Aug. 2008 Production Except China, ∗8
∗ 3 : ∗9, Before Aug. 2008 Production Except China
∗ 4 : w/o Rear Diff. Lock
∗ 5 : From Aug. 2008 Production
∗ 6 : Before Aug. 2009 Production
∗ 7 : From Aug. 2009 Production
∗ 8 : From Aug. 2009 Production China
∗ 9 : Before Aug. 2009 Production China

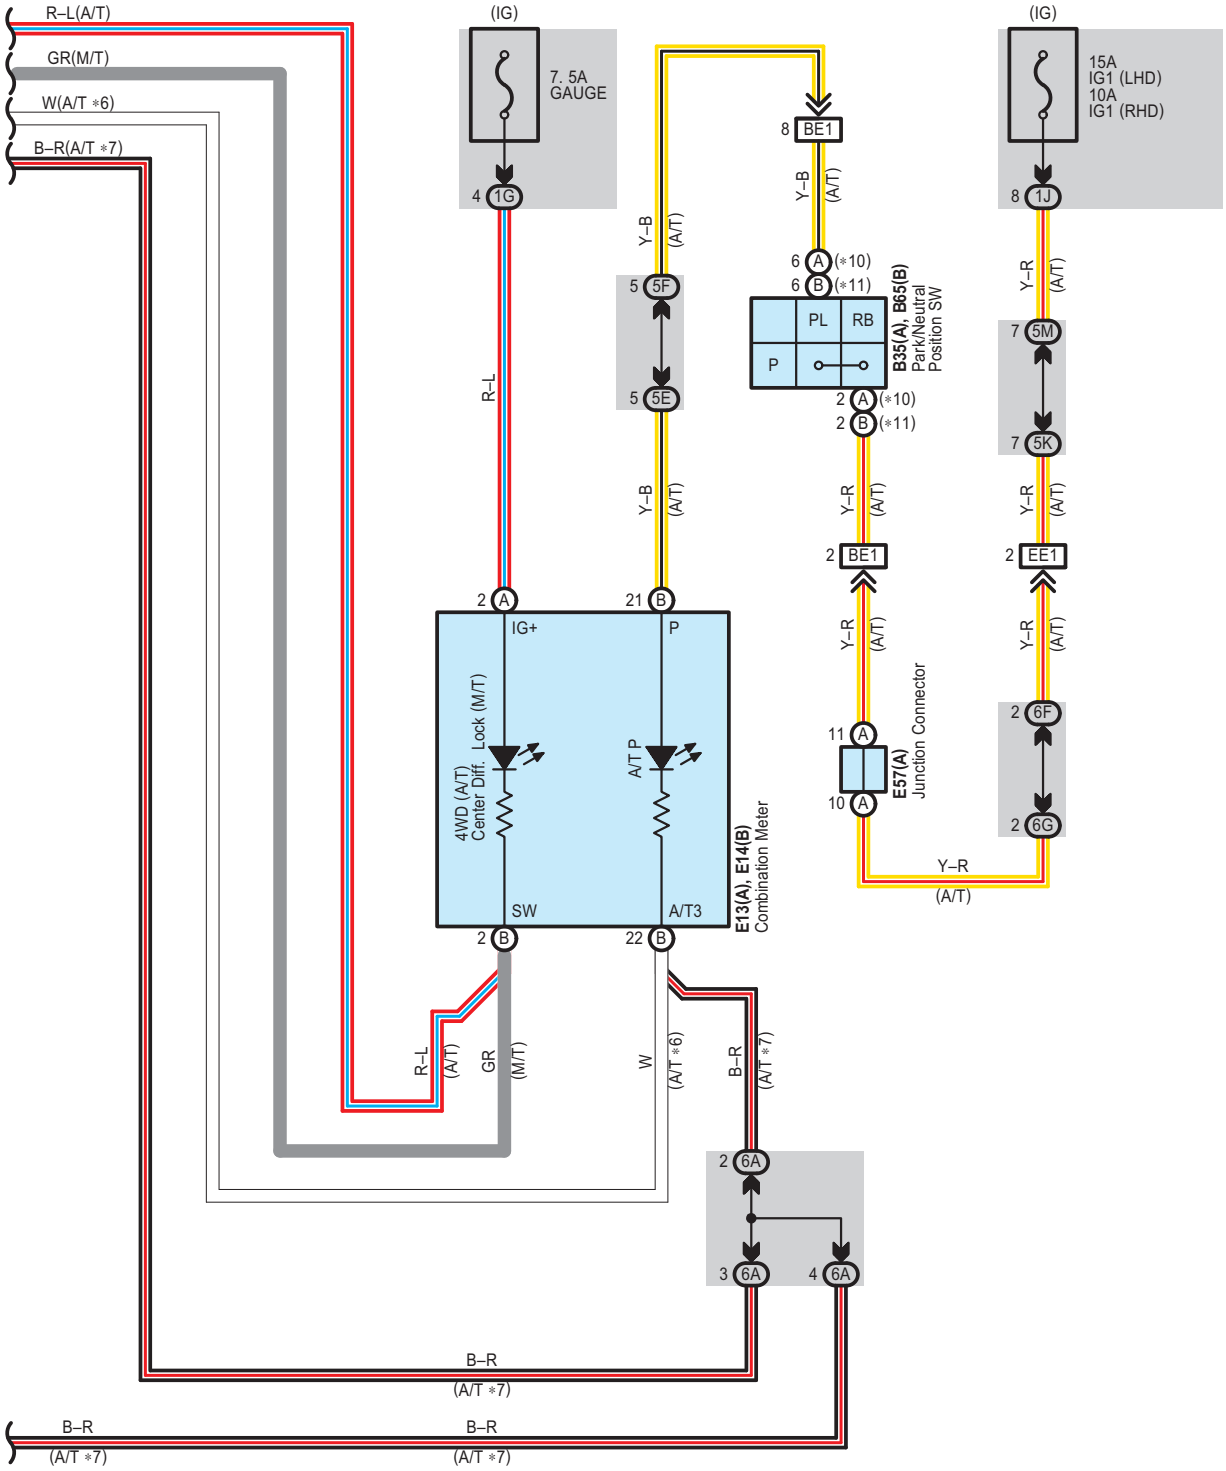


∗ 6 : Before Aug. 2009 Production
∗ 7 : From Aug. 2009 Production
∗10 : Before Aug. 2012 Production
∗11 : From Aug. 2012 Production


A4
Black

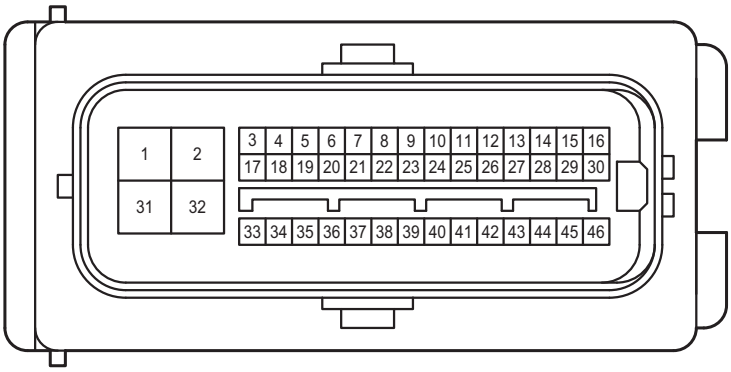


B2
White

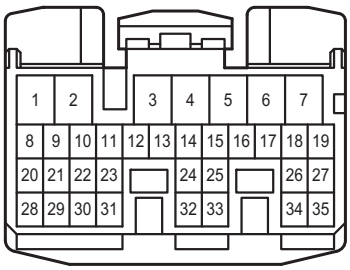


B3
White

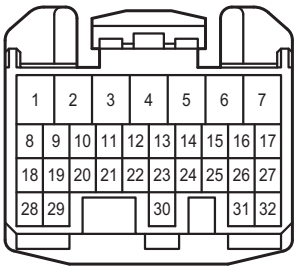


B4
Black

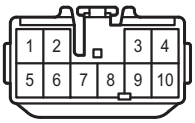


B35
Gray

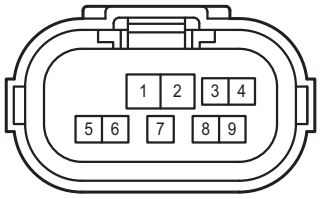


B39
Blue

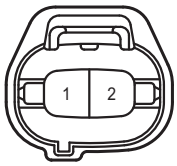


B40
Blue

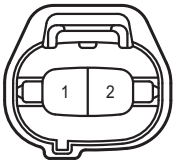


B41
Gray

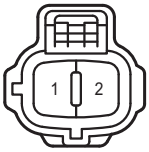


B43
Blue

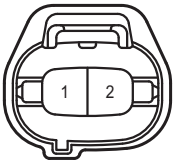


B45
Blue

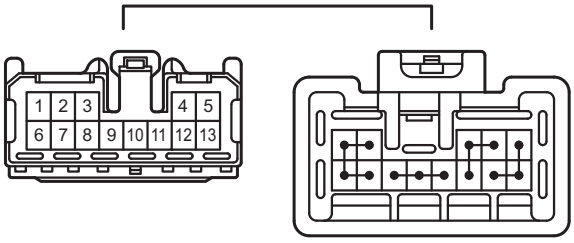


B46
White

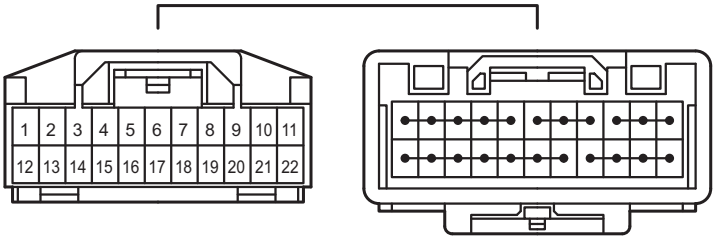


B60
Black

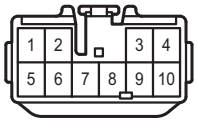


B65
Gray

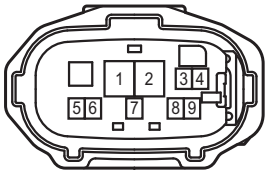


D1
Black

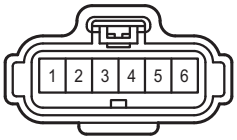


E13
White

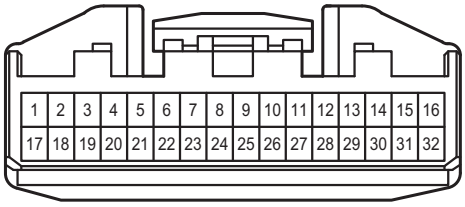


E14
White

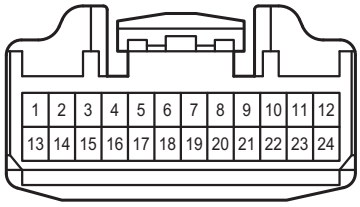


E57
Black

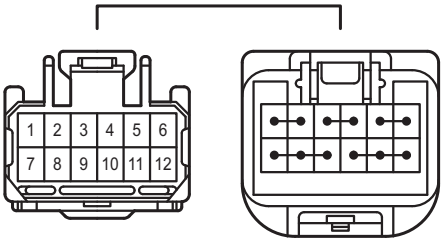


E82
White

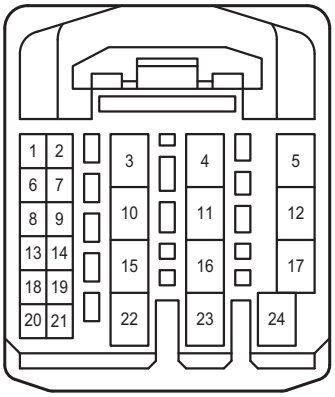


L7
White

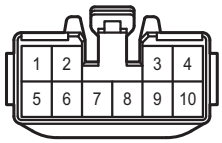


1 G
White

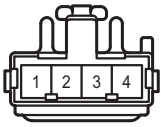


1 J
White

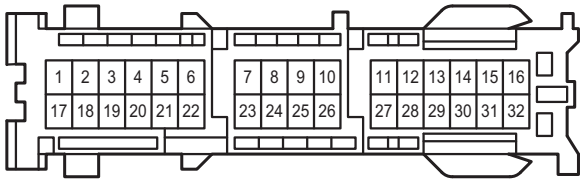


1 L
White

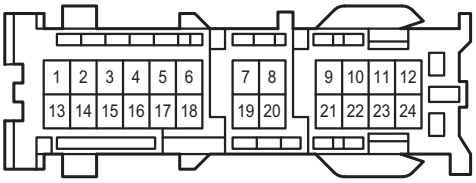


5 D
White




5 E
White




5 F
White




5 K
White




5 M
White




6 A
White




6 F
White




6 G
White




BD1
Gray

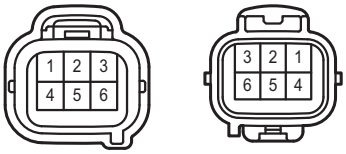


BE1
White

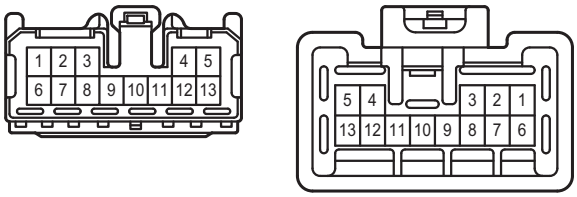


BE2
White

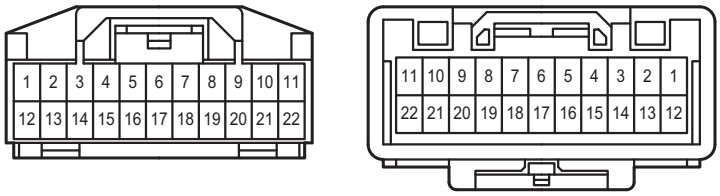


BE3
White

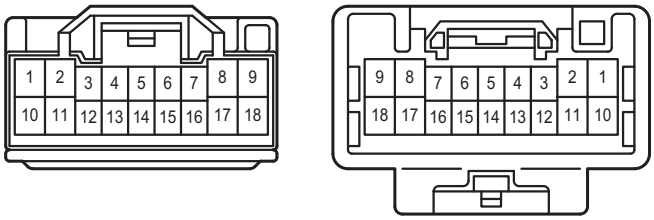


EA2
Gray

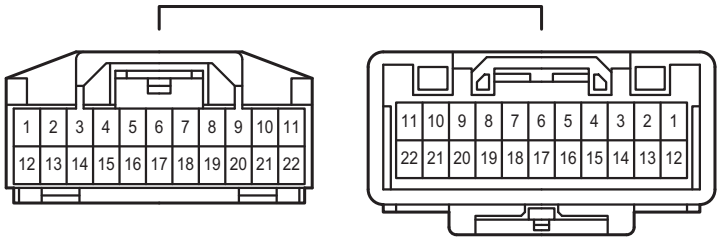

EE1
White

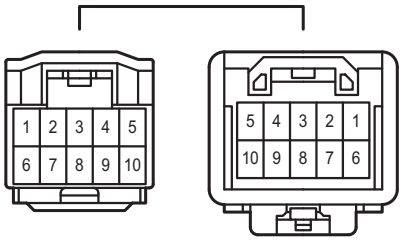

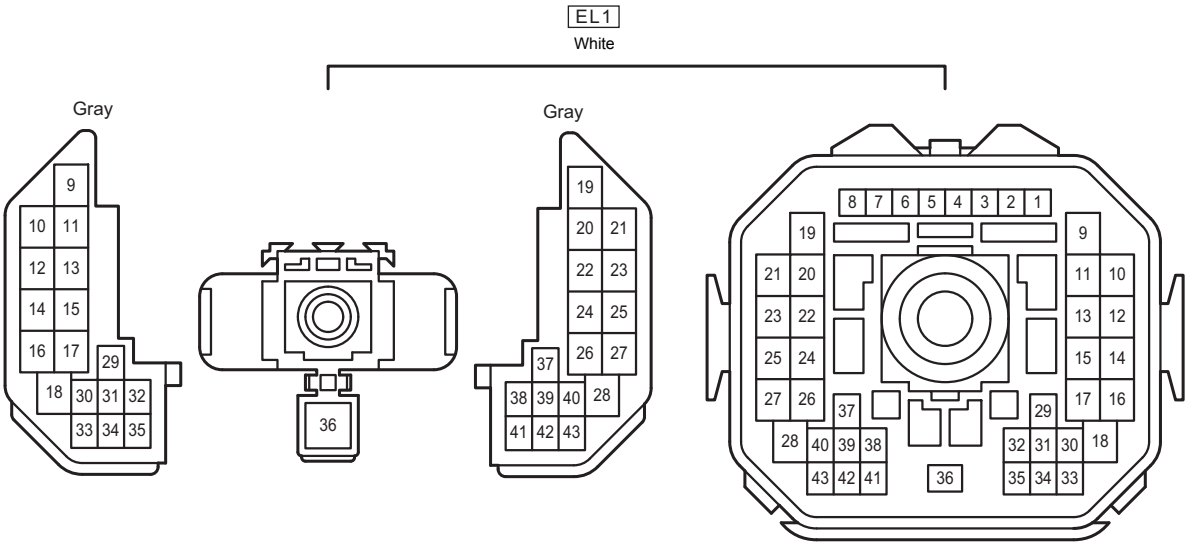
EL1
White
Gray
Gray
9
10 11
12 13
14 15
16 17
18 29
30 31 32
33 34 35
36
19
20 21
22 23
24 25
26 27
37
38 39 40 28
41 42 43
8 7 6 5 4 3 2 1
19
21 20
23 22
25 24
27 26
9
11 10
13 12
15 14
17 16
37
28 40 39 38
43 42 41
29
32 31 30 18
35 34 33
36