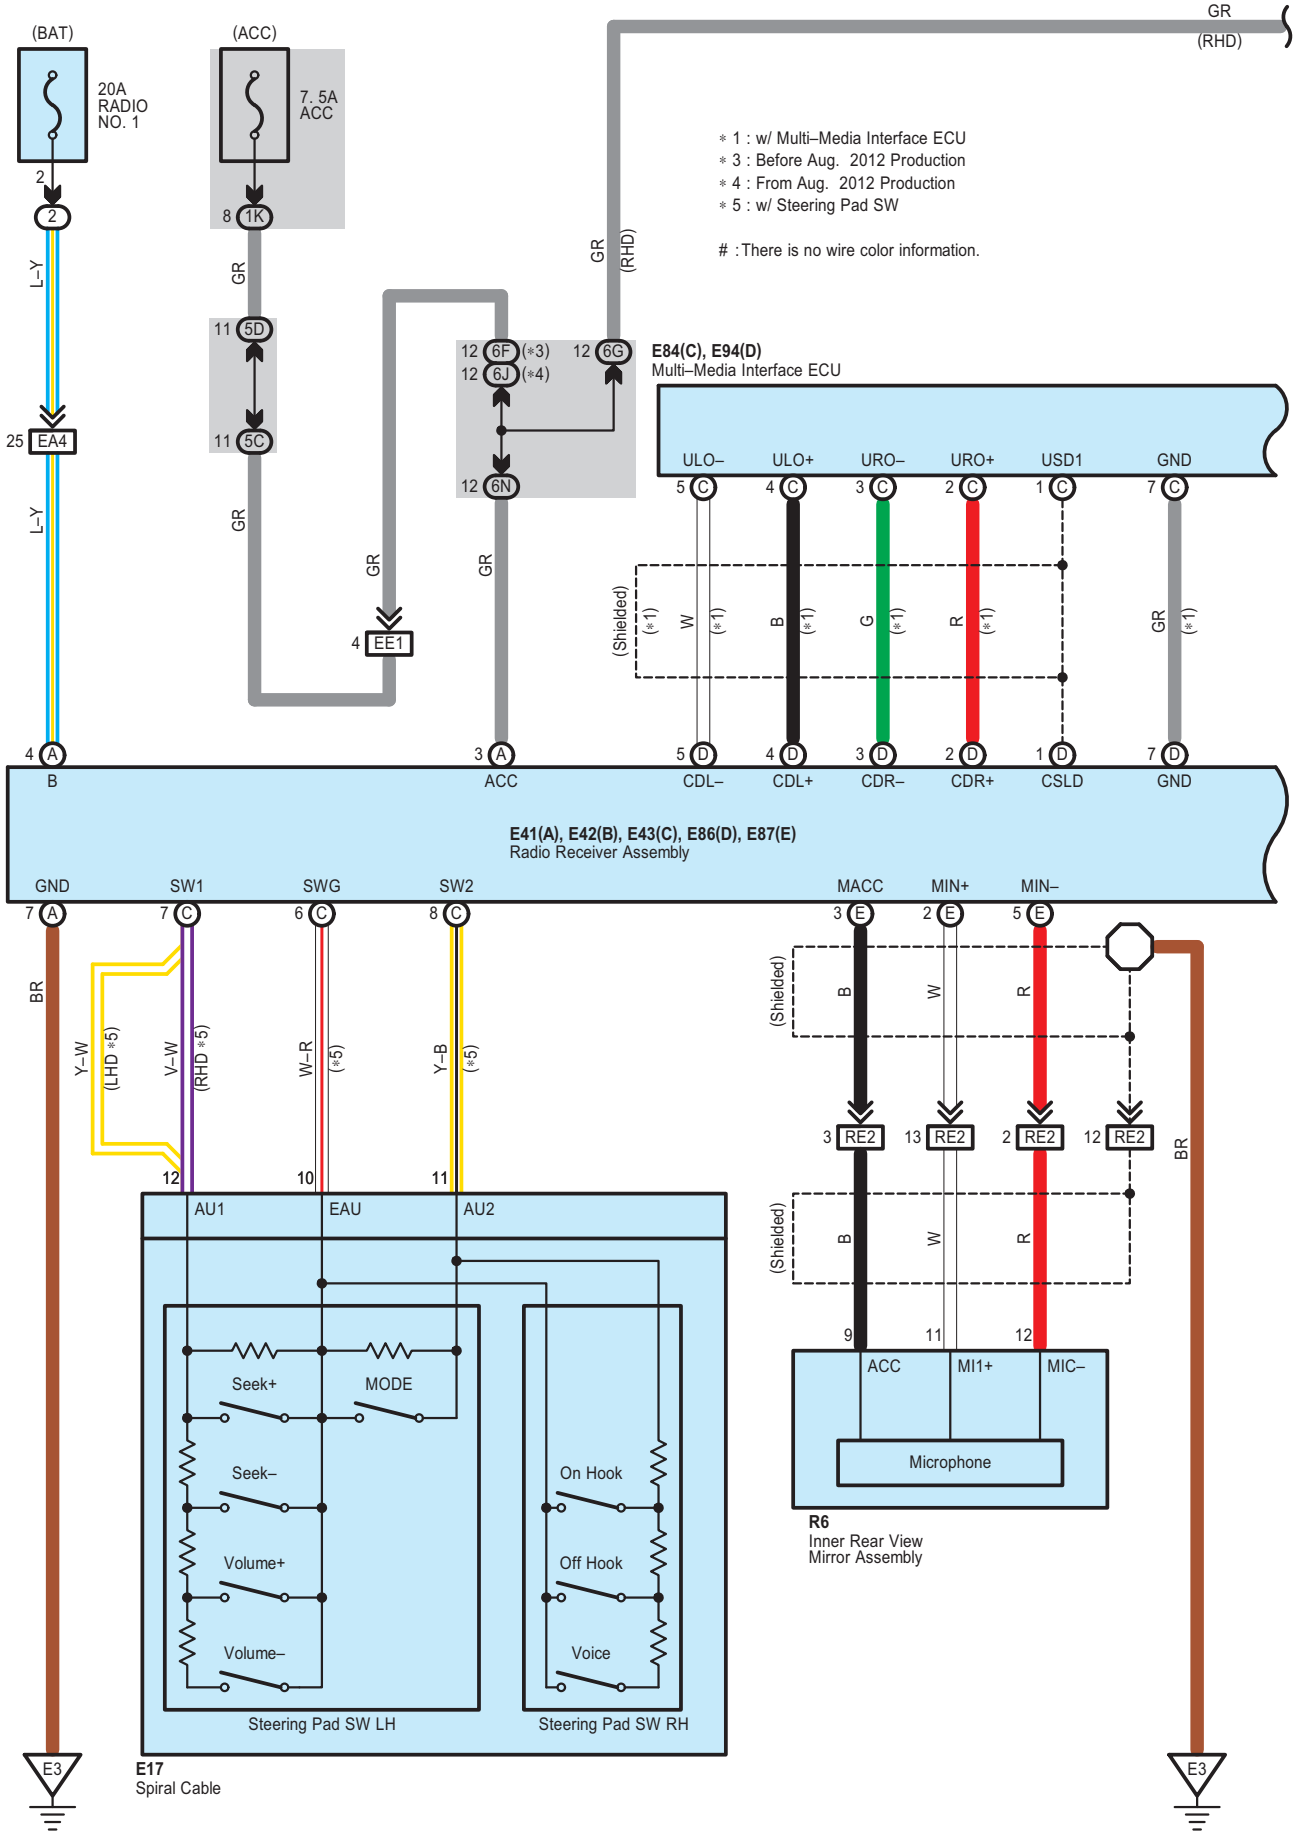
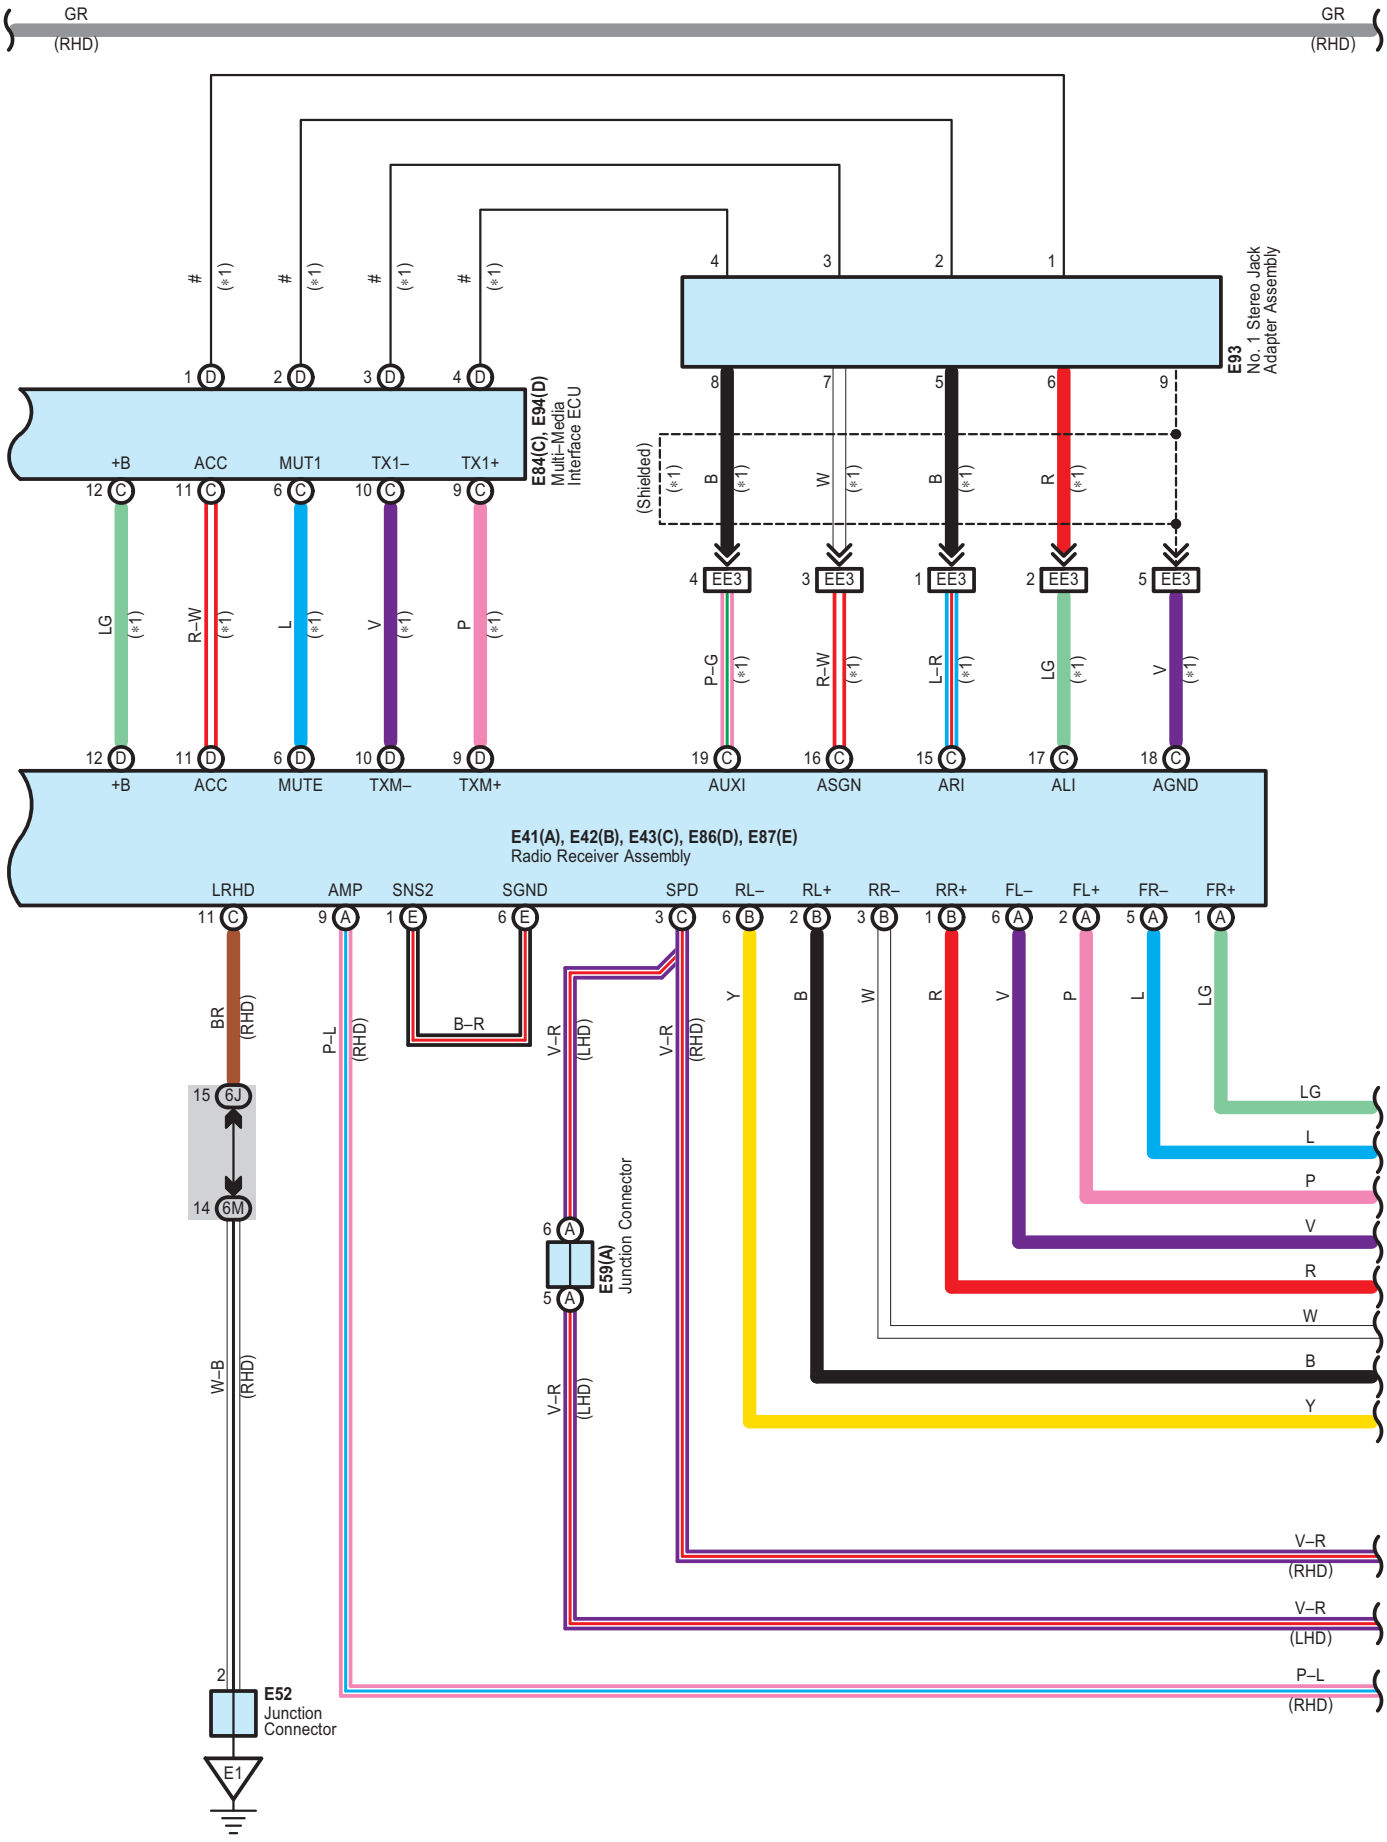
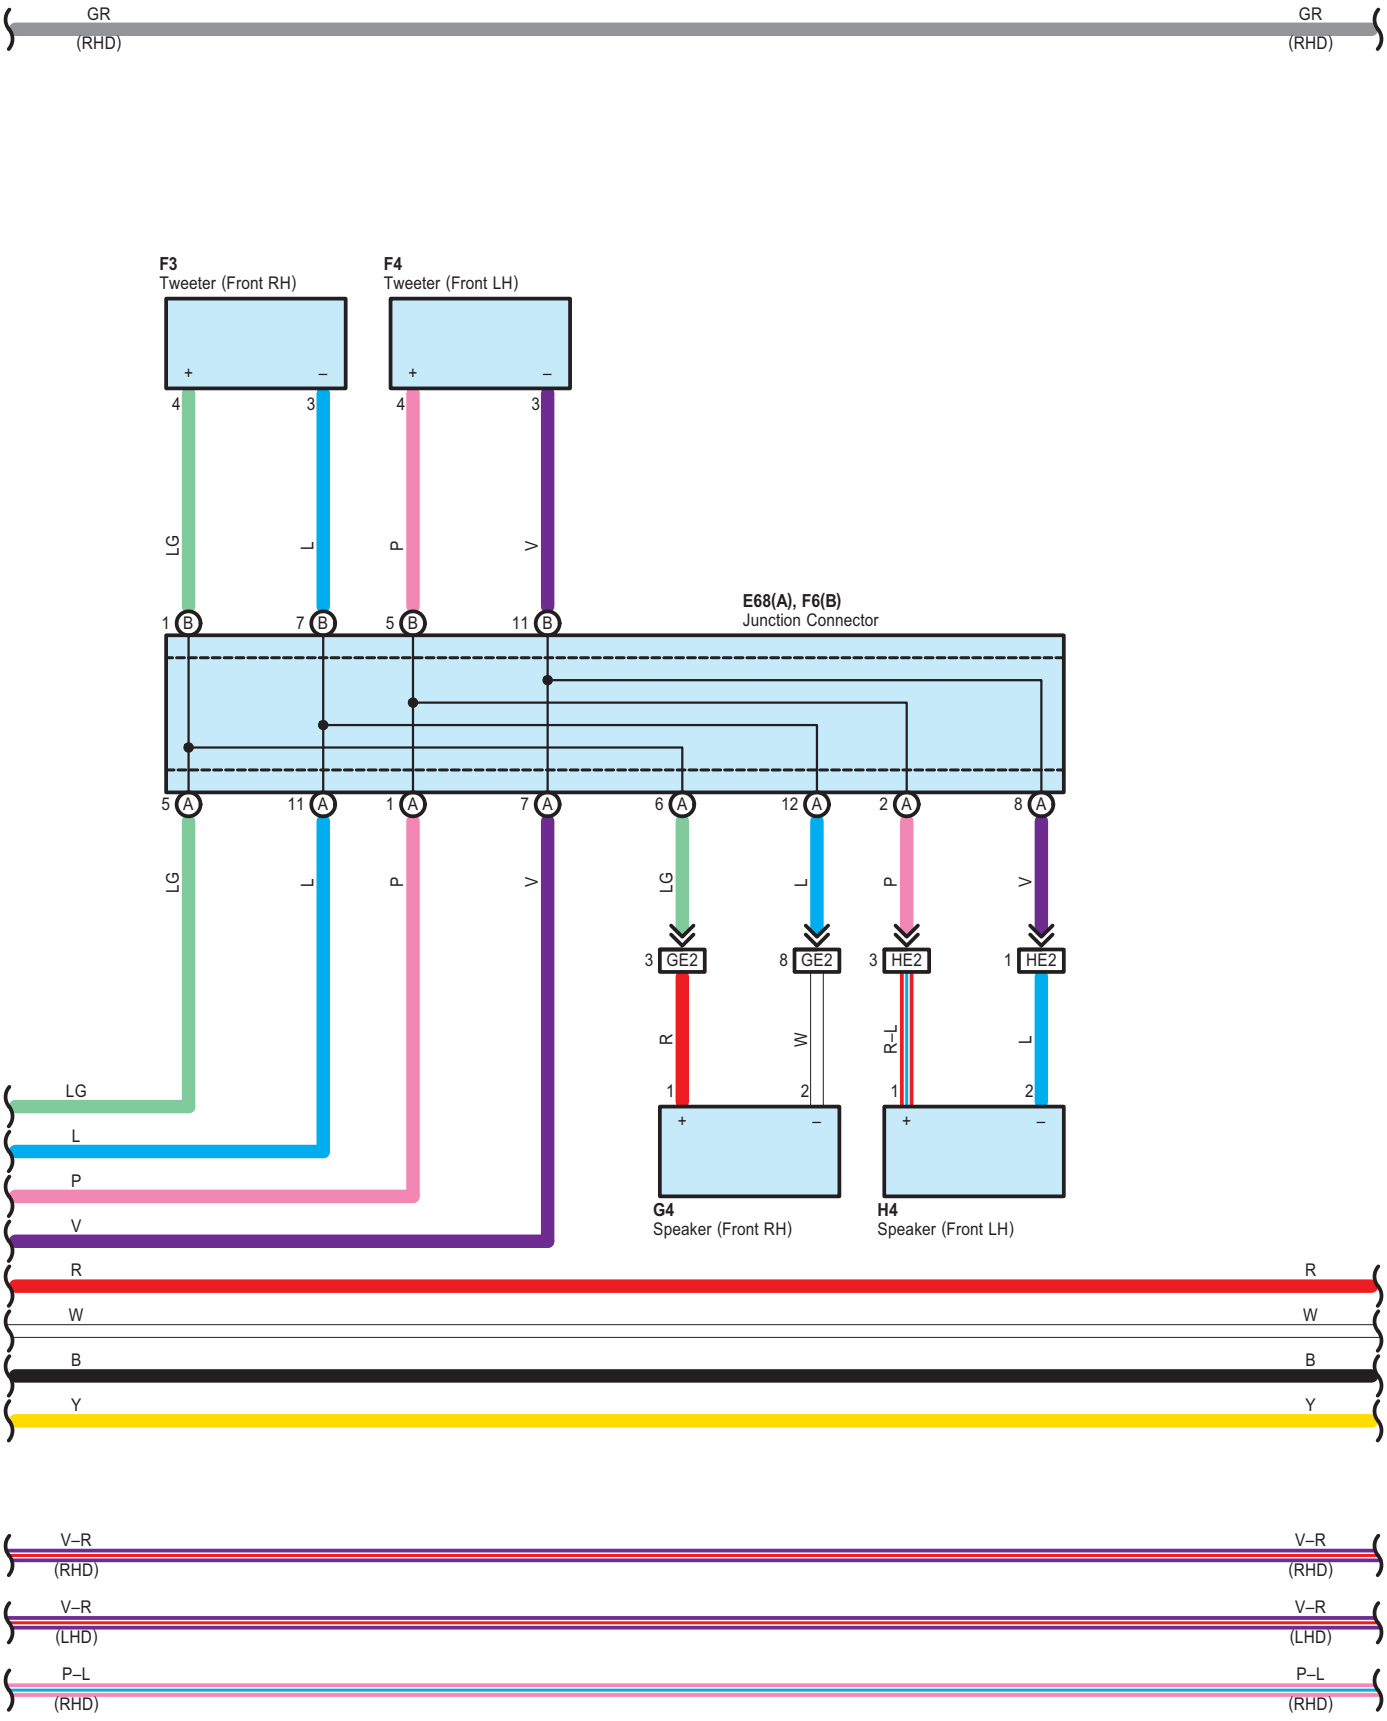
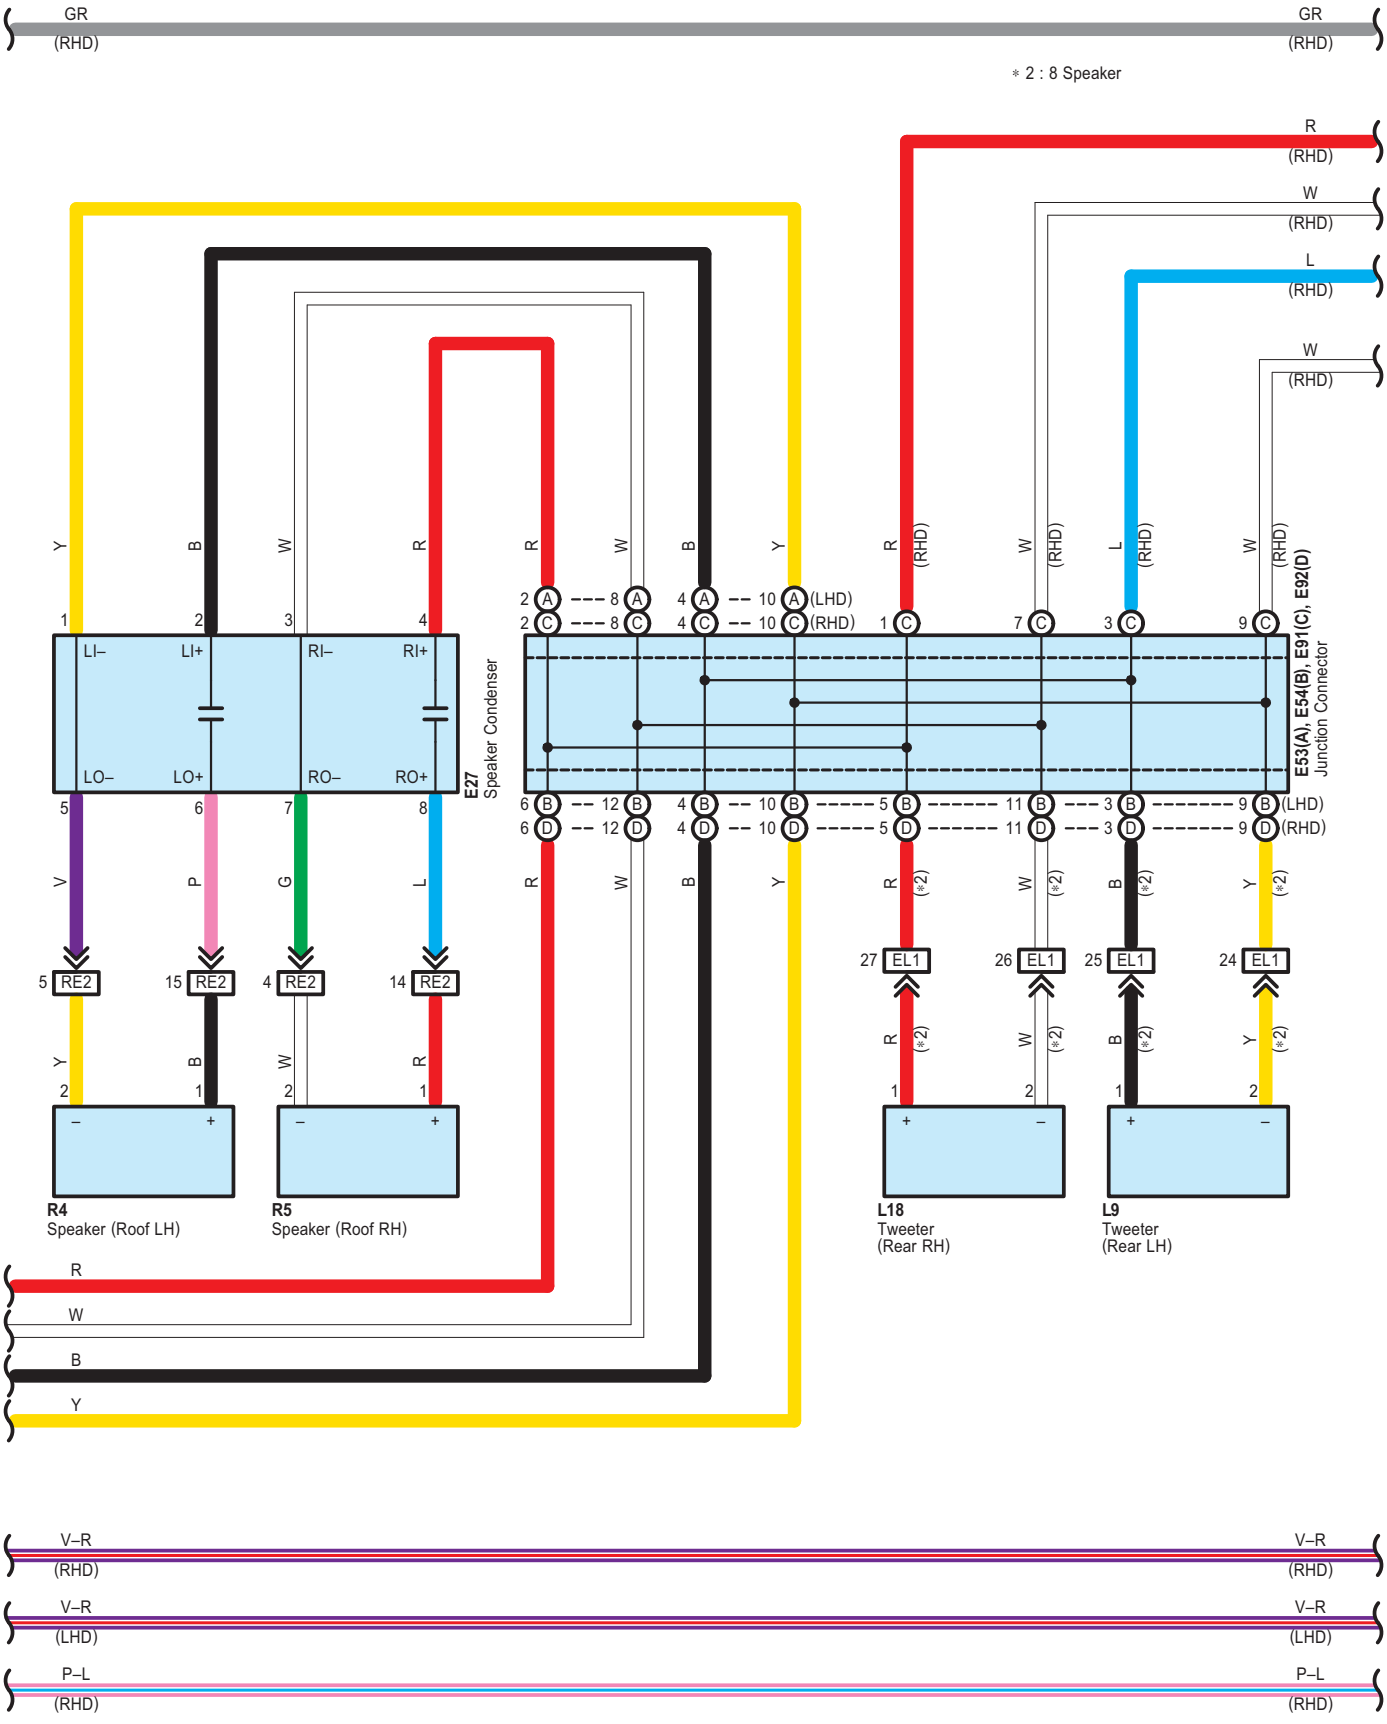
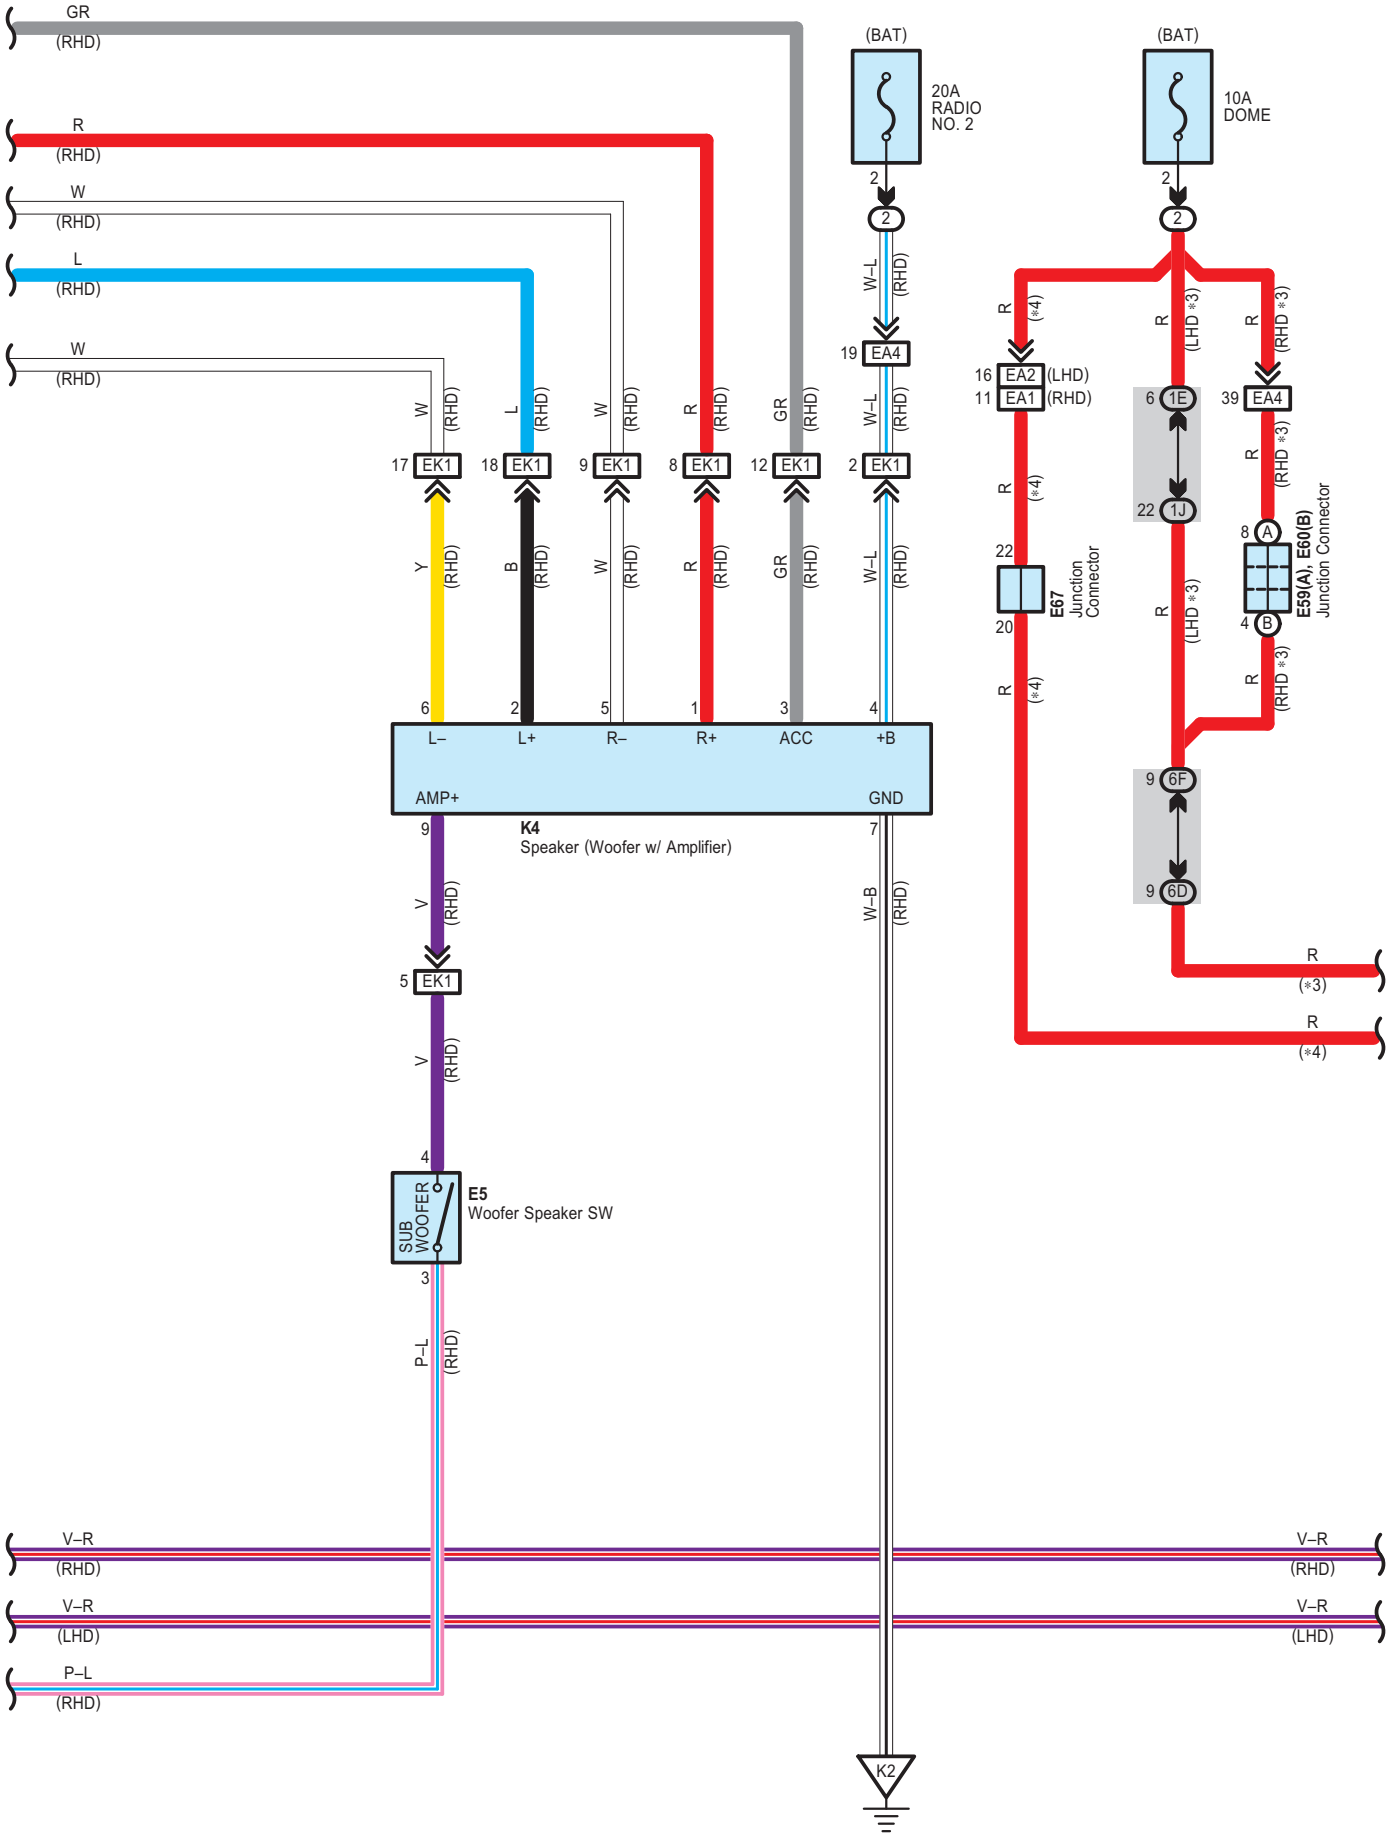
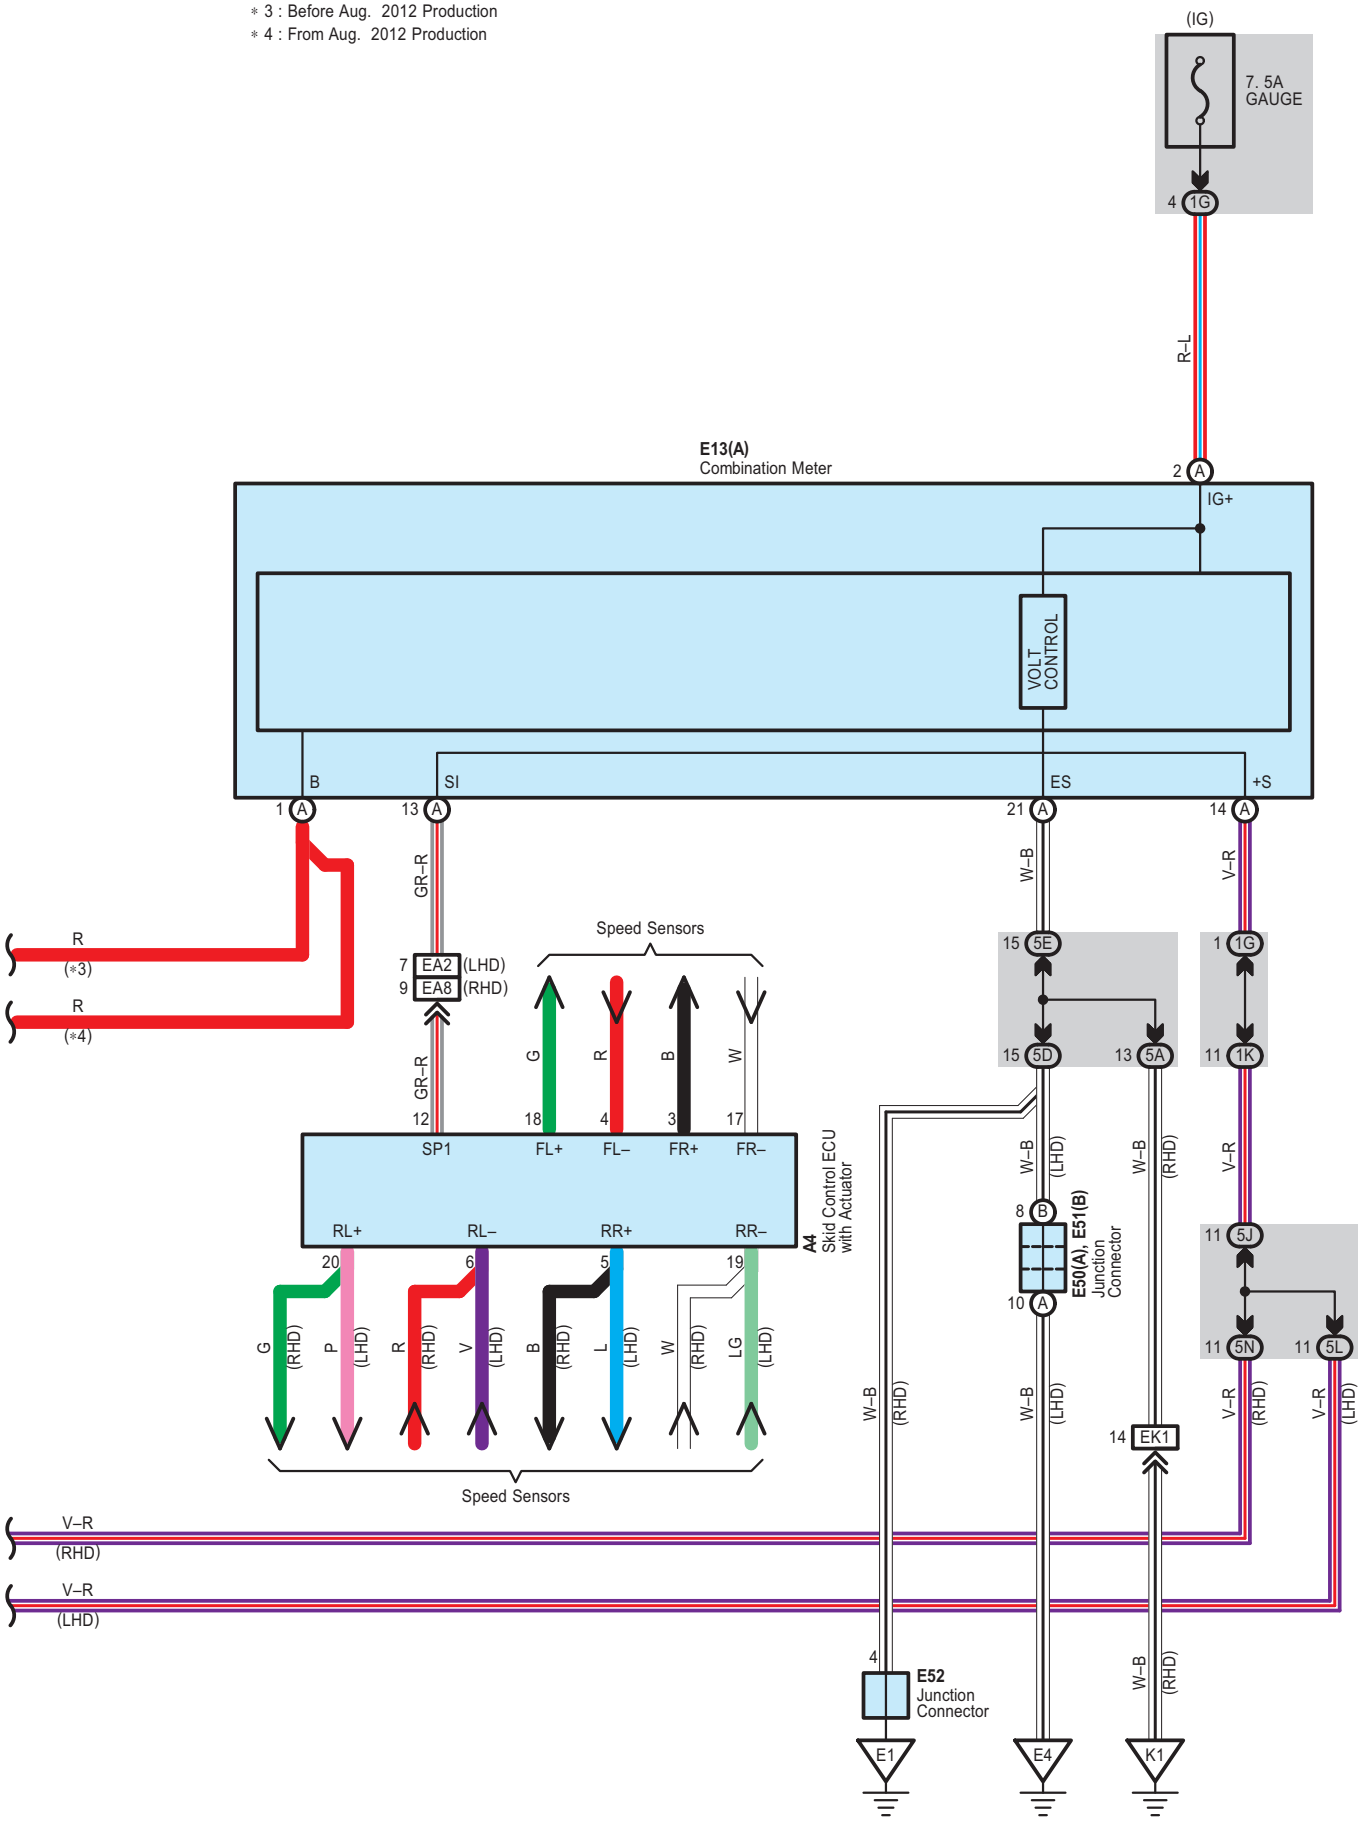

(BAT)
(ACC)
20A RADIO NO. 1
7. 5A ACC
GR (RHD)
∗1 : w/ Multi–Media Interface ECU
∗3 : Before Aug. 2012 Production
∗4 : From Aug. 2012 Production
∗5 : w/ Steering Pad SW
# : There is no wire color information.
E84(C), E94(D)
Multi–Media Interface ECU
ULO–
ULO+
URO–
URO+
USD1
GND
(Shielded)
E41(A), E42(B), E43(C), E86(D), E87(E)
Radio Receiver Assembly
B
ACC
CDL–
CDL+
CDR–
CDR+
CSLD
GND
SW1
SWG
SW2
MACC
MIN+
MIN–
AU1
EAU
AU2
Seek+
MODE
Seek–
Volume+
Volume–
On Hook
Off Hook
Voice
Steering Pad SW LH
Steering Pad SW RH
E17
Spiral Cable
ACC
MI1+
MIC–
Microphone
R6
Inner Rear View Mirror Assembly
E3


GR
(RHD)
GR
(RHD)
E93
No. 1 Stereo Jack
Adapter Assembly
E84(C), E94(D)
Multi-Media
Interface ECU
+B
ACC
MUT1
TX1–
TX1+
(Shielded)
E41(A), E42(B), E43(C), E86(D), E87(E)
Radio Receiver Assembly
+B
ACC
MUTE
TXM–
TXM+
AUXI
ASGN
ARI
ALI
AGND
LRHD
AMP
SNS2
SGND
SPD
RL–
RL+
RR–
RR+
FL–
FL+
FR–
FR+
E59(A)
Junction Connector
E52
Junction
Connector
E1
LG
L
P
V
R
W
B
Y
V–R
(RHD)
V–R
(LHD)
P–L
(RHD)



GR
(RHD)
GR
(RHD)
F3
Tweeter (Front RH)
F4
Tweeter (Front LH)
+
–
4
3
LG
L
P
V
1 B
7 B
5 B
11 B
E68(A), F6(B)
Junction Connector
5 A
11 A
1 A
7 A
6 A
12 A
2 A
8 A
3 GE2
8 GE2
3 HE2
1 HE2
R
W
R–L
1
2
G4
Speaker (Front RH)
H4
Speaker (Front LH)
LG
L
P
V
R
W
B
Y
V–R
(RHD)
V–R
(LHD)
P–L
(RHD)


GR (RHD)
GR (RHD)
* 2 : 8 Speaker
R (RHD)
W (RHD)
L (RHD)
W (RHD)
LI–
LI+
RI–
RI+
LO–
LO+
RO–
RO+
E27 Speaker Condenser
E53(A), E54(B), E91(C), E92(D) Junction Connector
(LHD)
(RHD)
5 RE2
15 RE2
4 RE2
14 RE2
27 EL1
26 EL1
25 EL1
24 EL1
(*2)
R4 Speaker (Roof LH)
R5 Speaker (Roof RH)
L18 Tweeter (Rear RH)
L9 Tweeter (Rear LH)
R
W
B
Y
V–R (RHD)
V–R (LHD)
P–L (RHD)



GR
(RHD)
R
(RHD)
W
(RHD)
L
(RHD)
W
(RHD)
(BAT)
20A
RADIO
NO. 2
(BAT)
10A
DOME
W–L
(RHD)
19 EA4
16 EA2 (LHD)
11 EA1 (RHD)
17 EK1
18 EK1
9 EK1
8 EK1
12 EK1
2 EK1
L–
L+
R–
R+
ACC
+B
AMP+
GND
K4
Speaker (Woofer w/ Amplifier)
E67
Junction
Connector
E59(A), E60(B)
Junction Connector
6 1E
22 1J
9 6F
9 6D
39 EA4
8 A
4 B
22
20
5 EK1
4
SUB
WOOFER
E5
Woofer Speaker SW
3
W–B
(RHD)
V–R
(RHD)
V–R
(LHD)
P–L
(RHD)
R
(*3)
R
(*4)
K2


∗ 3 : Before Aug. 2012 Production
∗ 4 : From Aug. 2012 Production
(IG)
7. 5A GAUGE
4 1G
R–L
E13(A)
Combination Meter
2 A
IG+
VOLT CONTROL
B
SI
ES
+S
1 A
13 A
21 A
14 A
R (∗3)
R (∗4)
GR–R
7 EA2 (LHD)
9 EA8 (RHD)
GR–R
12 SP1
Speed Sensors
G 18 FL+
R 4 FL–
B 3 FR+
W 17 FR–
W–B
V–R
15 5E
15 5D
13 5A
1 1G
11 1K
A4
Skid Control ECU with Actuator
RL+
RL–
RR+
RR–
20 G (RHD) P (LHD)
6 R (RHD) V (LHD)
5 B (RHD) L (LHD)
19 W (RHD) LG (LHD)
Speed Sensors
8 B
10 A
E50(A), E51(B)
Junction Connector
11 5J
11 5N
11 5L
14 EK1
W–B (RHD)
W–B (LHD)
V–R (RHD)
V–R (LHD)
V–R (RHD)
V–R (LHD)
4 E52
Junction Connector
E1
E4
K1
W–B (RHD)


A4
Black

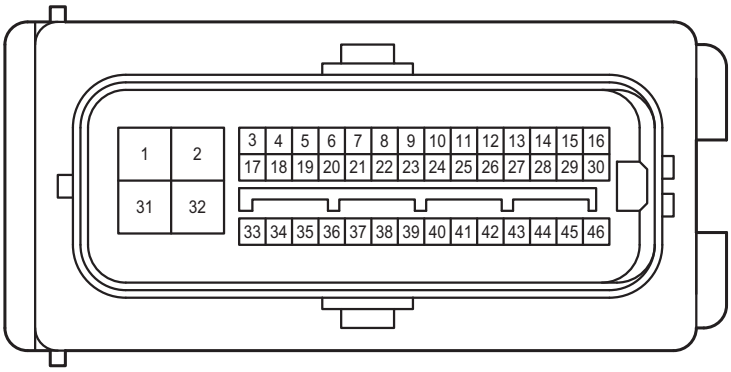

E5
Blue

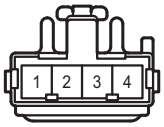


E13
White

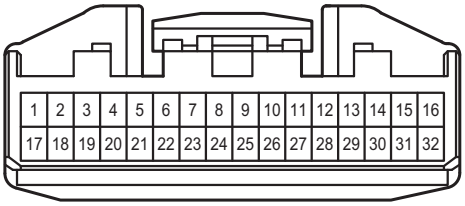


E17
Black



E27
White

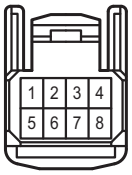


E41
White

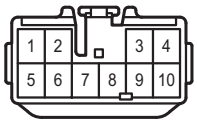


E42
White




E43
White

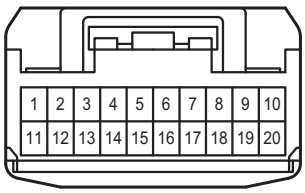


E50
Black

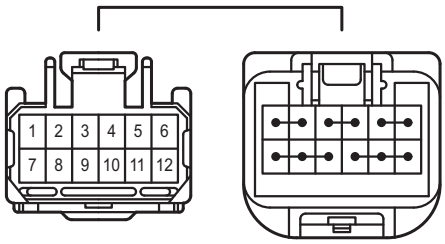


E51
Black

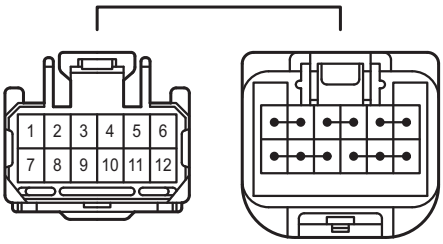


E52
White

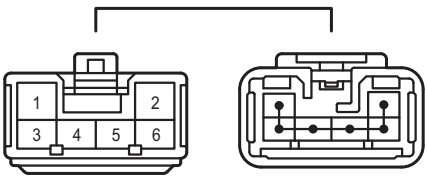


E53
White

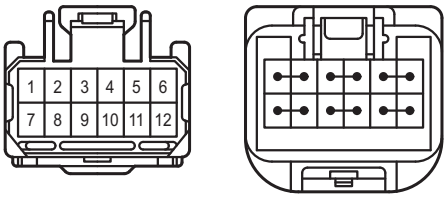


E54
White

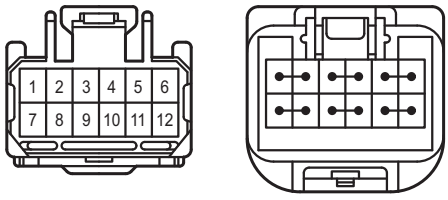


E59
Blue

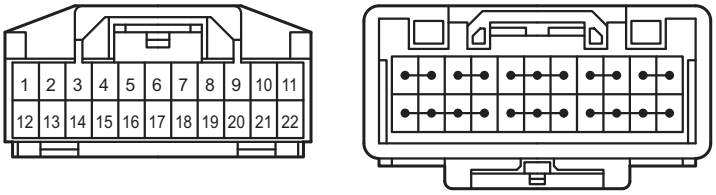


E60
Blue

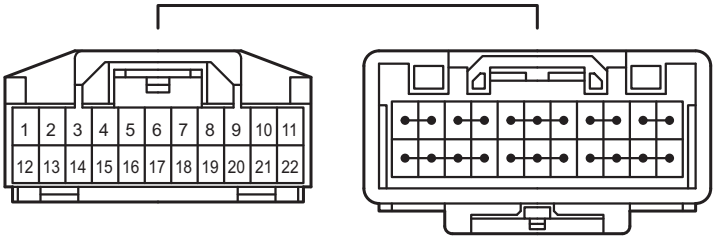

E67
Blue

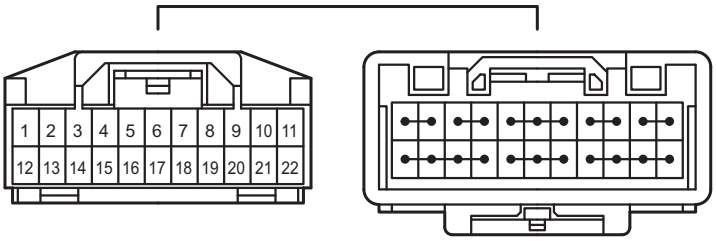

E68
White

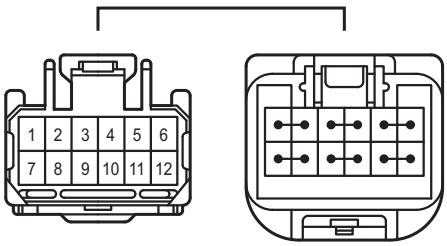


E84
White




E86
White




E87
White

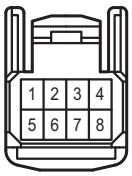


E91
White

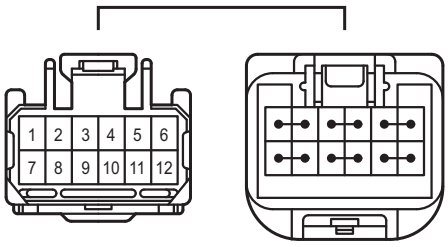


E92
White

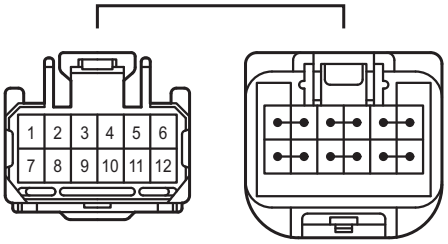


E93
Black

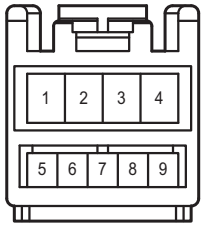


E94
Brown

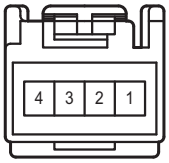


F3
White

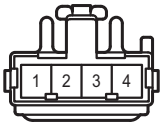

F4
White

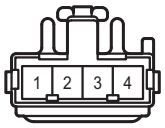

F6
White

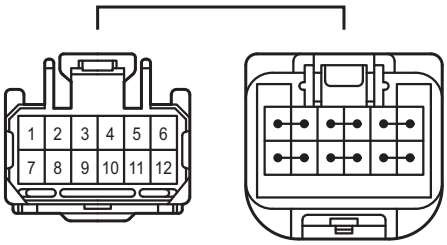


G4
White




H4
White




K4
White

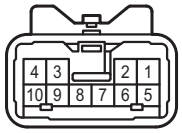

L9
White

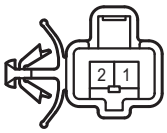

L18
White

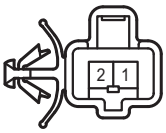


R4
White




R5
White




R6
White

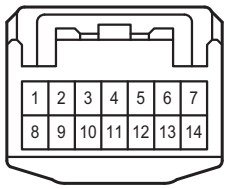


1 E
White

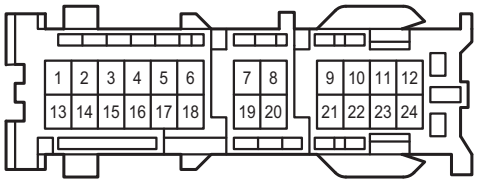


1 G
White

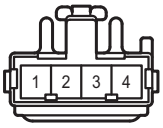


1 J
White

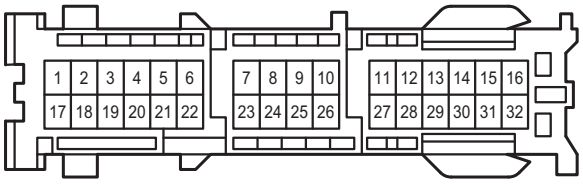


1 K
White

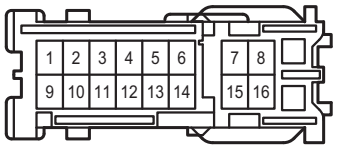


5 A
White




5 C
White




5 D
White




5 E
White




5 J
White




5 L
White




5 N
White




6 D
White




6 F
White




6 G
White




6 J
White




6 M
White




6 N
White



EA1
Blue

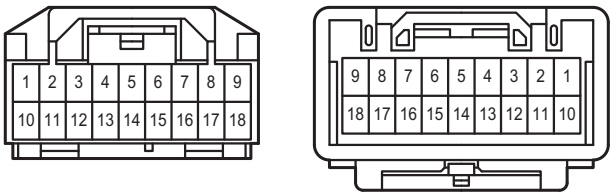


EA2
Gray

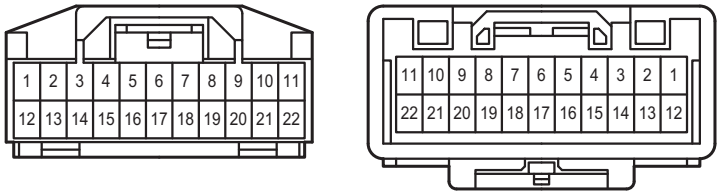


EA4
White

Gray


Gray

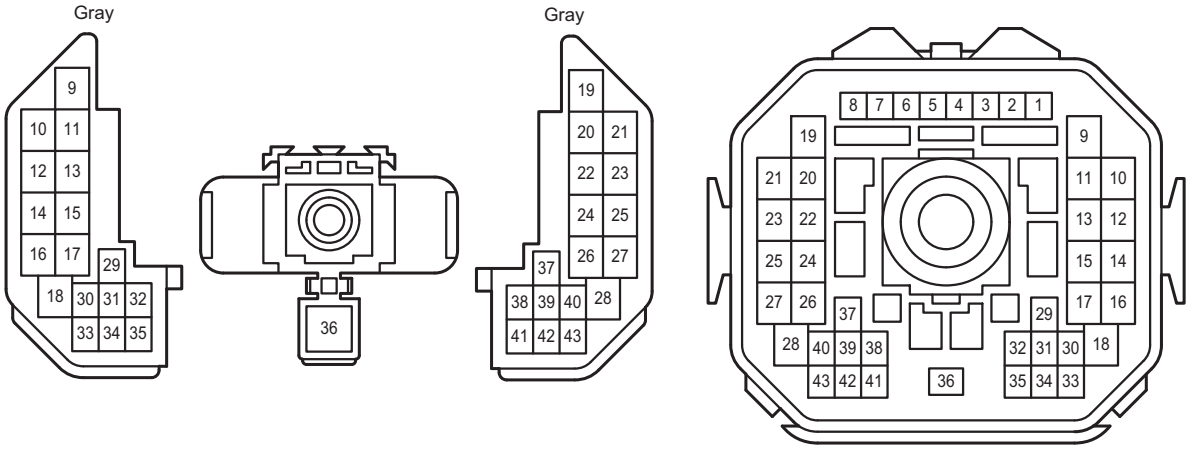


EA8
Black

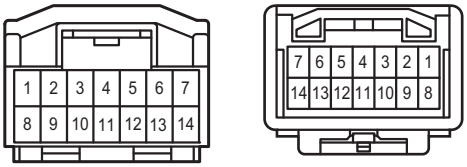


EE1
White

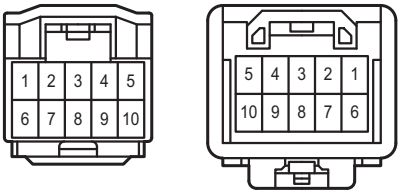

EE3
White

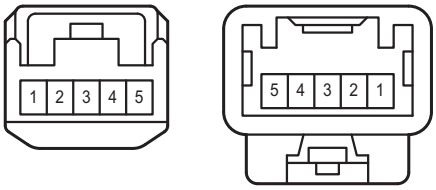



EK1
White

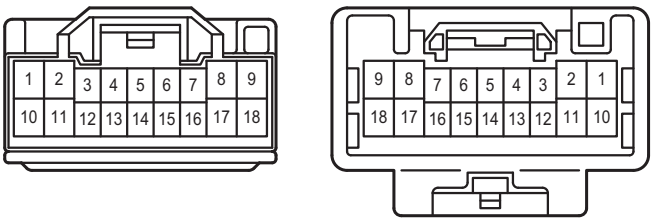


EL1
White


Gray

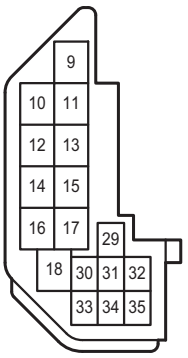

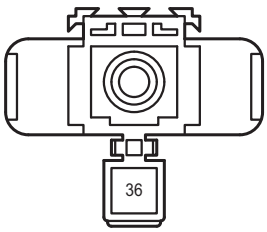


Gray

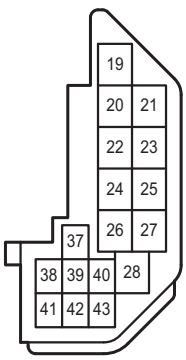


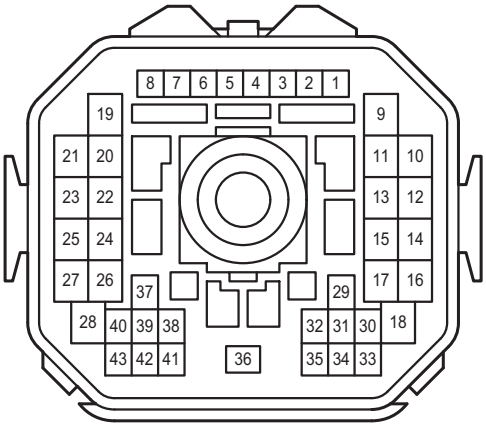


GE2
White

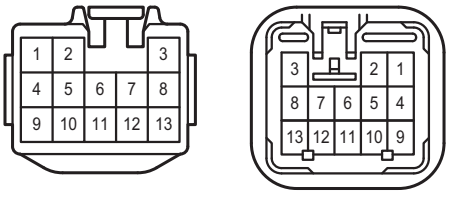

HE2
White

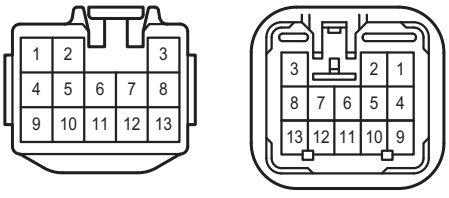

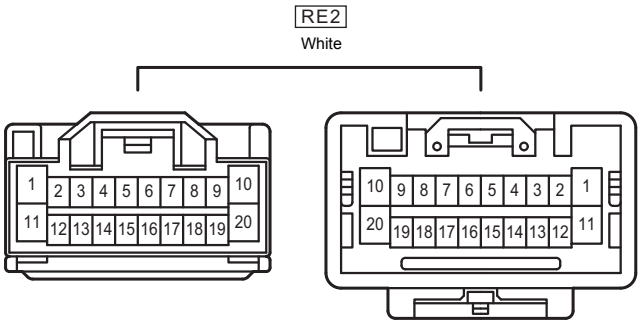
RE2
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11