





(IG)
15A
IG1 (LHD)
10A
IG1 (RHD)
8 1J
Y-R
7 5M
7 5K
Y-R
2 EE1
Y-R
2 6F
2 6G
Y-R
10 A
11 A
E57(A)
Junction
Connector
Y-R
R-Y
1 BE1
R-L
(M/T)
1
2
B42
Back-Up Lamp SW
Y
(M/T)
R-L
(A/T)
1 A (*14)
1 B (*15)
RB
RL
R
B35(A),B65(B)
Park/Neutral
Position SW
2 A (*14)
2 B (*15)
Y
(A/T)
2 BE1
R-Y
7 A
9 A
E57(A)
Junction
Connector
R-Y
2 1L
2 1J
FR FOG Relay
Rear Fog
Light Switch
Turn Signal
Flasher
Park/Neutral
Position SW
Park/Neutral
Position SW
Shift Lock
Control ECU
Park/Neutral
Position SW
W
(*21)
LG-R
(*3)
L-W
P
Y-B
(A/T)
R-Y
G-W
(A/T)
R-G
(A/T)
B-O
(A/T)
W-R
(A/T)
24 A
30 A
20 A
18 A
21 B
20 B
19 B
18 B
17 B
16 B
FOG
+
B
B
P
R
N
D
4
3
(M/T)
(*21)
Front Fog
Rear Fog
Turn LH
Turn RH
A/T P
P
R
N
D
4
3
(A/T)
(*21)
(M/T)
A/T3
22 B
E13(A),E14(B)
Combination Meter
W
(A/T)
Transfer Indicator SW
(Neutral Position)
*21 :From Aug. 2014 Production

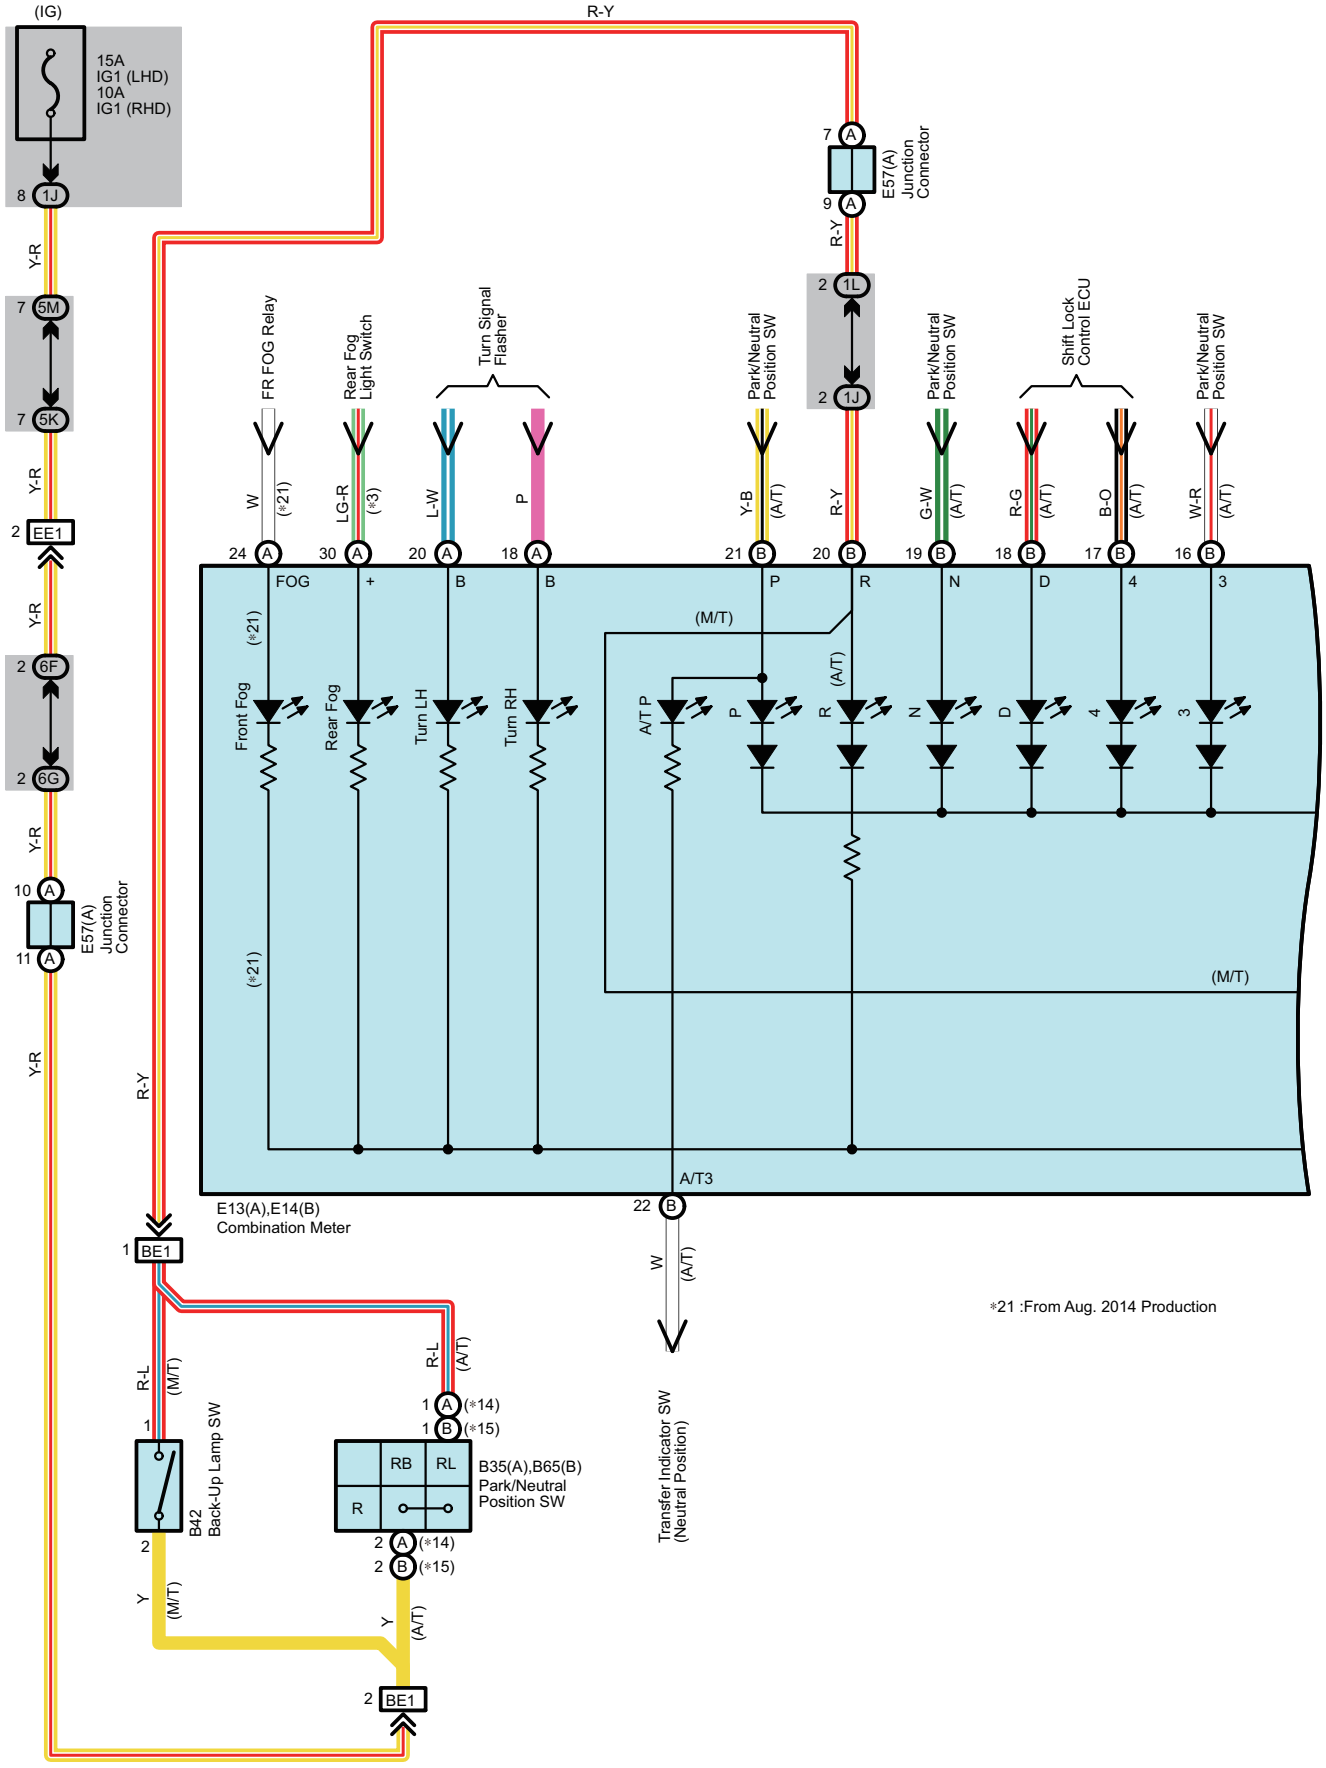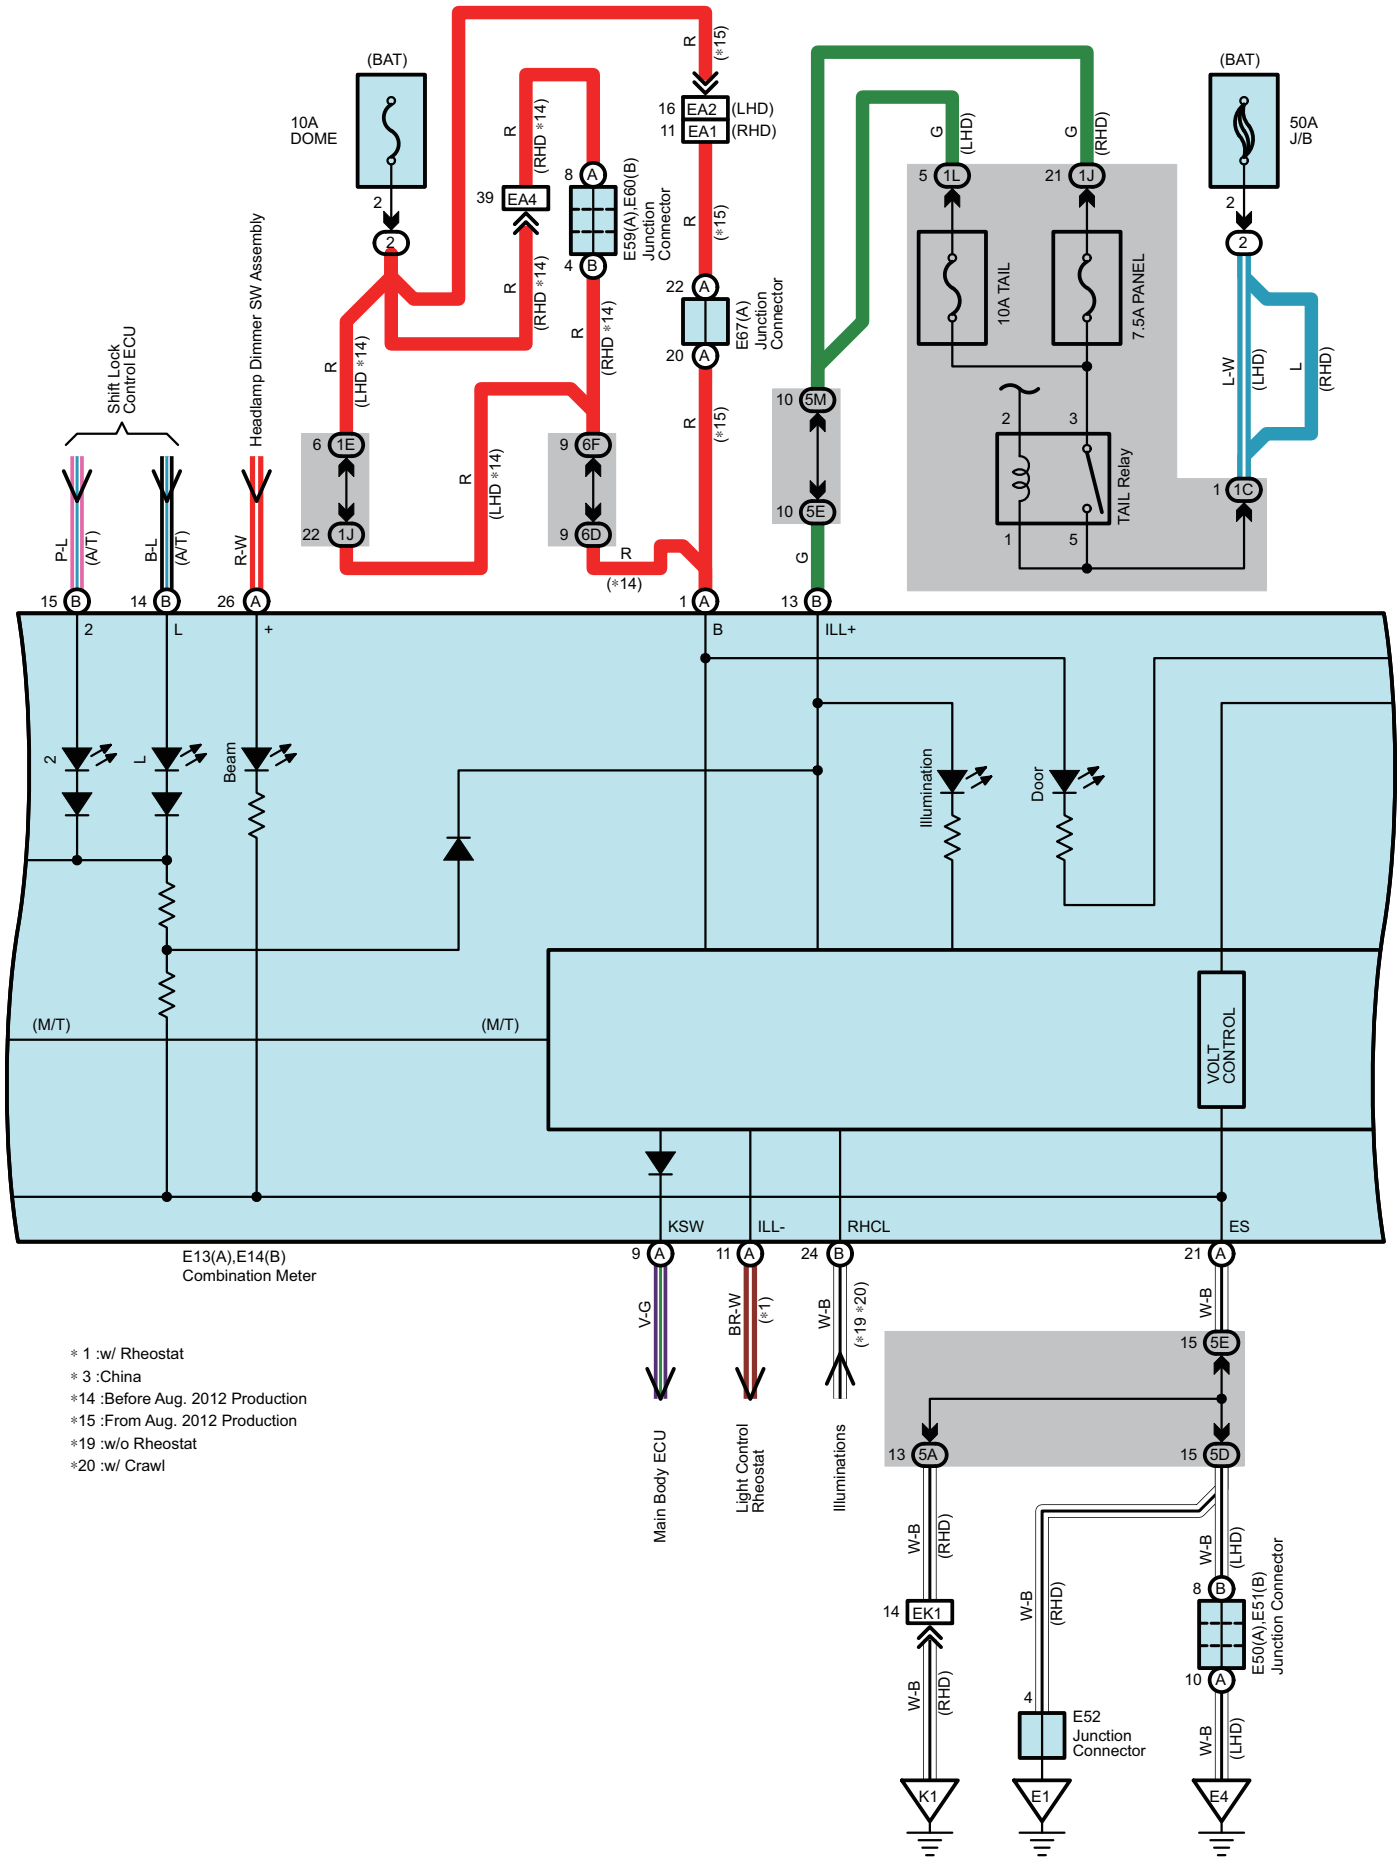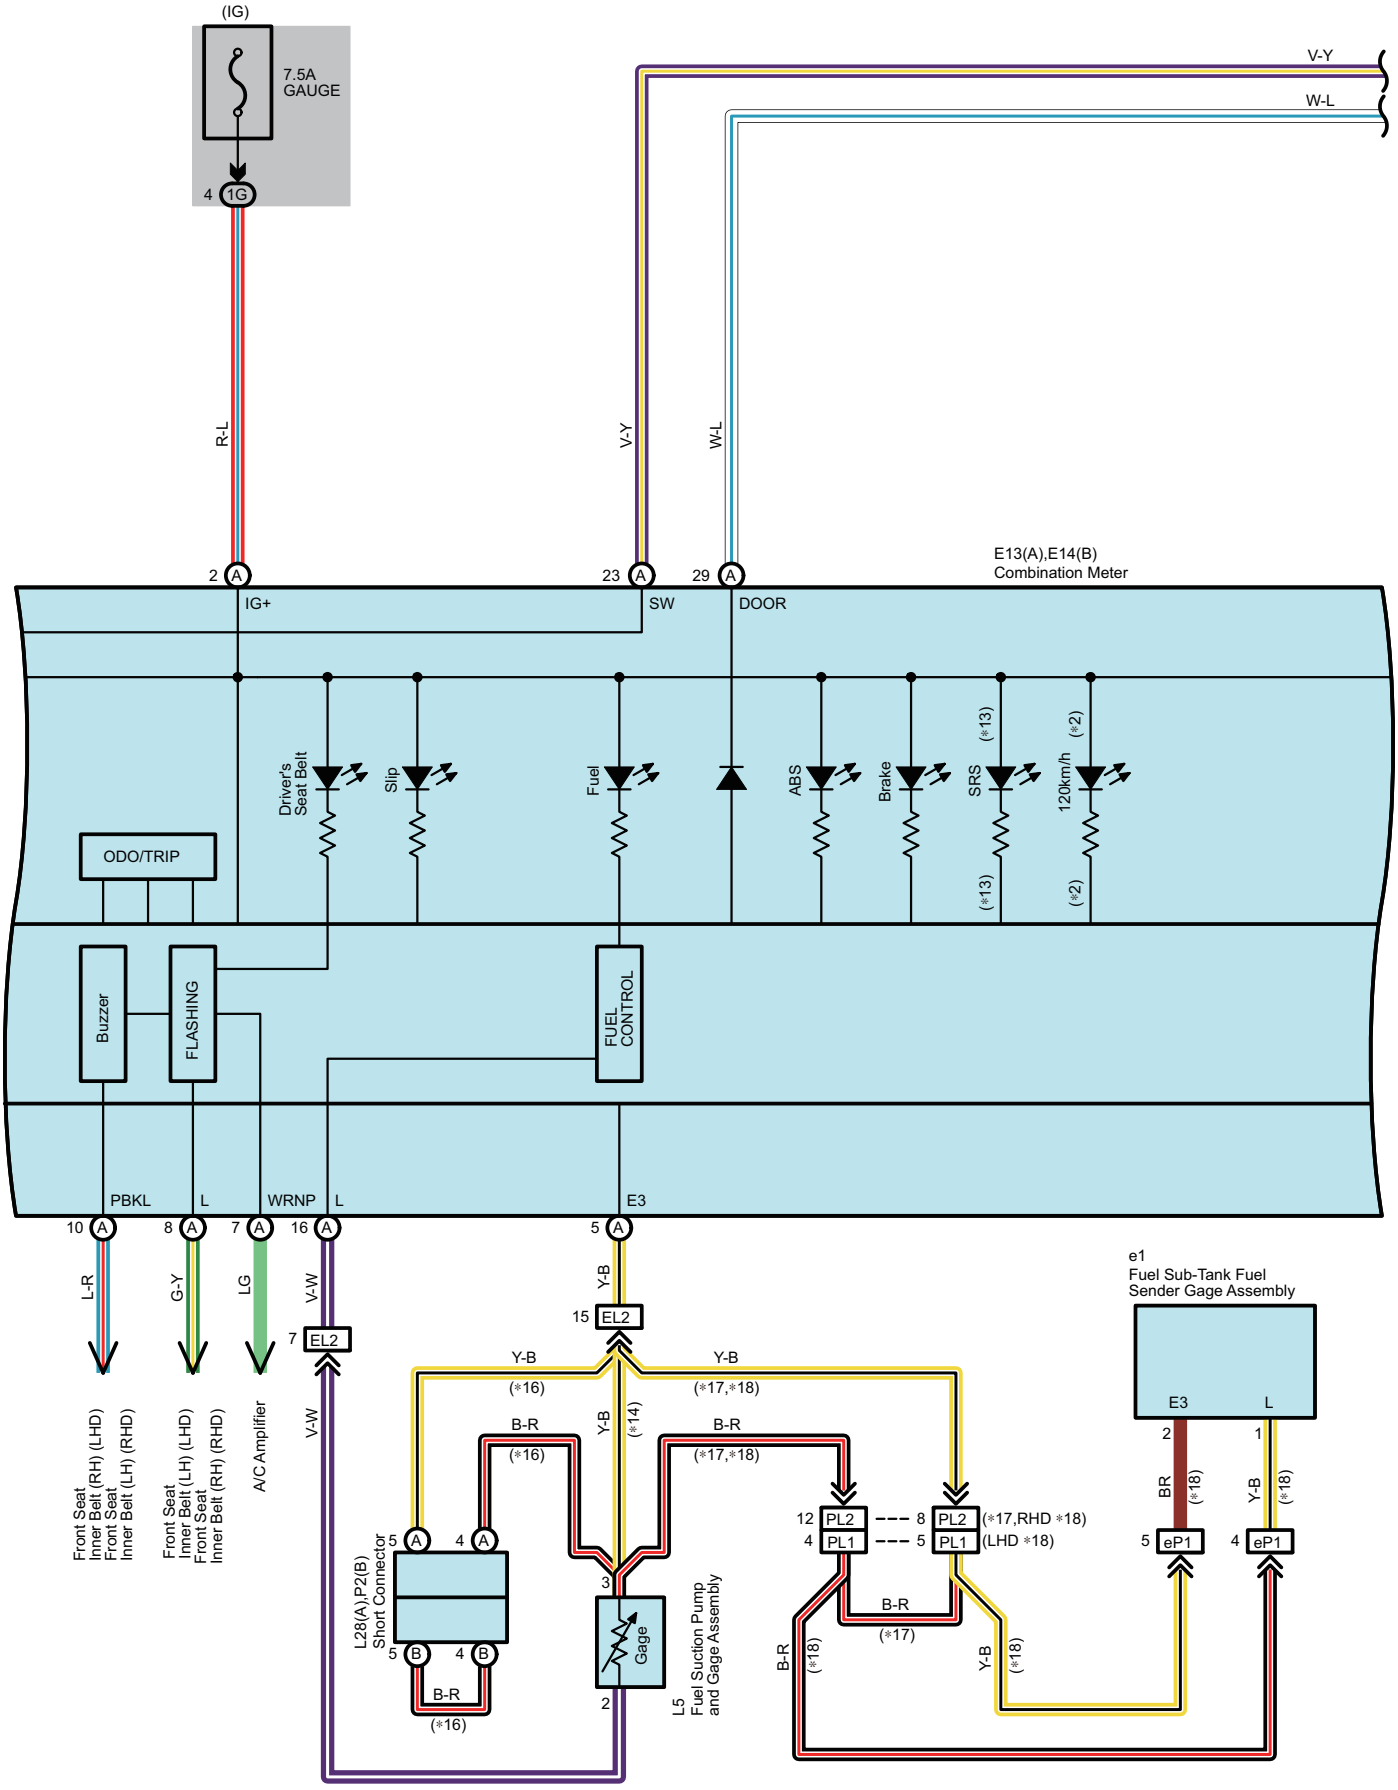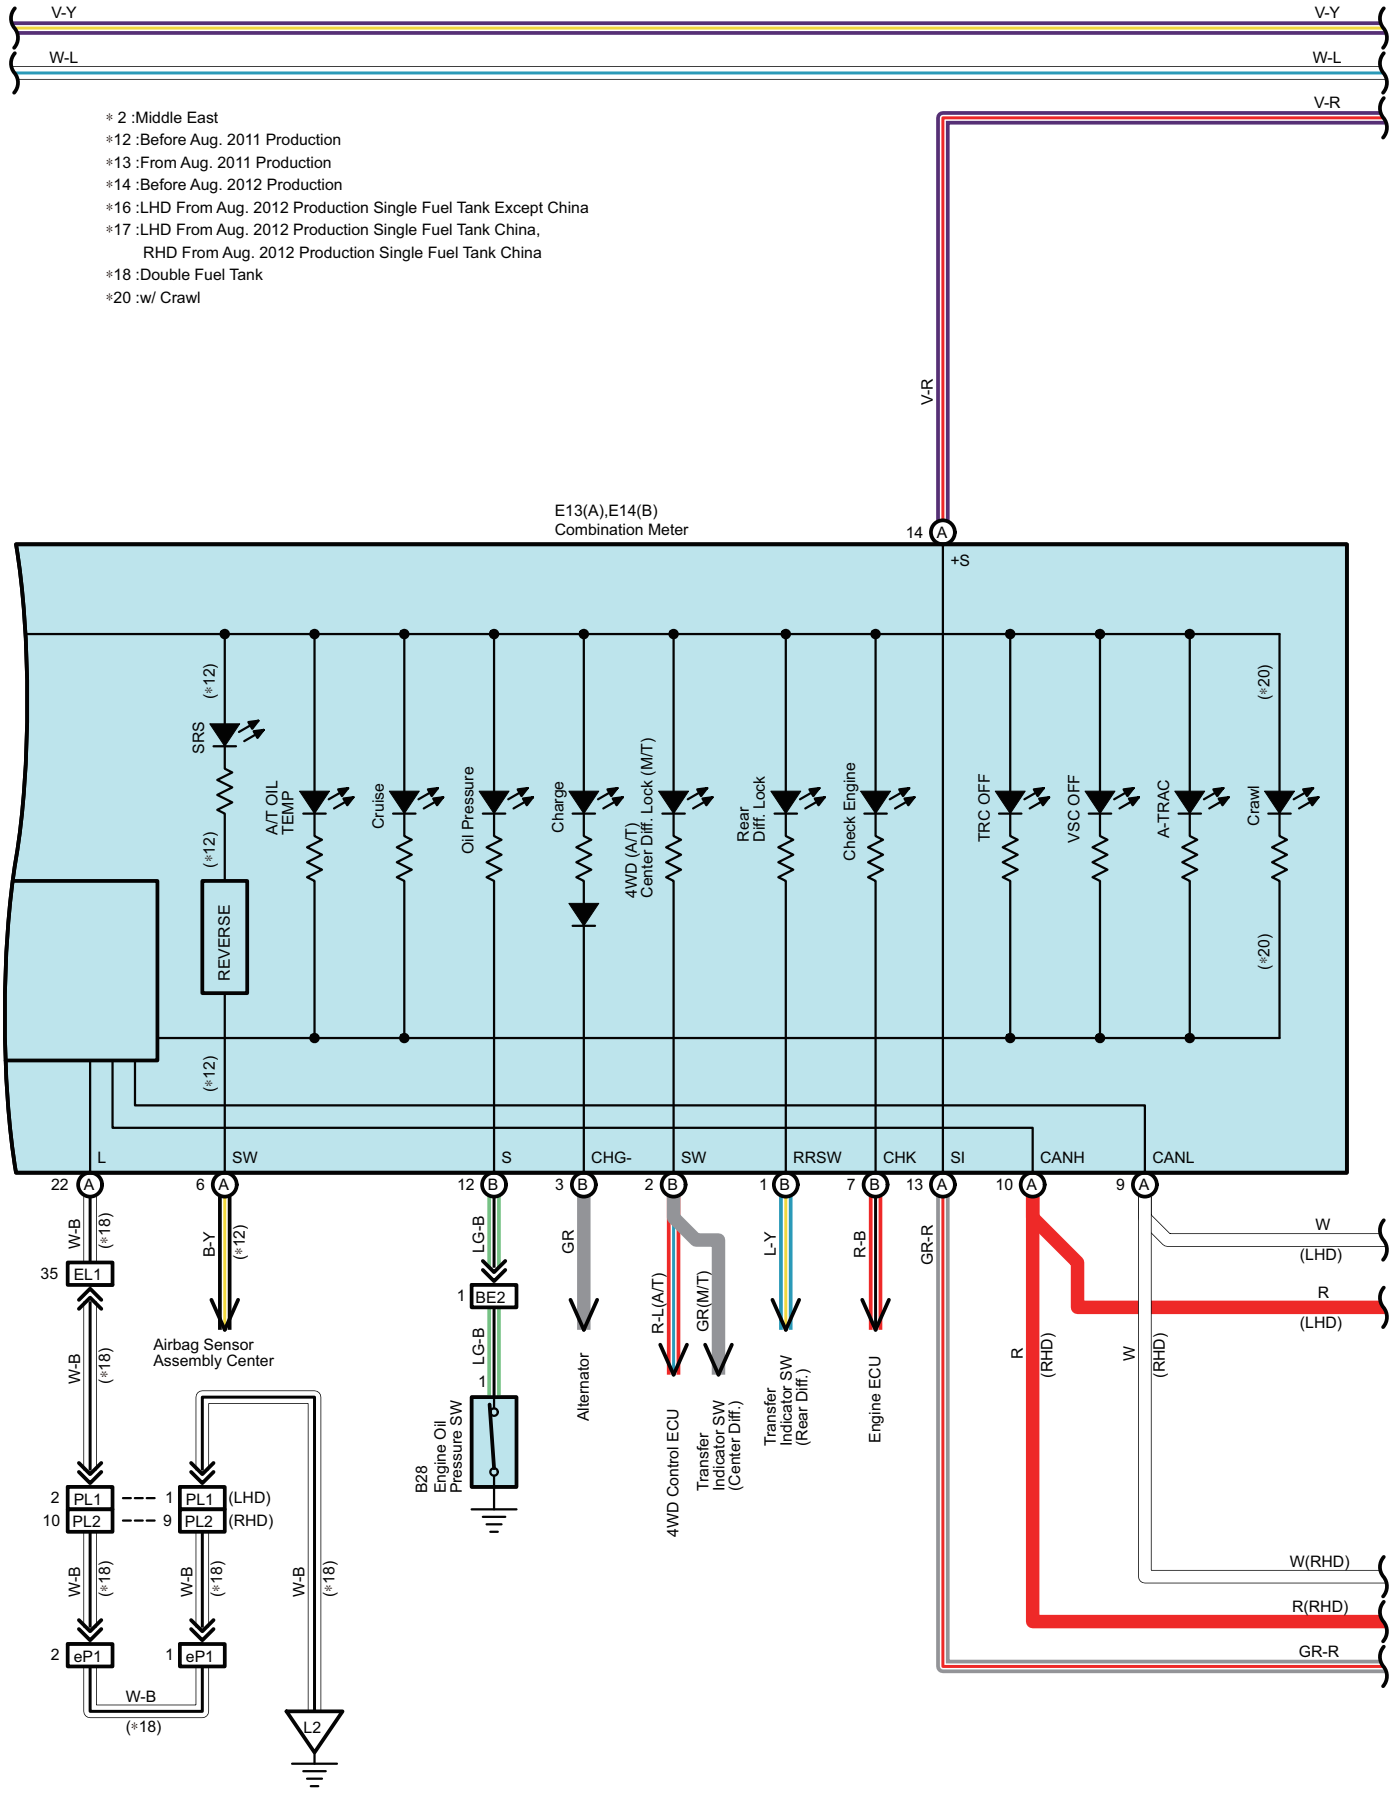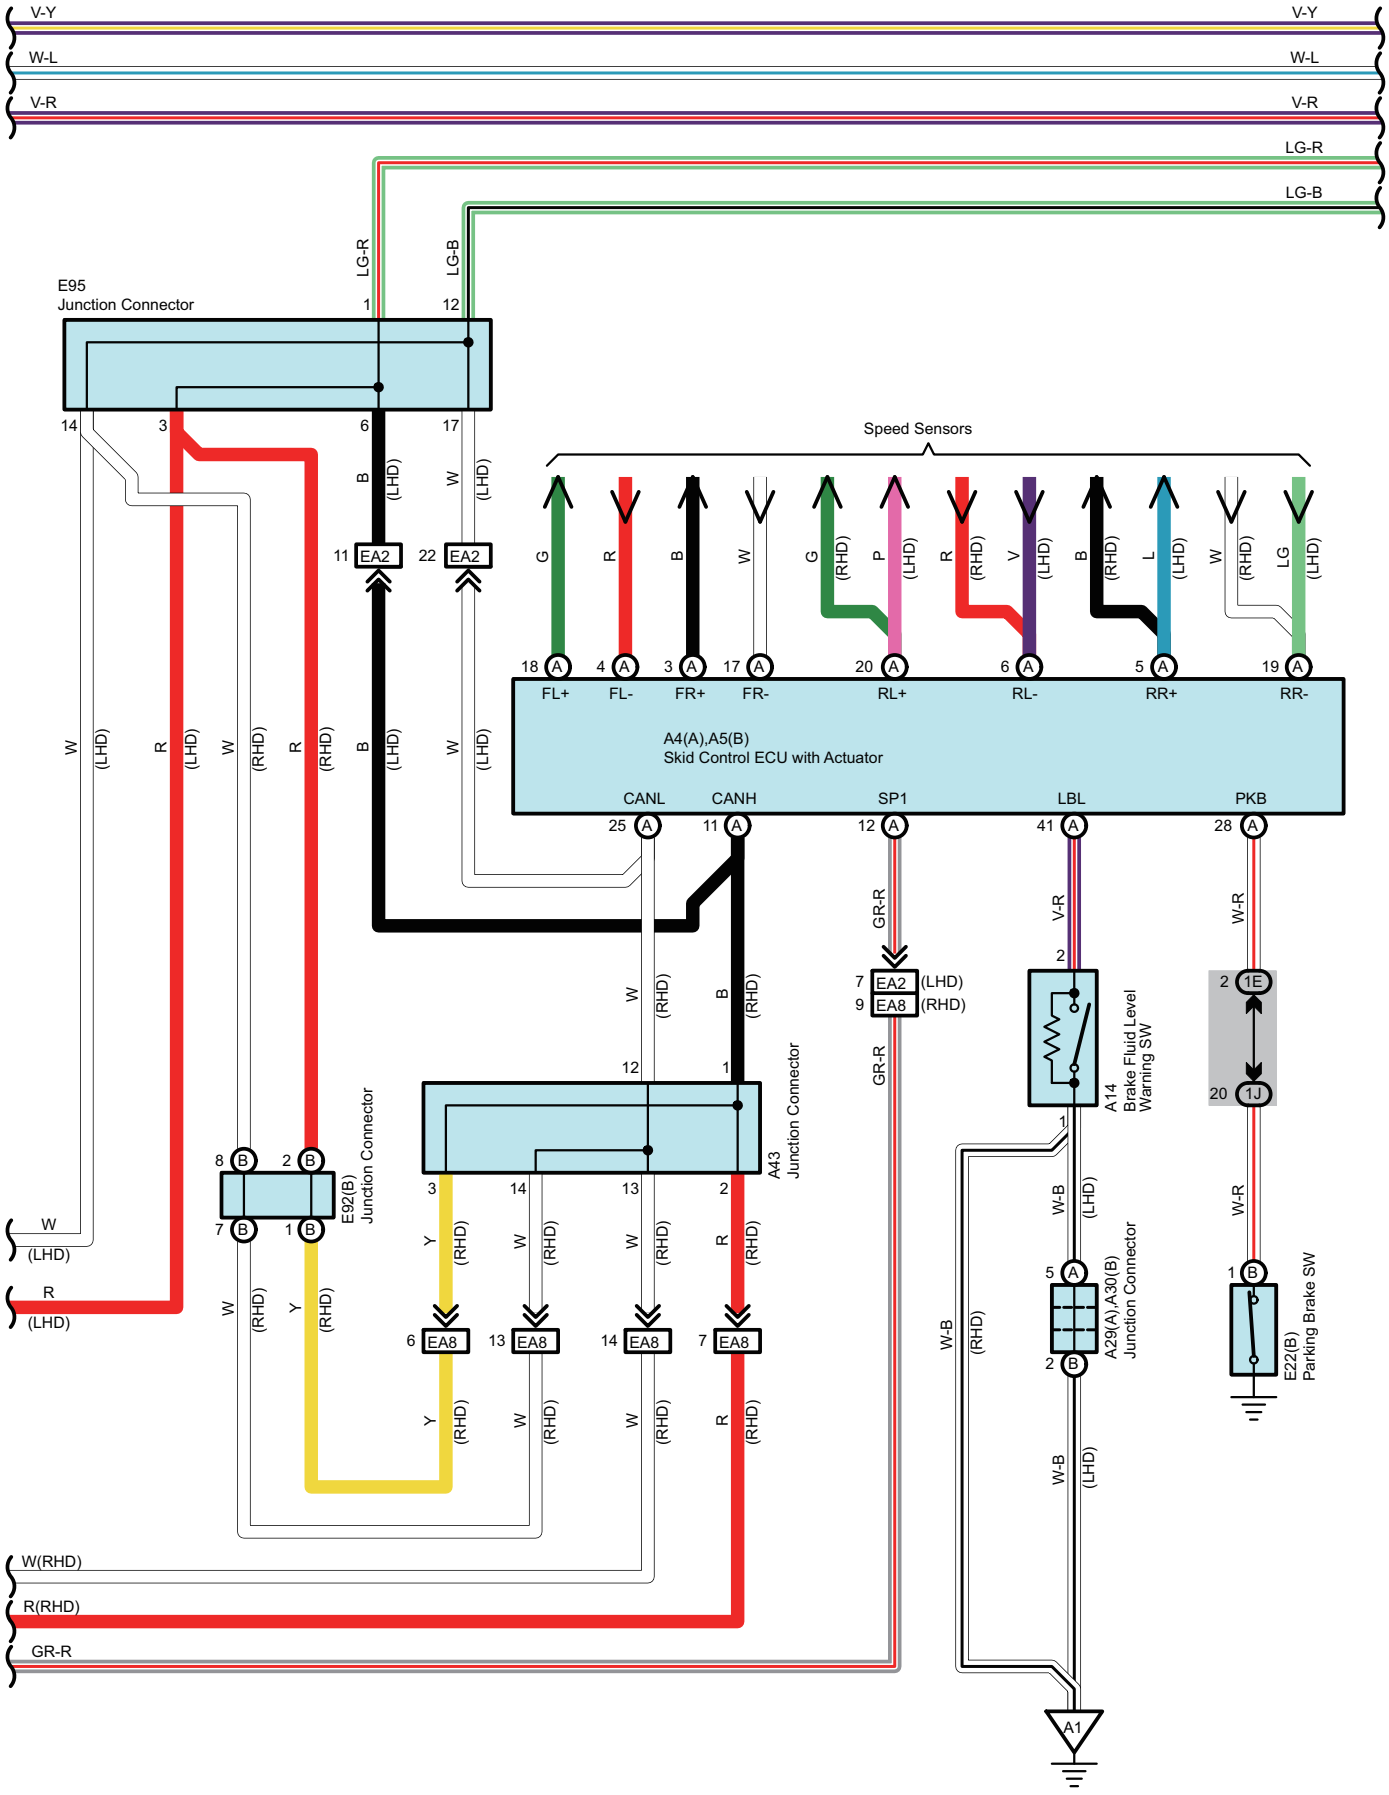



* 1 :w/ Rheostat
* 3 :China
*14 :Before Aug. 2012 Production
*15 :From Aug. 2012 Production
*19 :w/o Rheostat
*20 :w/ Crawl


(IG)
7.5A
GAUGE
4 1G
R-L
V-Y
W-L
2 A
23 A
29 A
E13(A),E14(B)
Combination Meter
IG+
SW
DOOR
Driver's Seat Belt
Slip
Fuel
ABS
Brake
SRS
(*13)
120km/h
(*2)
ODO/TRIP
Buzzer
FLASHING
FUEL CONTROL
PBKL
L
WRNP
L
E3
10 A
8 A
7 A
16 A
5 A
L-R
G-Y
LG
V-W
Y-B
7 EL2
15 EL2
Front Seat Inner Belt (RH) (LHD)
Front Seat Inner Belt (LH) (RHD)
Front Seat Inner Belt (LH) (LHD)
Front Seat Inner Belt (RH) (RHD)
A/C Amplifier
Y-B
(*16)
Y-B
(*17,*18)
B-R
(*16)
Y-B
(*14)
B-R
(*17,*18)
L28(A),P2(B)
Short Connector
5 A
4 A
5 B
4 B
B-R
(*16)
3
2
Gage
L5
Fuel Suction Pump and Gage Assembly
12 PL2
4 PL1
8 PL2
5 PL1
(*17,RHD *18)
(LHD *18)
B-R
(*17)
B-R
(*18)
Y-B
(*18)
e1
Fuel Sub-Tank Fuel Sender Gage Assembly
E3
L
2
1
BR
(*18)
Y-B
(*18)
5 eP1
4 eP1



V-Y
W-L
V-Y
W-L
V-R
∗2 :Middle East
∗12 :Before Aug. 2011 Production
∗13 :From Aug. 2011 Production
∗14 :Before Aug. 2012 Production
∗16 :LHD From Aug. 2012 Production Single Fuel Tank Except China
∗17 :LHD From Aug. 2012 Production Single Fuel Tank China,
RHD From Aug. 2012 Production Single Fuel Tank China
∗18 :Double Fuel Tank
∗20 :w/ Crawl
V-R
E13(A),E14(B)
Combination Meter
14 A
+S
SRS
(∗12)
A/T OIL TEMP
Cruise
Oil Pressure
Charge
4WD (A/T) Center Diff. Lock (M/T)
Rear Diff. Lock
Check Engine
TRC OFF
VSC OFF
A-TRAC
Crawl
(∗20)
REVERSE
(∗12)
L
SW
S
CHG-
SW
RRSW
CHK
SI
CANH
CANL
22 A
6 A
12 B
3 B
2 B
1 B
7 B
13 A
10 A
9 A
W-B
(∗18)
35 EL1
B-Y
(∗12)
Airbag Sensor Assembly Center
LG-B
1 BE2
B28 Engine Oil Pressure SW
GR
Alternator
R-L(A/T)
GR(M/T)
4WD Control ECU
Transfer Indicator SW (Center Diff.)
L-Y
Transfer Indicator SW (Rear Diff.)
R-B
Engine ECU
GR-R
R
(RHD)
W
(RHD)
W
(LHD)
R
(LHD)
W(RHD)
R(RHD)
GR-R
2 PL1
10 PL2
1 PL1 (LHD)
9 PL2 (RHD)
2 eP1
1 eP1
W-B
(∗18)
L2


V-Y
W-L
V-R
LG-R
LG-B
E95
Junction Connector
Speed Sensors
FL+
FL-
FR+
FR-
RL+
RL-
RR+
RR-
A4(A),A5(B)
Skid Control ECU with Actuator
CANL
CANH
SP1
LBL
PKB
A43
Junction Connector
E92(B)
Junction Connector
A14
Brake Fluid Level
Warning SW
A29(A),A30(B)
Junction Connector
E22(B)
Parking Brake SW
W(RHD)
R(RHD)
GR-R
A1

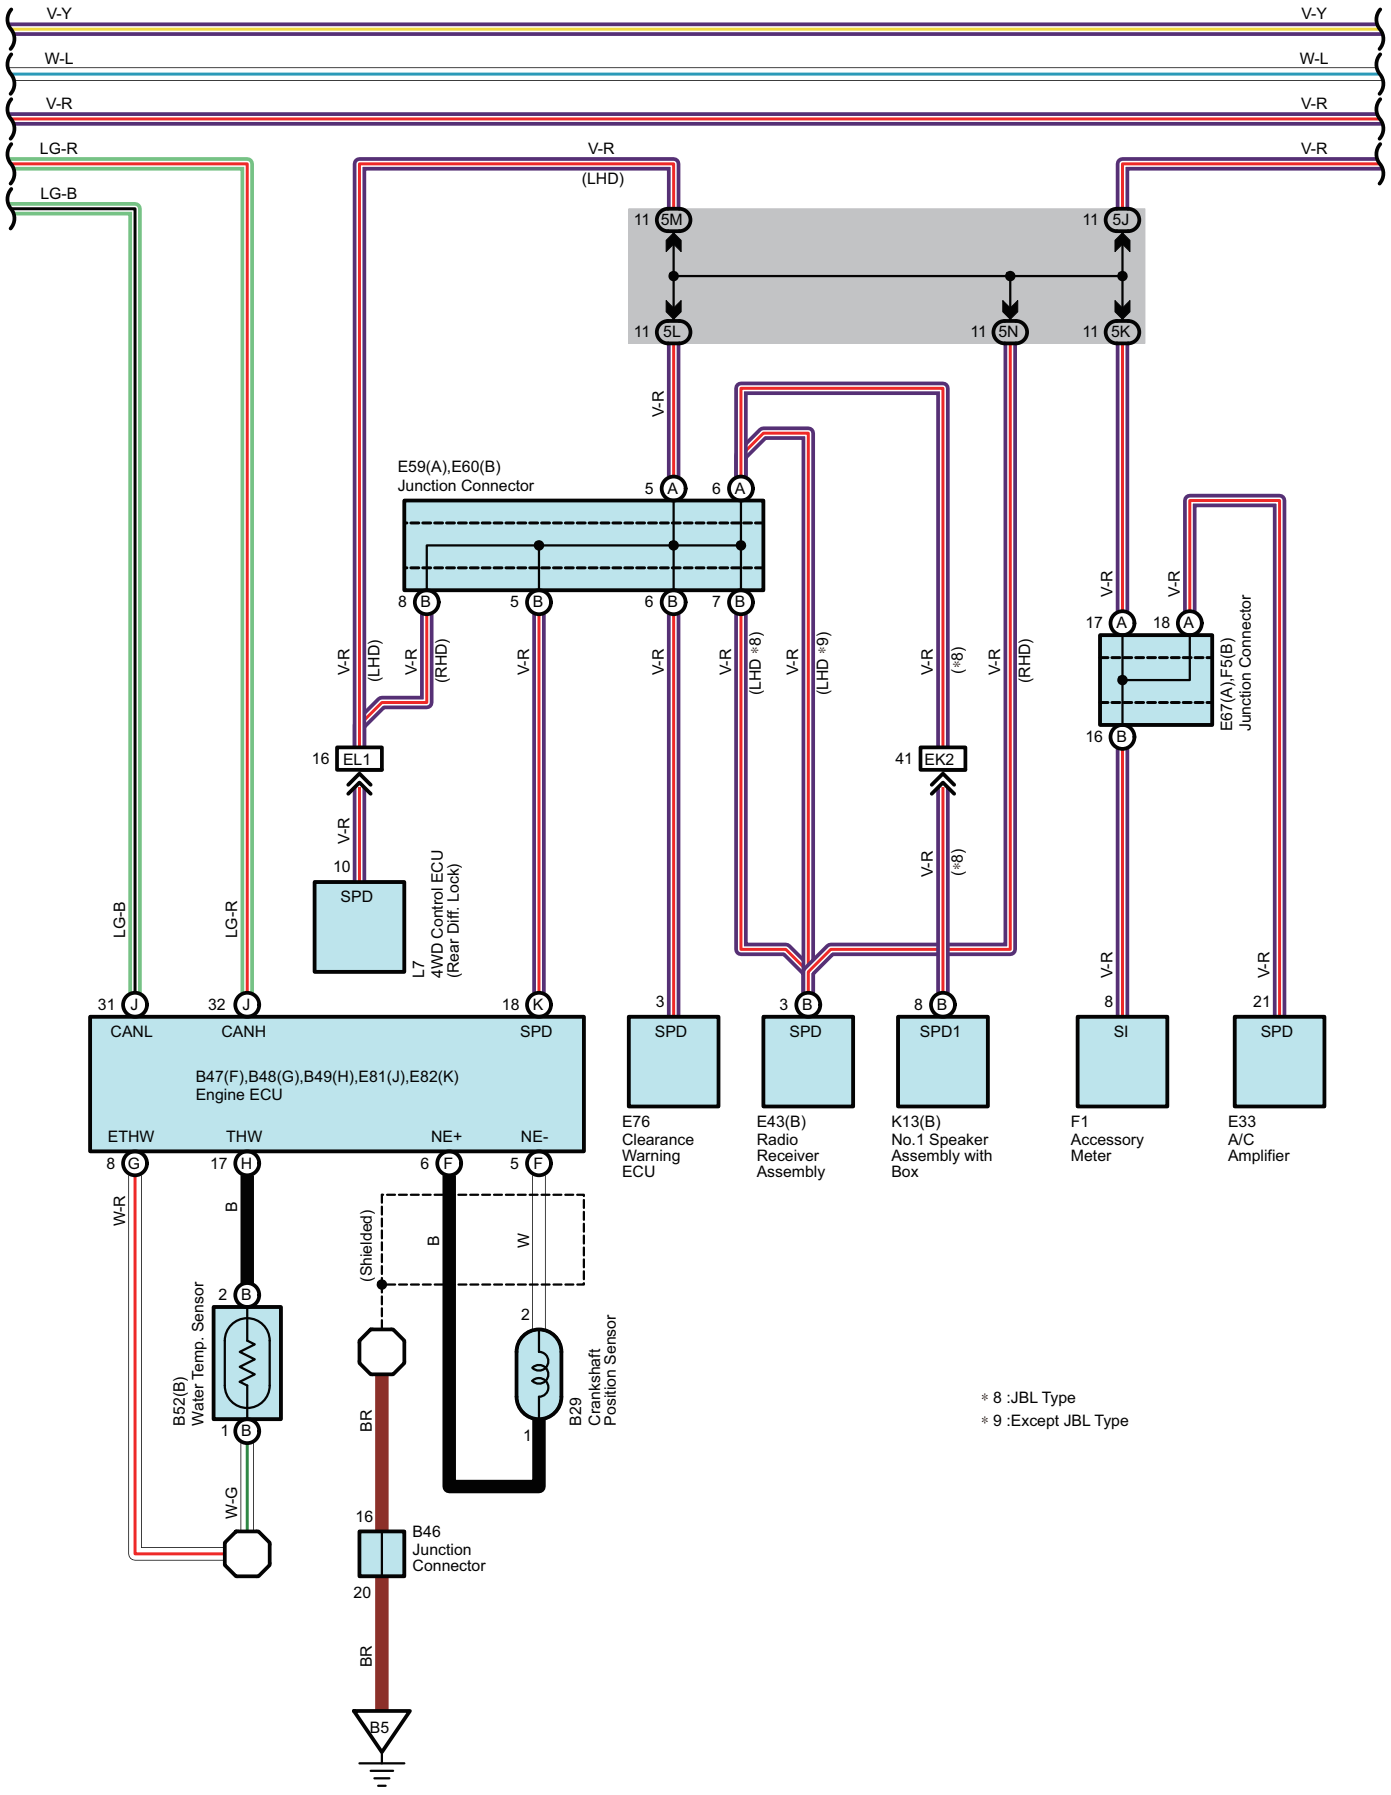

V-Y
W-L
V-R
LG-R
LG-B
V-R
(LHD)
11 5M
11 5L
11 5J
11 5N
11 5K
E59(A),E60(B)
Junction Connector
5 A
6 A
8 B
5 B
6 B
7 B
16 EL1
10
SPD
L7
4WD Control ECU
(Rear Diff. Lock)
41 EK2
17 A
18 A
16 B
E67(A),F5(B)
Junction Connector
31 J
32 J
18 K
CANL
CANH
SPD
B47(F),B48(G),B49(H),E81(J),E82(K)
Engine ECU
3
SPD
E76
Clearance
Warning
ECU
3 B
SPD
E43(B)
Radio
Receiver
Assembly
8 B
SPD1
K13(B)
No.1 Speaker
Assembly with
Box
8
SI
F1
Accessory
Meter
21
SPD
E33
A/C
Amplifier
ETHW
THW
NE+
NE-
8 G
17 H
6 F
5 F
W-R
B
(Shielded)
B
W
2 B
1 B
B52(B)
Water Temp. Sensor
2
1
B29
Crankshaft
Position Sensor
W-G
BR
16
B46
Junction
Connector
20
BR
B5
(LHD *8)
(LHD *9)
(*8)
(RHD)
* 8 :JBL Type
* 9 :Except JBL Type

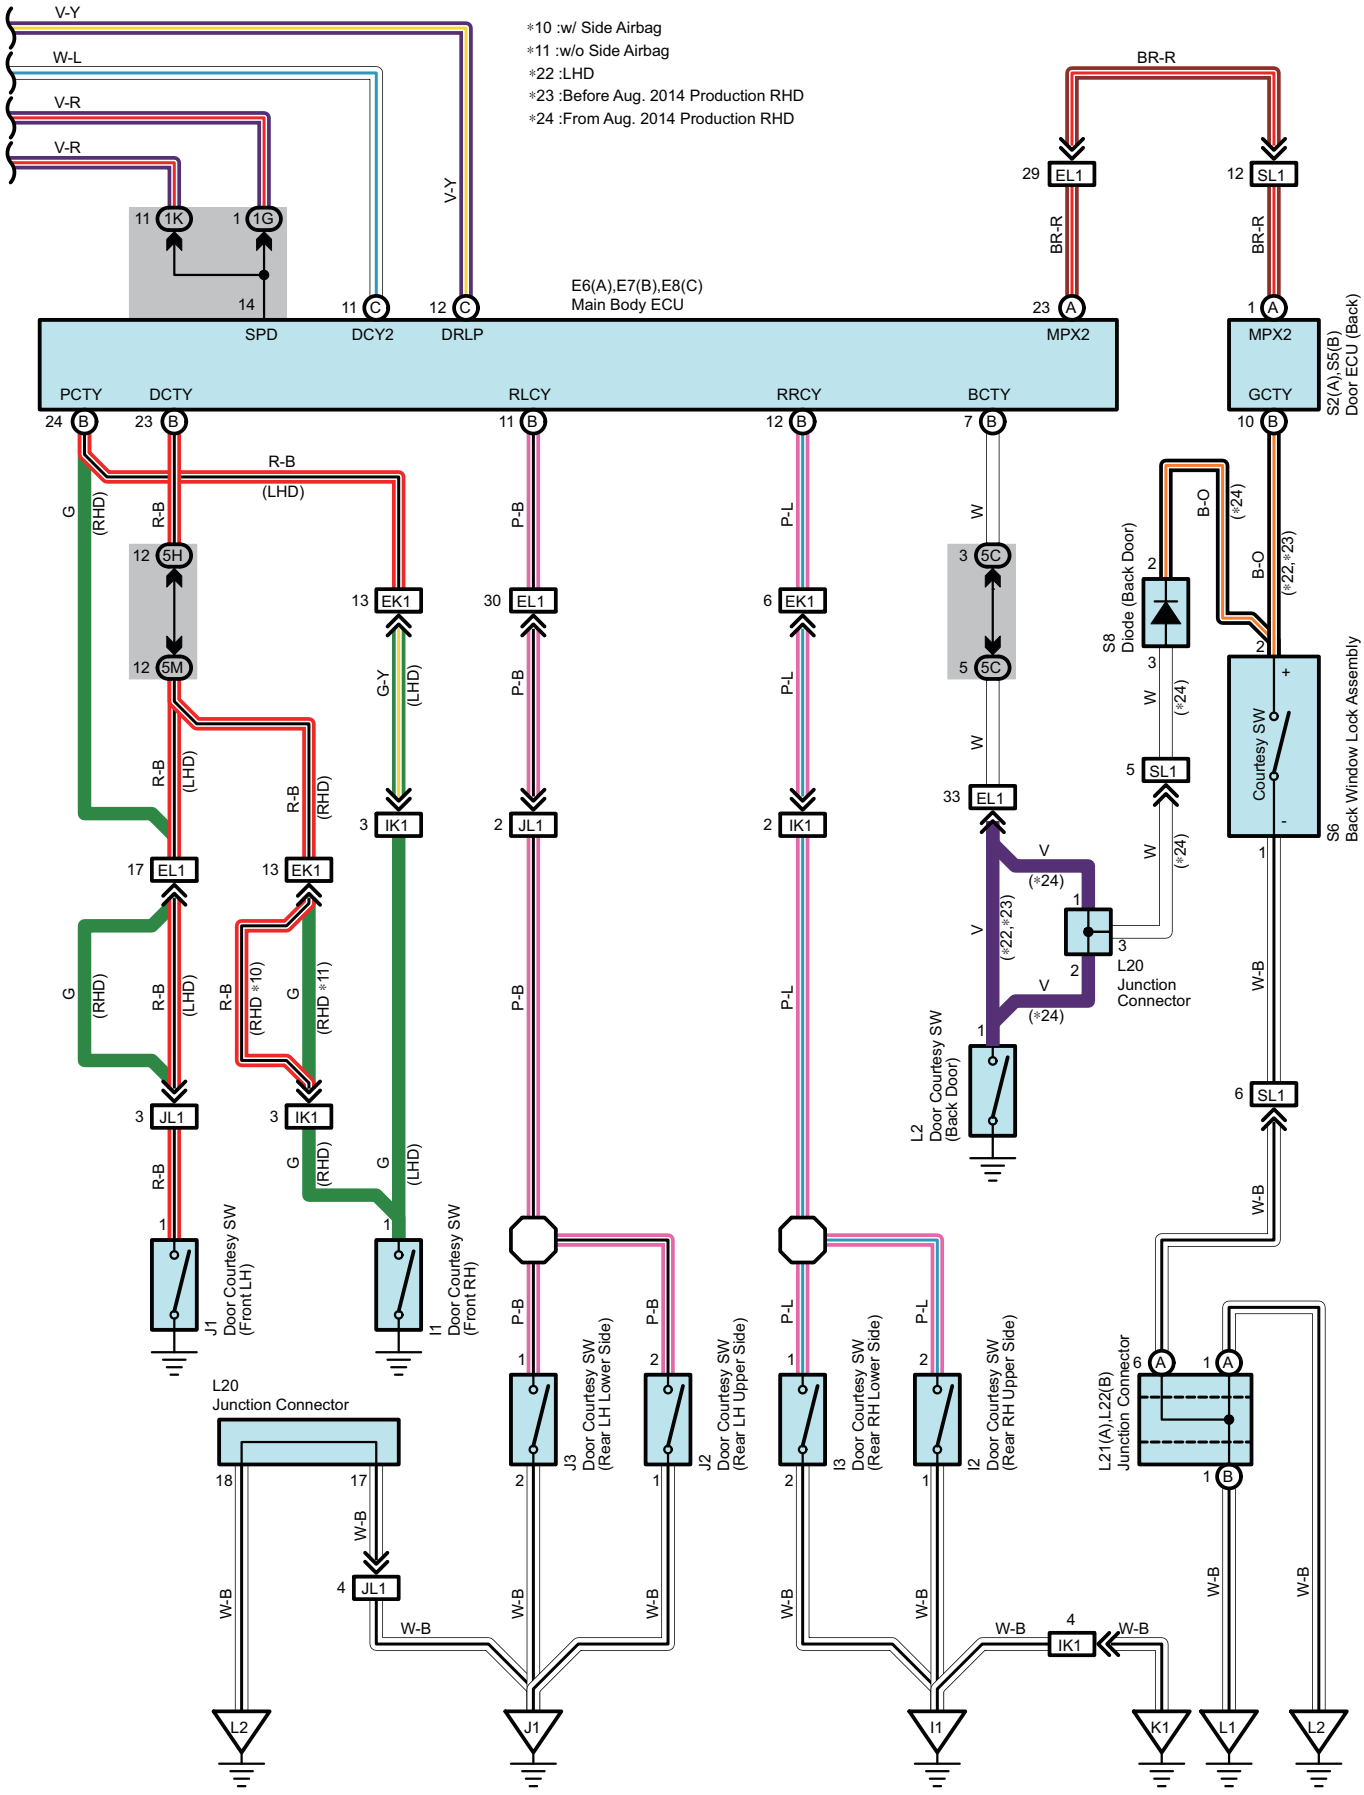
*10 :w/ Side Airbag
*11 :w/o Side Airbag
*22 :LHD
*23 :Before Aug. 2014 Production RHD
*24 :From Aug. 2014 Production RHD
E6(A),E7(B),E8(C)
Main Body ECU
SPD
DCY2
DRLP
MPX2
PCTY
DCTY
RLCY
RRCY
BCTY
GCTY
S2(A),S5(B)
Door ECU (Back)
S8
Diode (Back Door)
S6
Back Window Lock Assembly
Courtesy SW
L20
Junction Connector
L2
Door Courtesy SW
(Back Door)
J1
Door Courtesy SW
(Front LH)
I1
Door Courtesy SW
(Front RH)
J3
Door Courtesy SW
(Rear LH Lower Side)
J2
Door Courtesy SW
(Rear LH Upper Side)
I3
Door Courtesy SW
(Rear RH Lower Side)
I2
Door Courtesy SW
(Rear RH Upper Side)
L21(A),L22(B)
Junction Connector
L2
J1
I1
K1
L1
L2


A4
Black

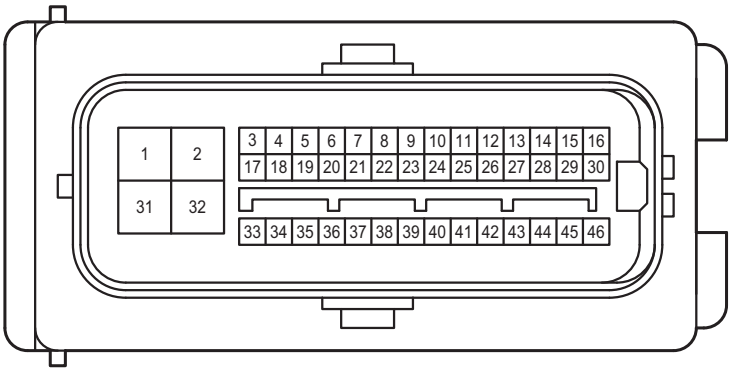


A5
Black

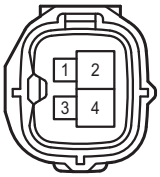


A14
Gray

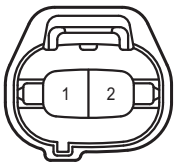


A29
Blue

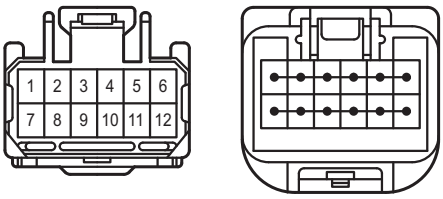

A30
Blue

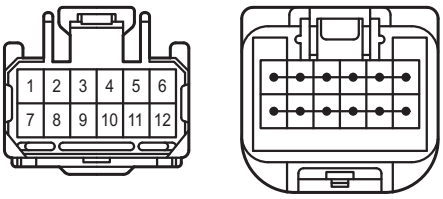


A43
Gray

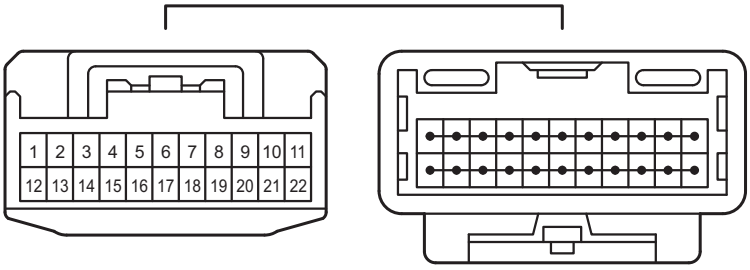


B28
Gray




B29
Black

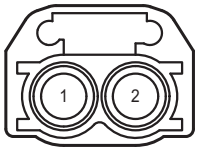


B35
Gray

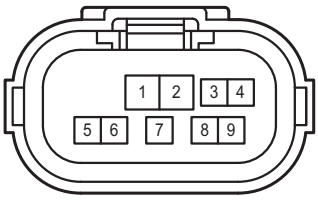


B42
Gray

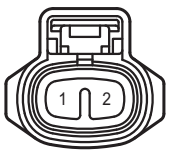


B46
White

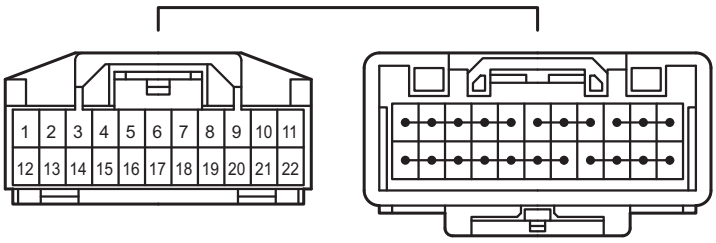


B47
White

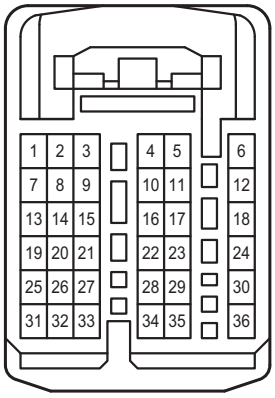

B48
White

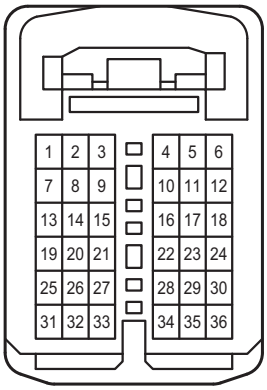


B49
White

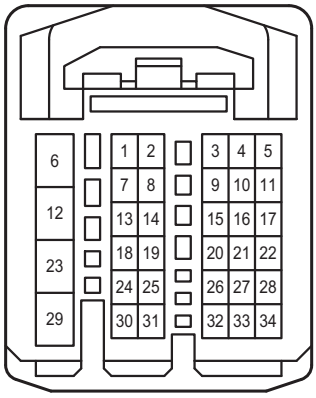


B52
Black




B65
Gray

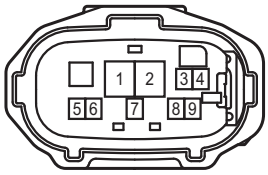


E6
White

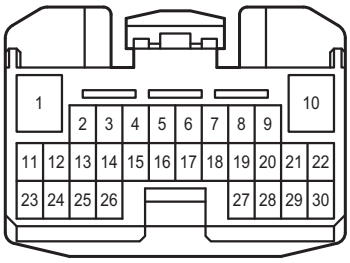


E7
White

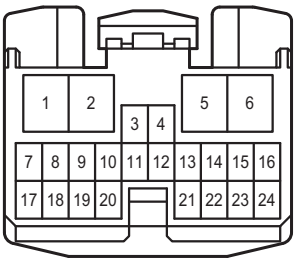


E8
White

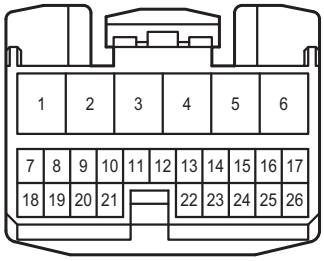

E13
White

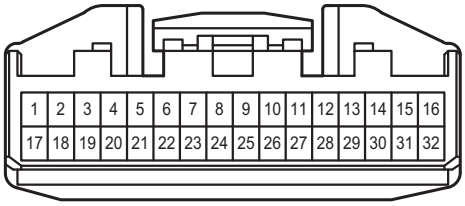


E14
White

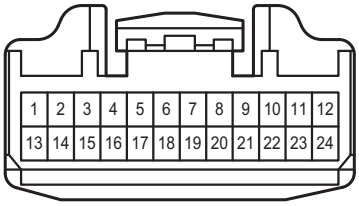


E22
Black




E33
White

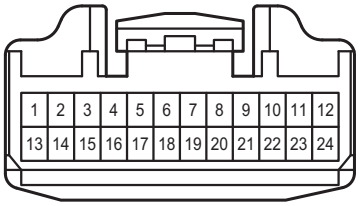


E43
White

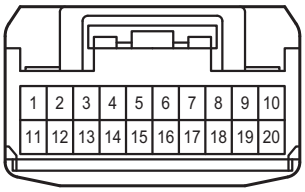


E50
Black

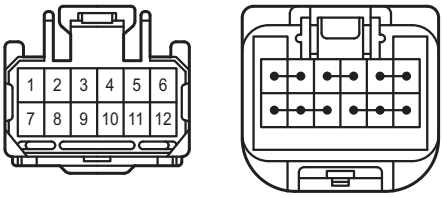


E51
Black

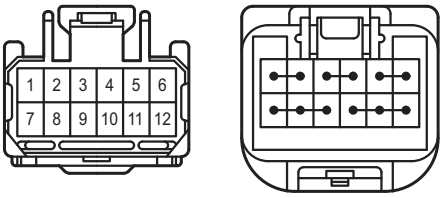


E52
White

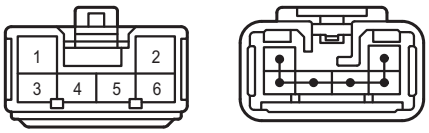


E57
Black

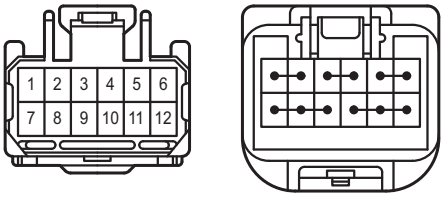


E59
Blue

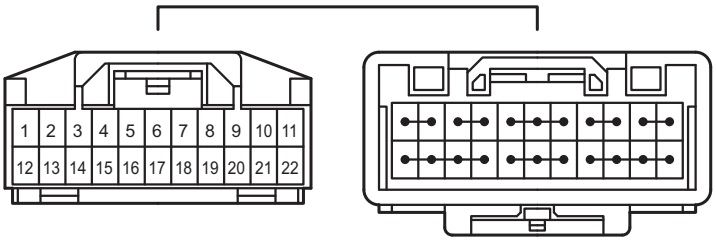


E60
Blue

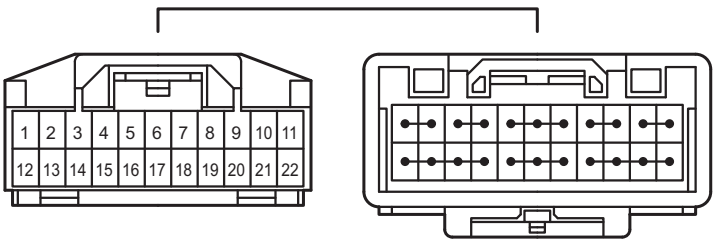


E67
Blue

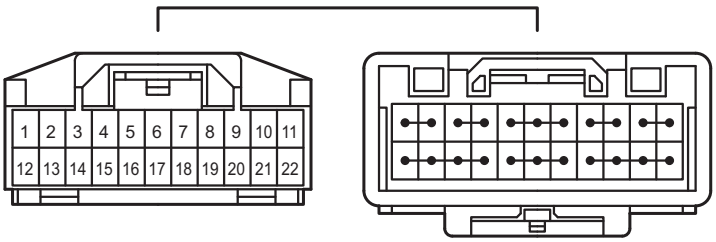


E76
White

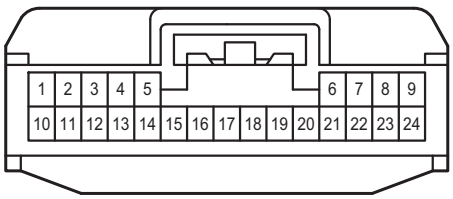


E81
White

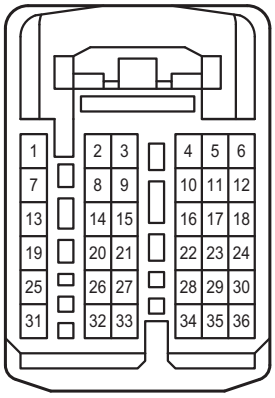


E82
White

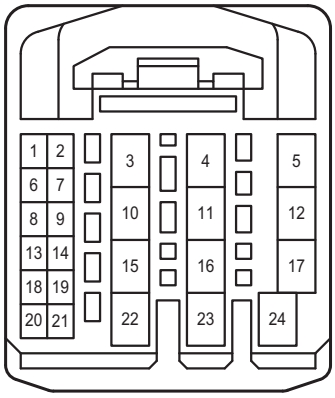

E92
White

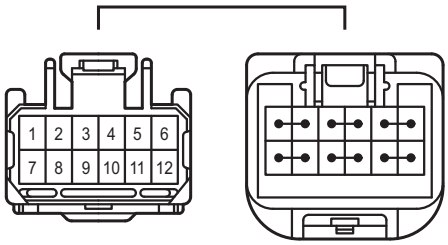


E95
Gray

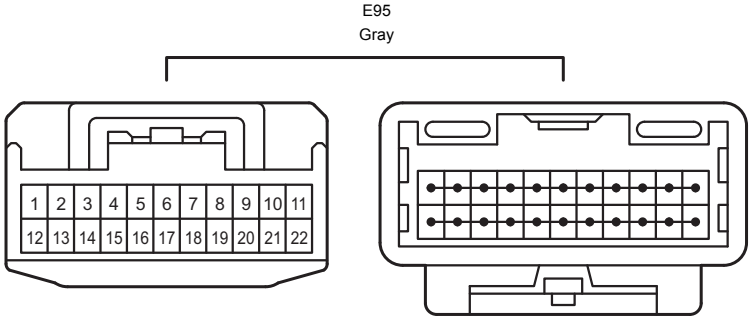

F1
White



F5
Blue

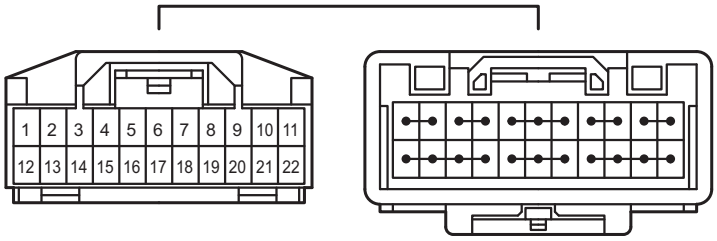

I1
Black



I2
White



I3
Gray



J1
Black




J2
White



J3
Gray



K13
White

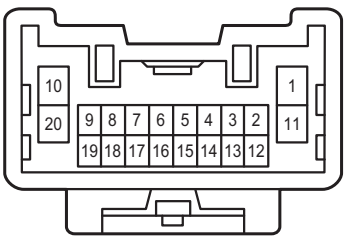


L2
Black




L5
White




L7
White

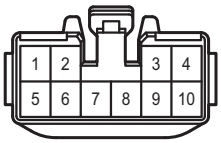


L20
Black

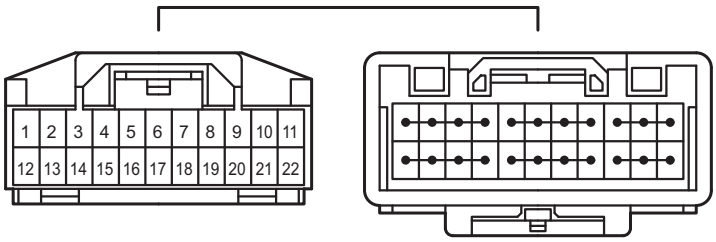

L21
Gray

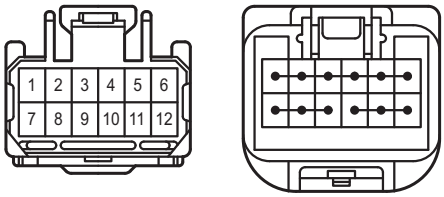

L22
Gray

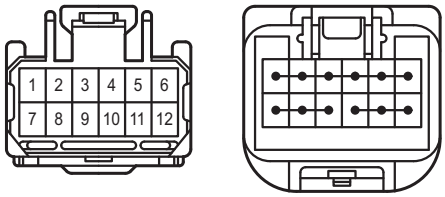

L28
Gray




P2
Gray




S2
White




S5
White

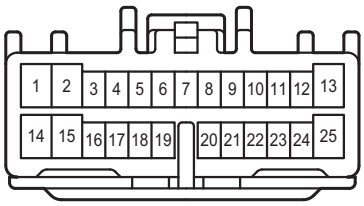

S6
White




S8
Gray




e1
Black




1 C
White

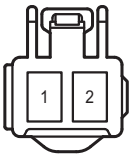


1 E
White

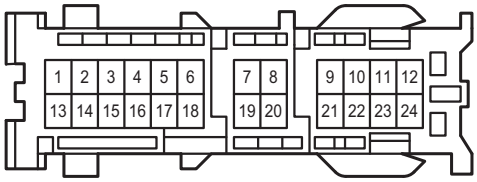


1 G
White

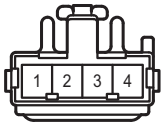


1 J
White

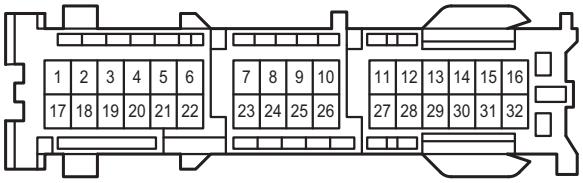


1 K
White

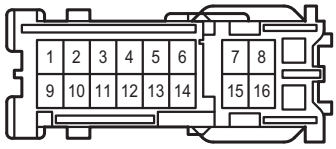


1 L
White

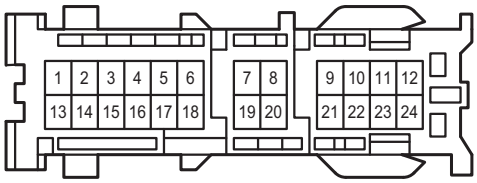


5 A
White




5 C
White




5 D
White




5 E
White




5 H
White




5 J
White




5 K
White




5 L
White




5 M
White




5 N
White




6 D
White




6 F
White




6 G
White




BE1
White

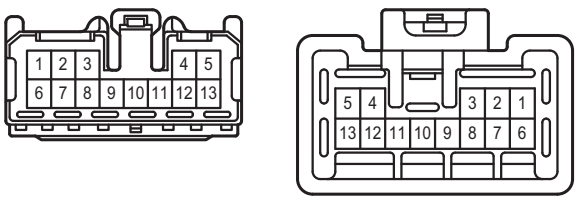


BE2
White

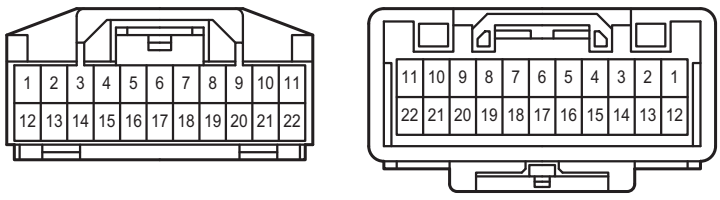

EA1
Blue

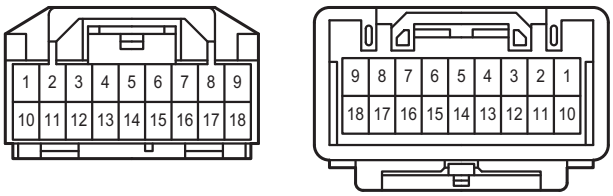



EA2
Gray

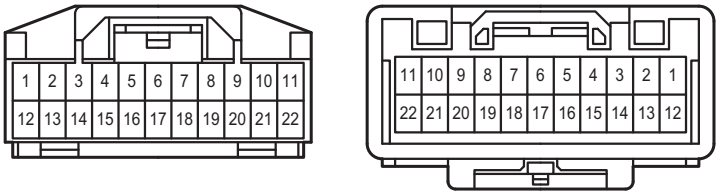


EA4
White


Gray

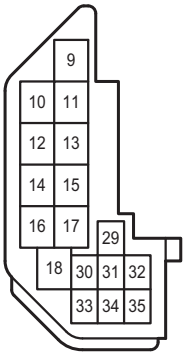

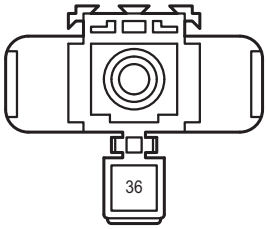


Gray

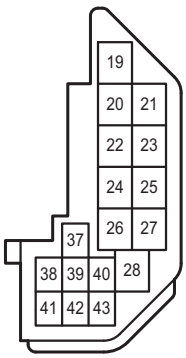


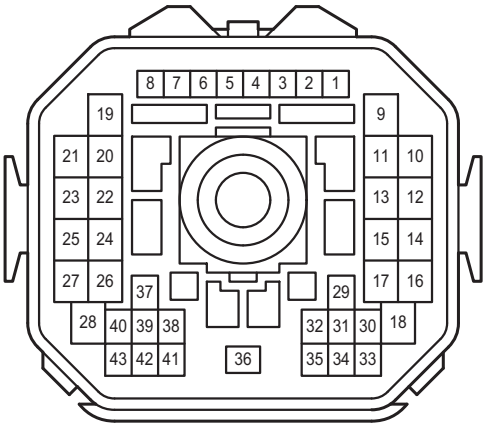


EA8
Black

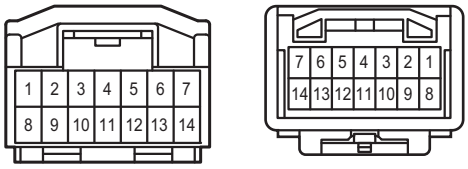

EE1
White

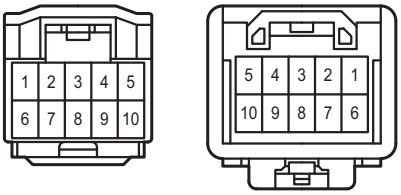


EK1
White

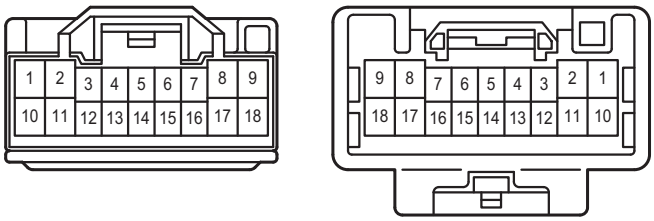

EK2
White

Gray


Gray

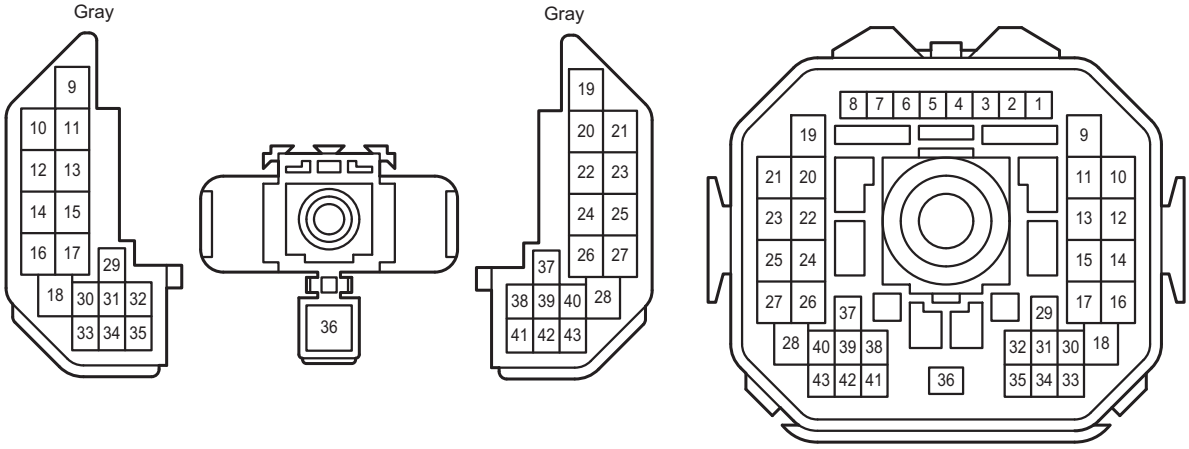


EL1
White

Gray


Gray

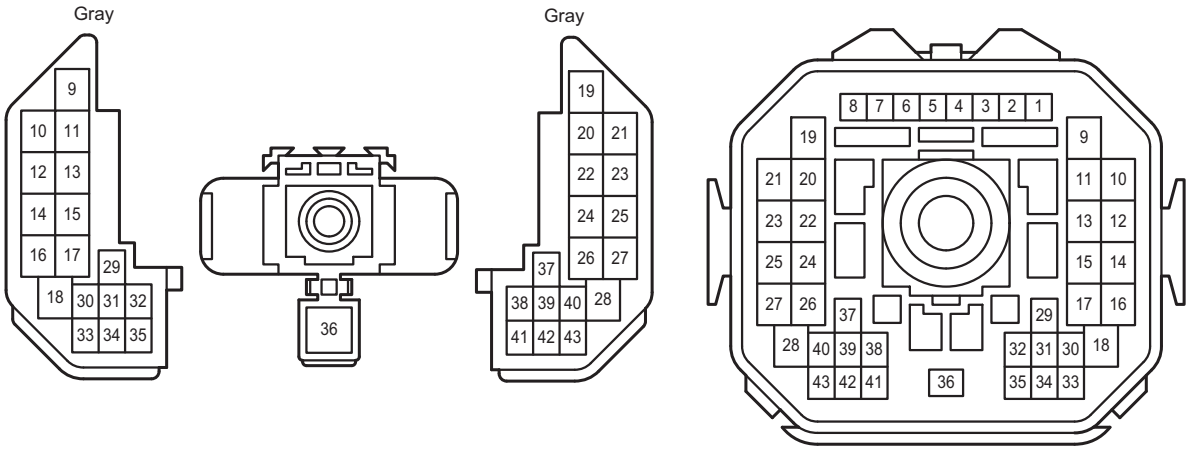


EL2
White

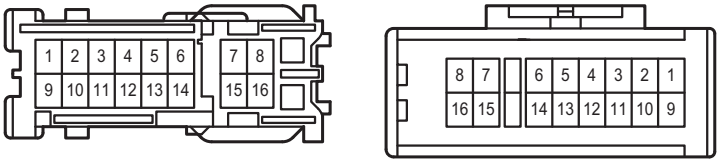


IK1
White

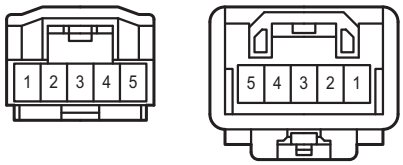


JL1
White

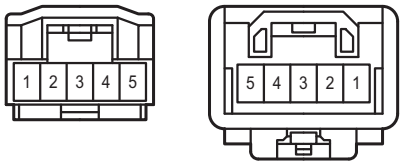


PL1
Gray

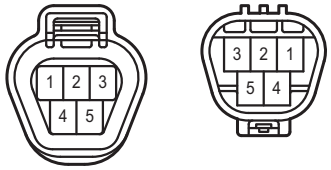

PL2
Gray

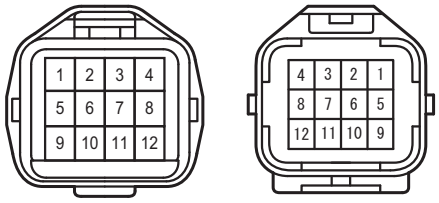

SL1
White

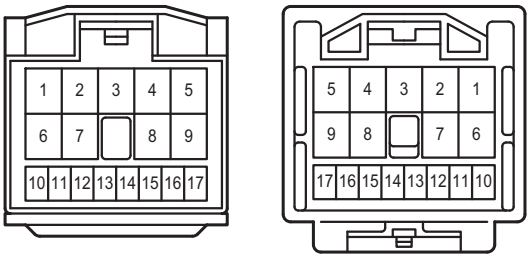

eP1
Gray Black

