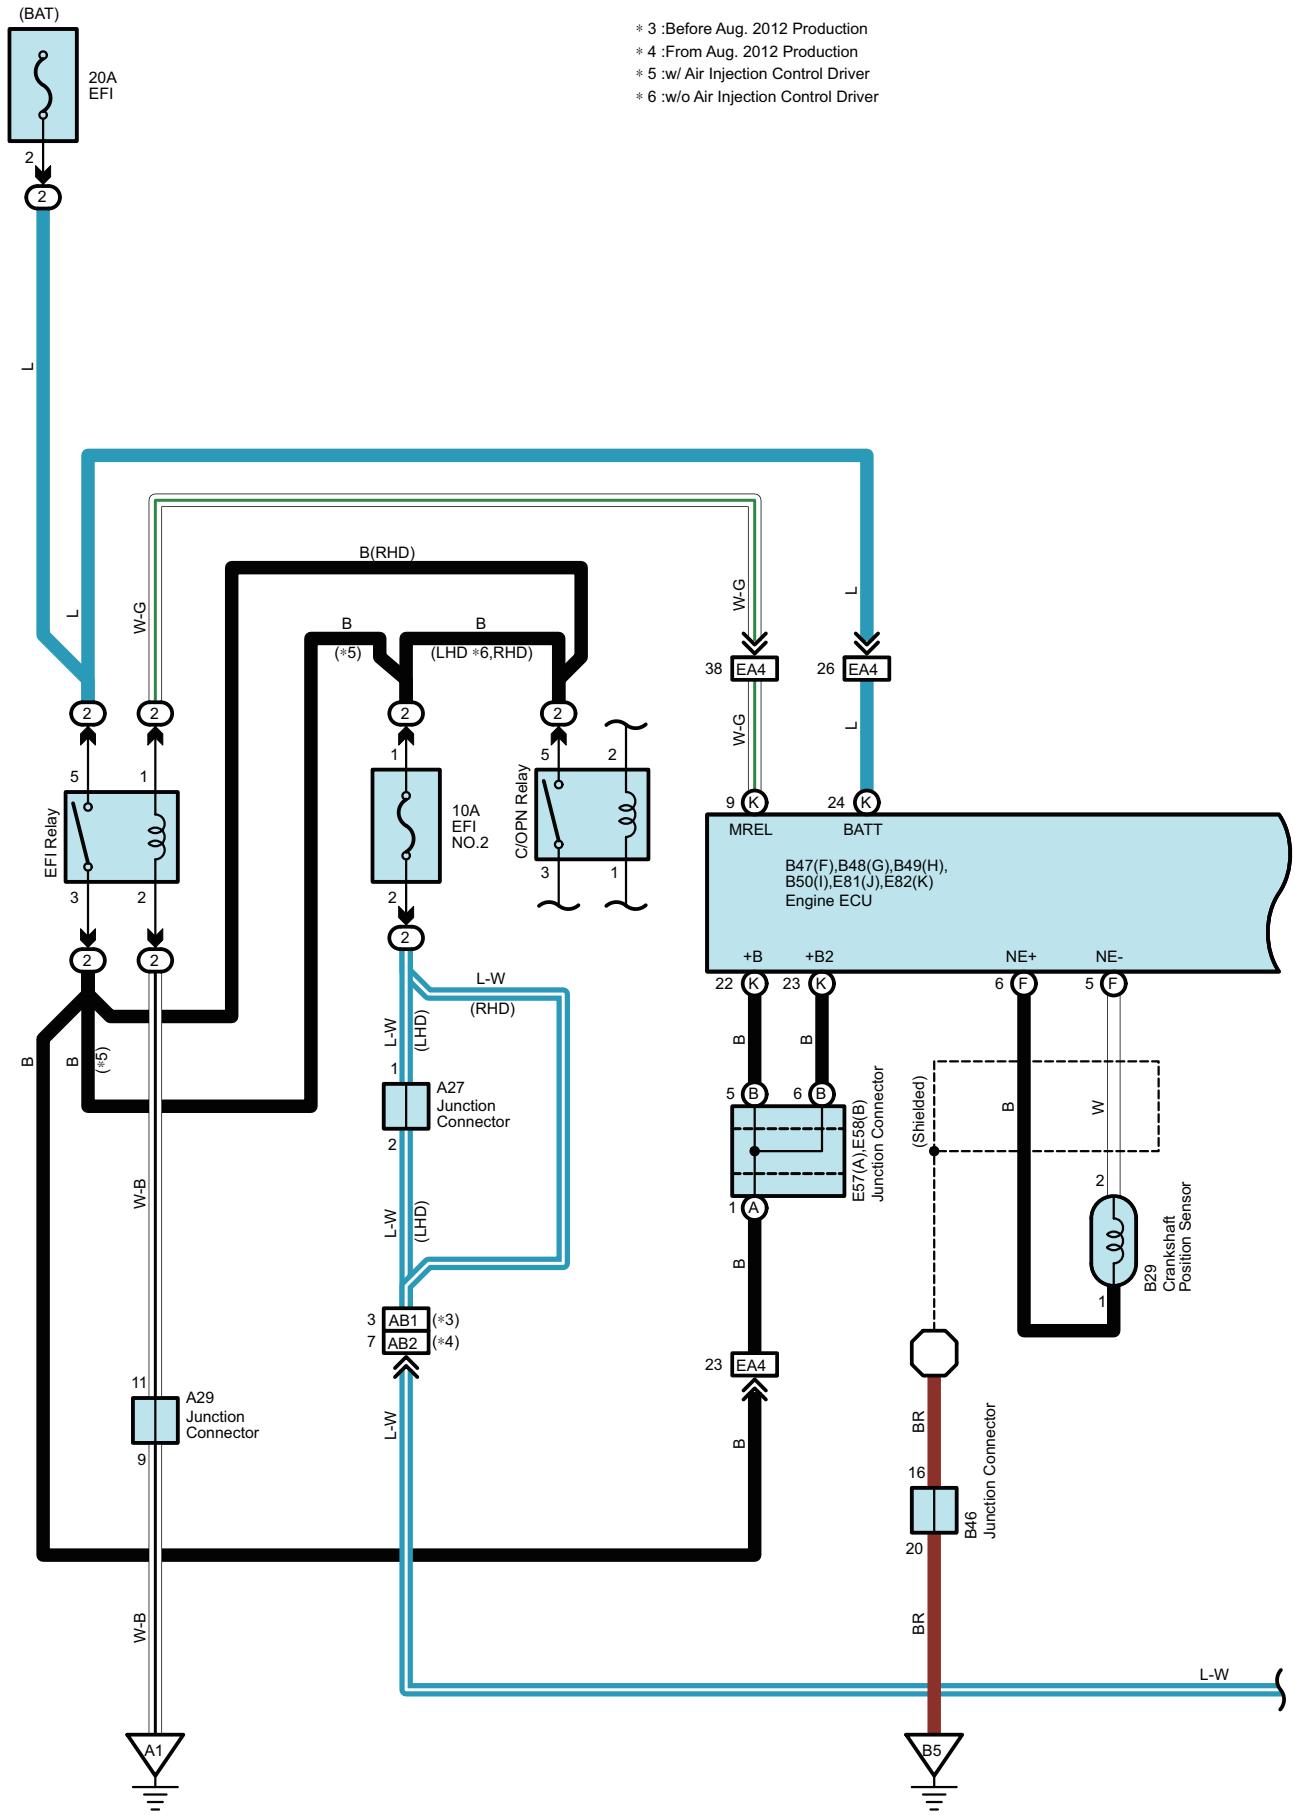
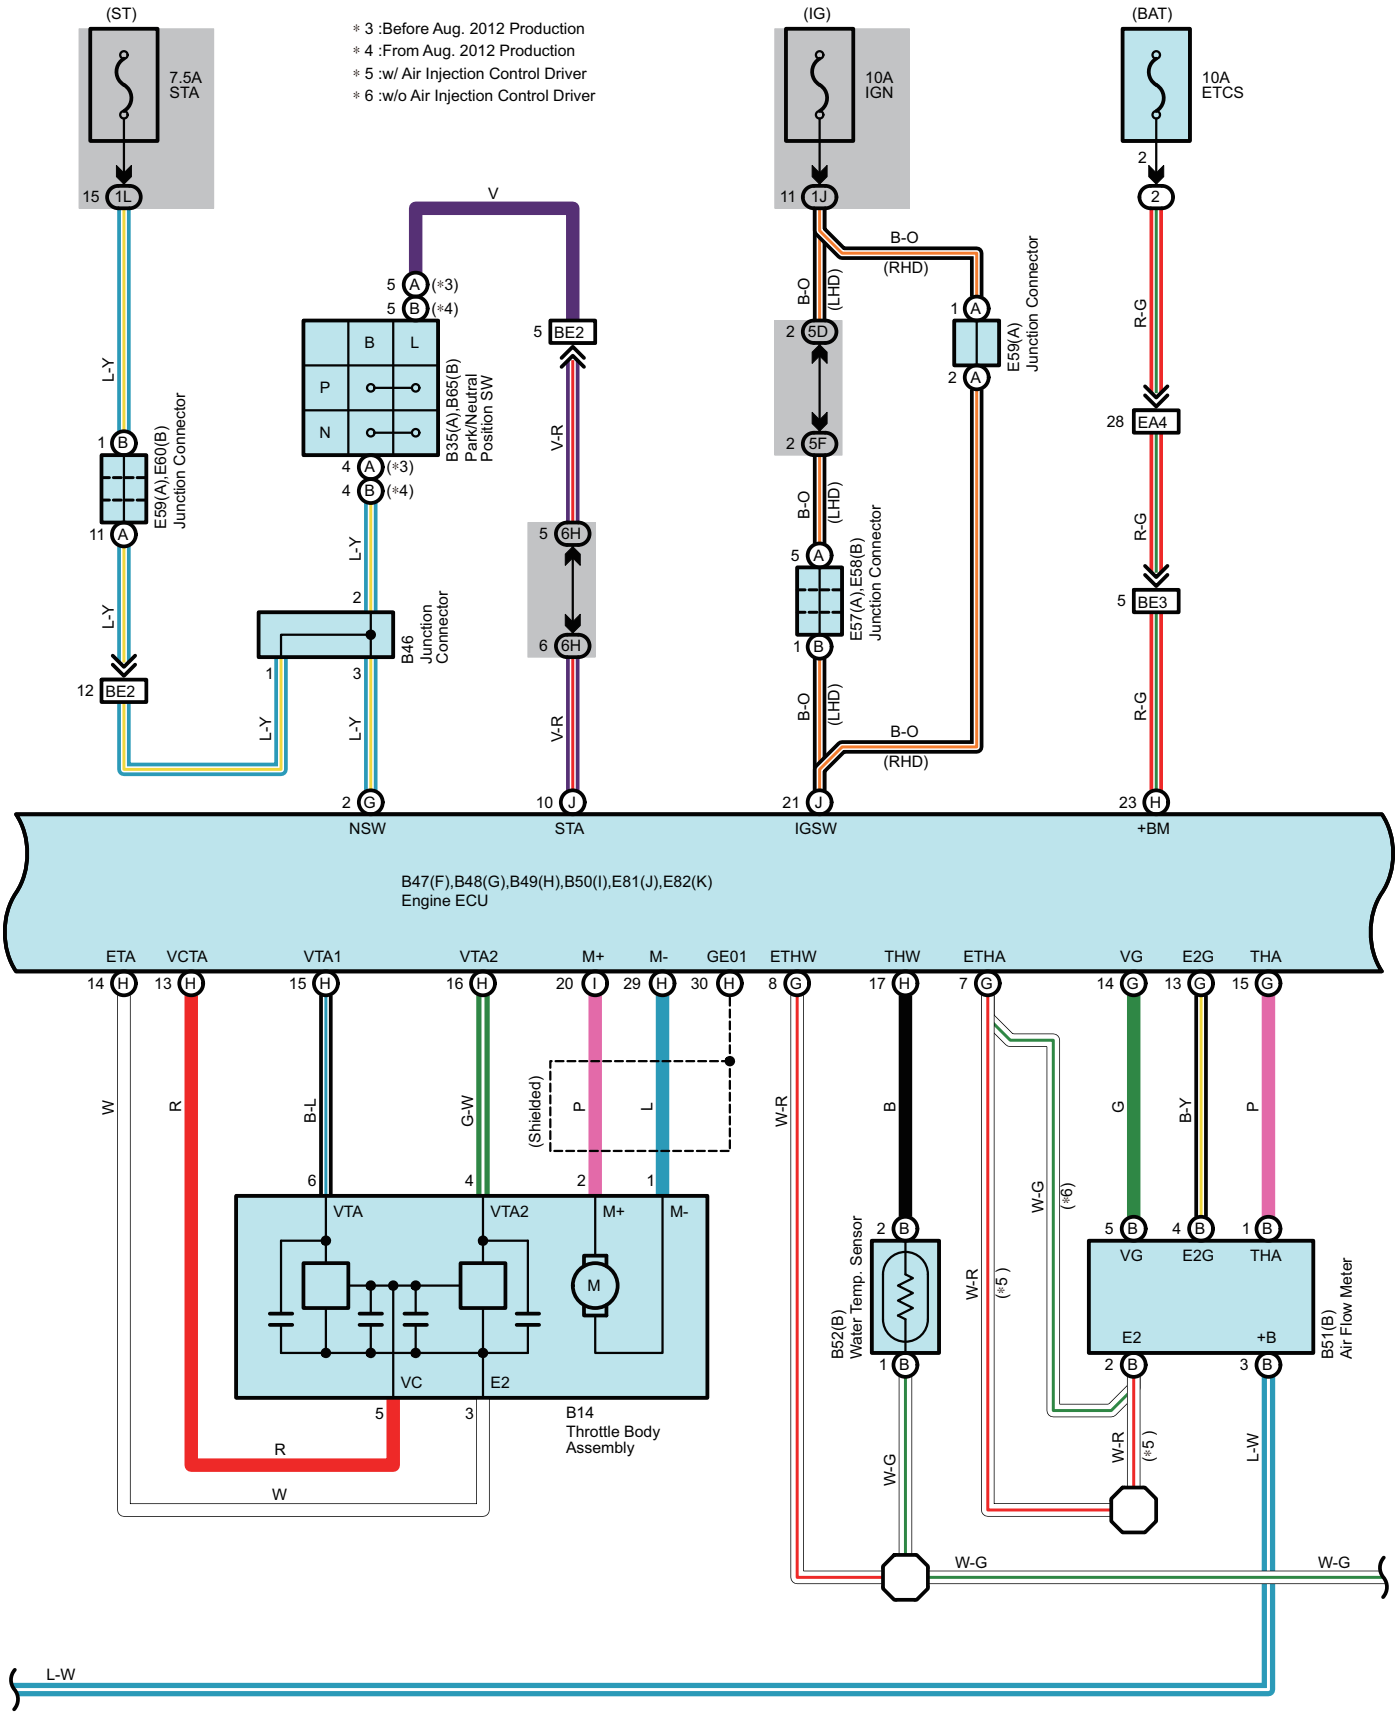
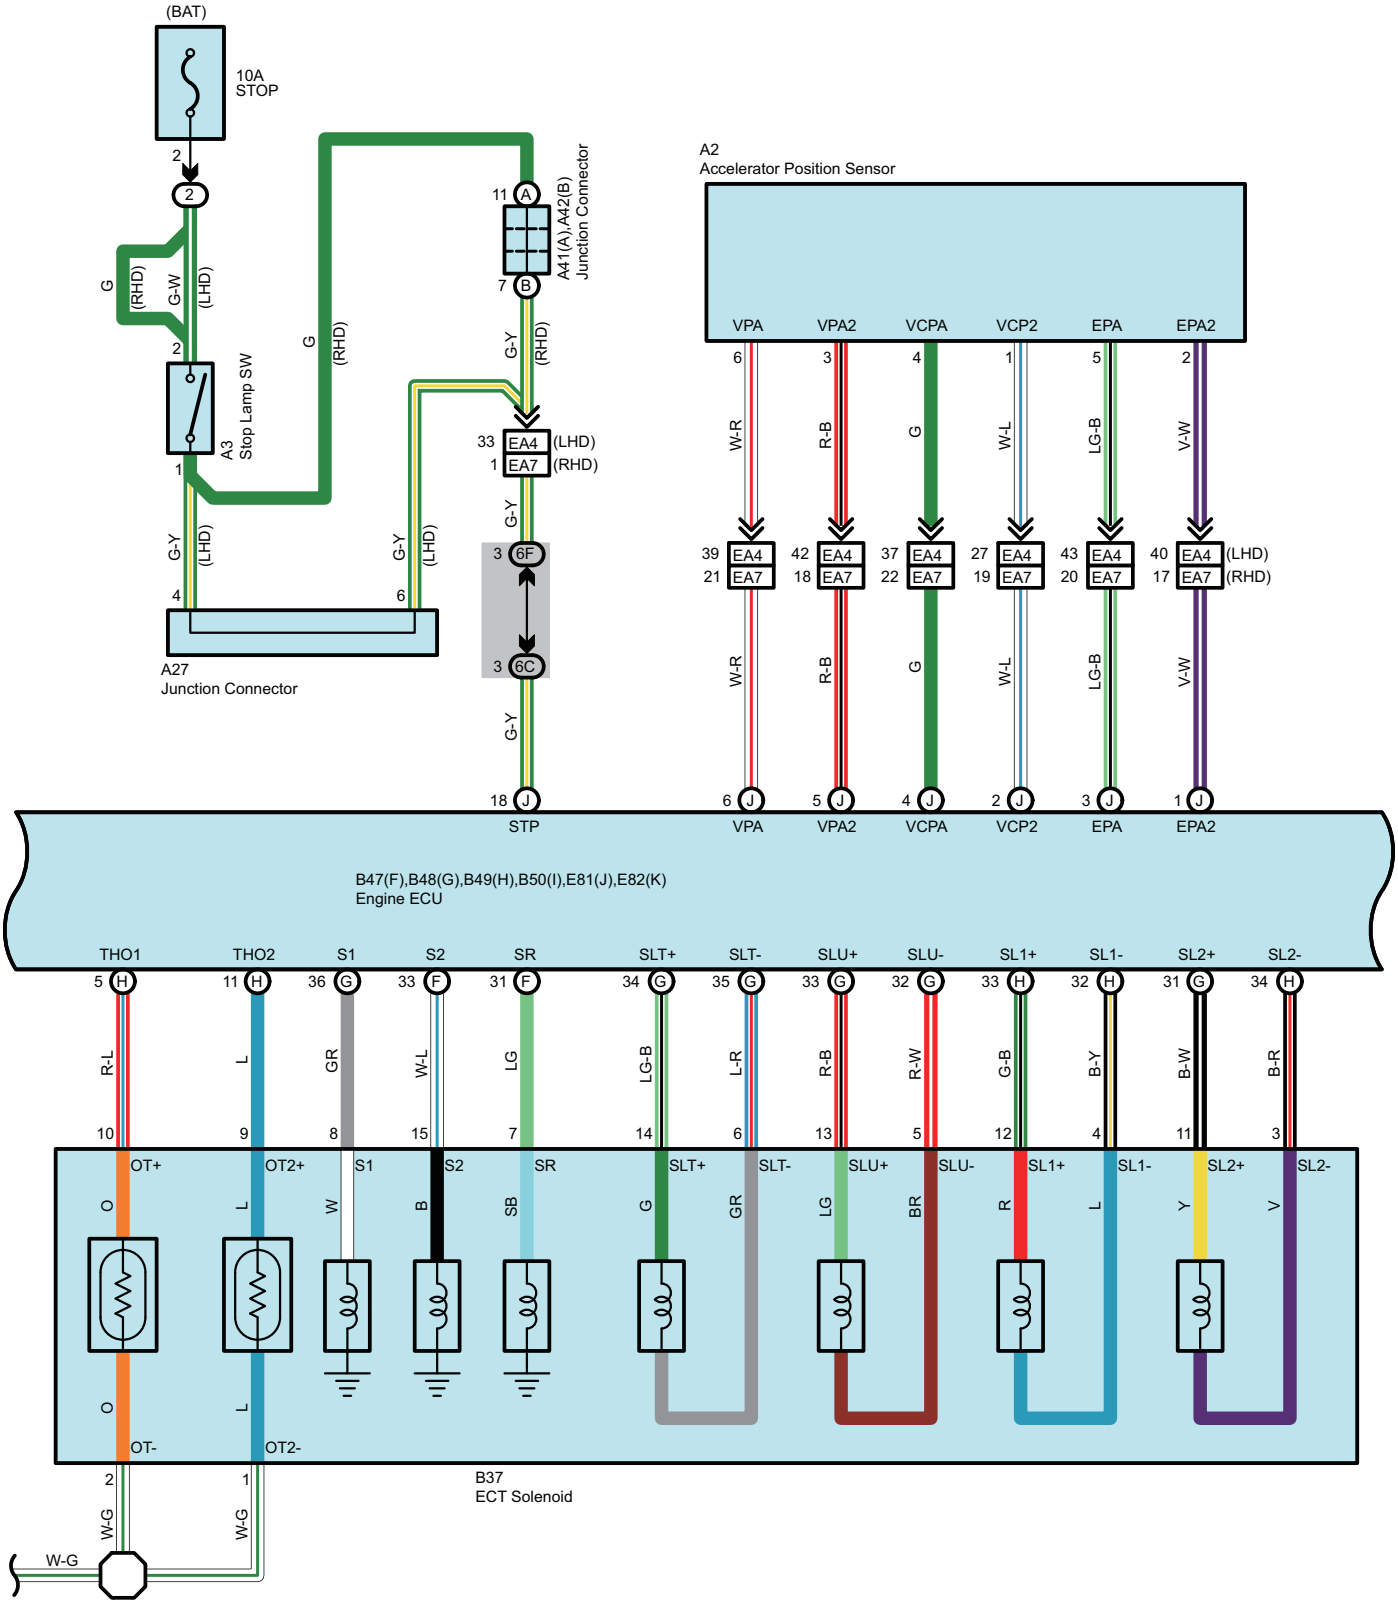
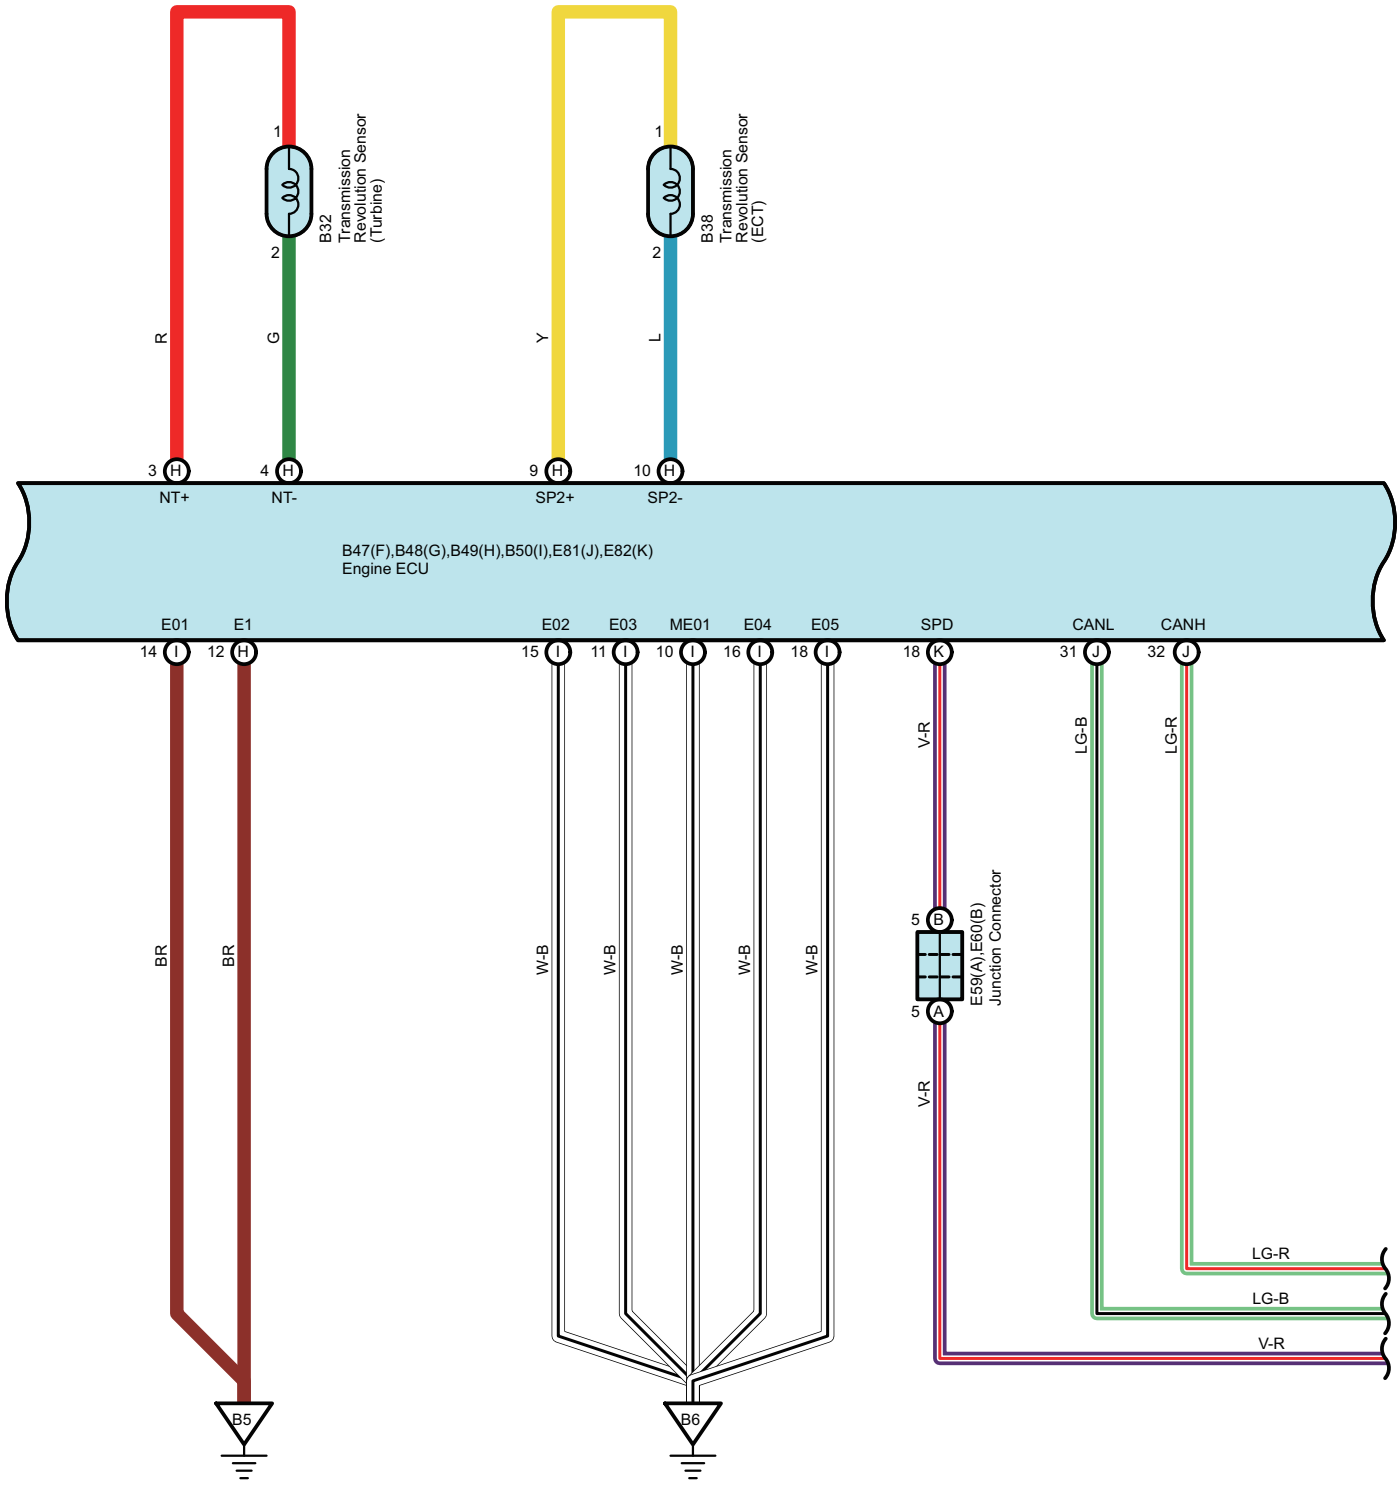
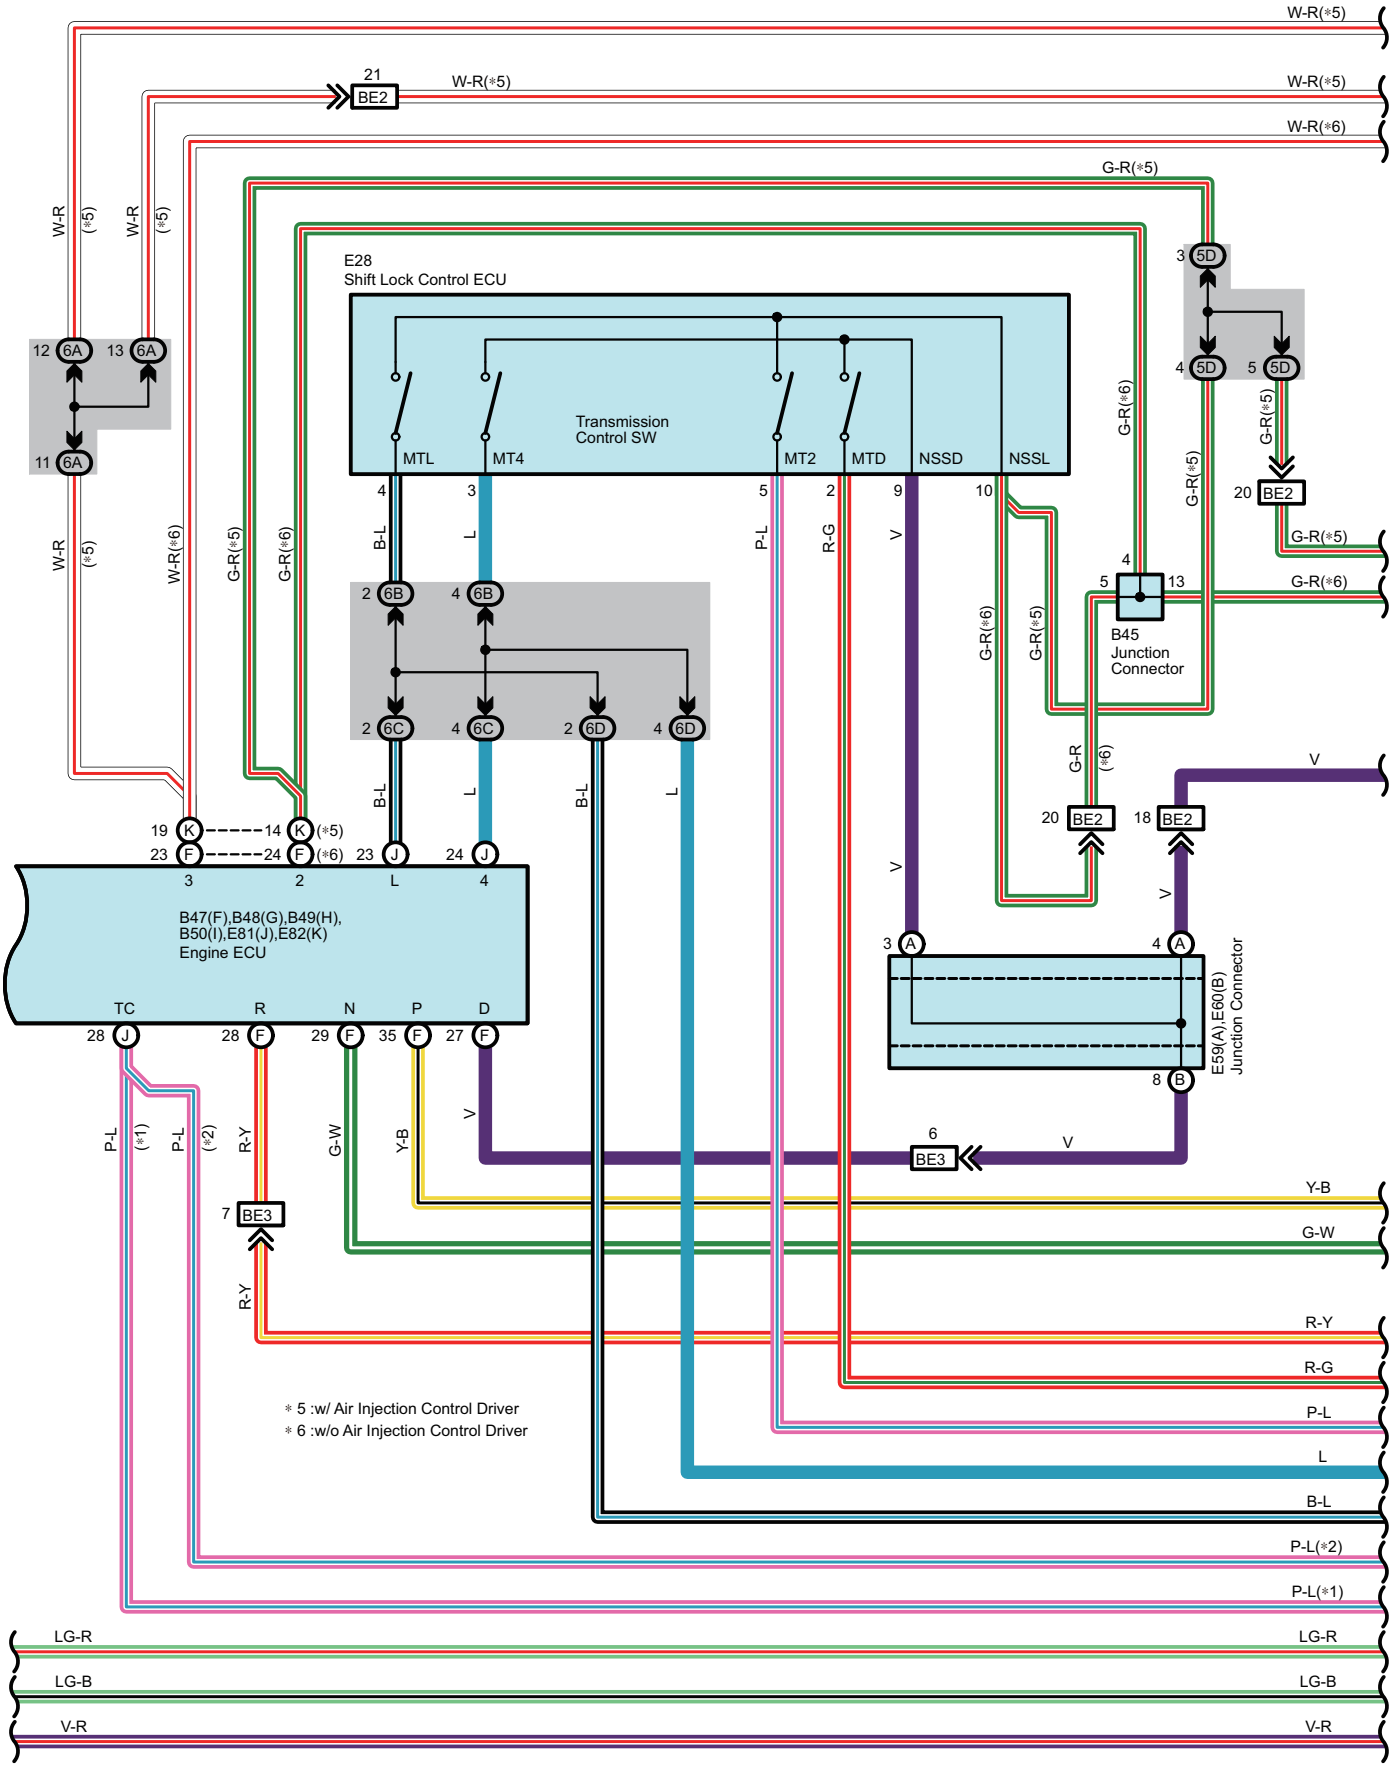



* 3 :Before Aug. 2012 Production
* 4 :From Aug. 2012 Production
* 5 :w/ Air Injection Control Driver
* 6 :w/o Air Injection Control Driver



(ST)
7.5A
STA
15 1L
L-Y
1 B
E59(A),E60(B)
Junction Connector
11 A
L-Y
12 BE2
L-Y
L-Y
1
3
B46
Junction
Connector
2
L-Y
2 G
NSW
V
5 A (*3)
5 B (*4)
B L
P
N
B35(A),B65(B)
Park/Neutral
Position SW
4 A (*3)
4 B (*4)
5 BE2
V-R
5 6H
6 6H
V-R
10 J
STA
* 3 :Before Aug. 2012 Production
* 4 :From Aug. 2012 Production
* 5 :w/ Air Injection Control Driver
* 6 :w/o Air Injection Control Driver
(IG)
10A
IGN
11 1J
B-O
(LHD)
B-O
(RHD)
2 5D
2 5F
B-O
(LHD)
5 A
1 B
E57(A),E58(B)
Junction Connector
B-O
(LHD)
B-O
(RHD)
21 J
IGSW
1 A
2 A
E59(A)
Junction Connector
(BAT)
10A
ETCS
2
2
R-G
28 EA4
R-G
5 BE3
R-G
23 H
+BM
B47(F),B48(G),B49(H),B50(I),E81(J),E82(K)
Engine ECU
ETA
14 H
W
VCTA
13 H
R
VTA1
15 H
B-L
6
VTA2
16 H
G-W
4
M+
20 I
(Shielded)
P
2
M-
29 H
L
1
GE01
30 H
VTA
VTA2
M+
M-
M
VC
E2
5
3
R
W
B14
Throttle Body
Assembly
ETHW
8 G
W-R
THW
17 H
B
2 B
1 B
B52(B)
Water Temp. Sensor
ETHA
7 G
W-G
(*6)
W-R
(*5)
W-G
(*5)
W-G
W-G
VG
14 G
G
E2G
13 G
B-Y
THA
15 G
P
5 B
4 B
1 B
VG
E2G
THA
E2
+B
2 B
3 B
B51(B)
Air Flow Meter
L-W
L-W



(BAT)
10A
STOP
A3
Stop Lamp SW
A27
Junction Connector
A41(A),A42(B)
Junction Connector
A2
Accelerator Position Sensor
VPA
VPA2
VCPA
VCP2
EPA
EPA2
STP
B47(F),B48(G),B49(H),B50(I),E81(J),E82(K)
Engine ECU
THO1
THO2
S1
S2
SR
SLT+
SLT-
SLU+
SLU-
SL1+
SL1-
SL2+
SL2-
OT+
OT2+
OT-
OT2-
B37
ECT Solenoid


B32
Transmission
Revolution Sensor
(Turbine)
B38
Transmission
Revolution Sensor
(ECT)
R
G
Y
L
3 H NT+
4 H NT-
9 H SP2+
10 H SP2-
B47(F),B48(G),B49(H),B50(I),E81(J),E82(K)
Engine ECU
E01
E1
E02
E03
ME01
E04
E05
SPD
CANL
CANH
14 I
12 H
15 I
11 I
10 I
16 I
18 I
18 K
31 J
32 J
BR
BR
W-B
W-B
W-B
W-B
W-B
V-R
LG-B
LG-R
5 B
5 A
E59(A),E60(B)
Junction Connector
V-R
LG-R
LG-B
V-R
B5
B6



W-R(*5)
W-R(*5)
W-R(*6)
G-R(*5)
21
BE2
W-R
(*5)
W-R
(*5)
E28
Shift Lock Control ECU
Transmission
Control SW
MTL
MT4
MT2
MTD
NSSD
NSSL
12 6A
13 6A
11 6A
3 5D
4 5D
5 5D
20 BE2
G-R(*6)
G-R(*5)
G-R(*5)
G-R(*6)
W-R
(*5)
W-R(*6)
G-R(*5)
G-R(*6)
4
5
13
B45
Junction
Connector
2 6B
4 6B
2 6C
4 6C
2 6D
4 6D
B-L
L
B-L
L
P-L
R-G
V
G-R
(*6)
20 BE2
18 BE2
V
V
19 K
14 K (*5)
23 F
24 F (*6)
23 J
24 J
B47(F),B48(G),B49(H),
B50(I),E81(J),E82(K)
Engine ECU
TC
R
N
P
D
28 J
28 F
29 F
35 F
27 F
3 A
4 A
8 B
E59(A),E60(B)
Junction Connector
6
BE3
V
P-L
(*1)
P-L
(*2)
R-Y
G-W
Y-B
V
7 BE3
R-Y
Y-B
G-W
R-Y
R-G
P-L
L
B-L
P-L(*2)
P-L(*1)
LG-R
LG-R
LG-B
LG-B
V-R
V-R
* 5 :w/ Air Injection Control Driver
* 6 :w/o Air Injection Control Driver

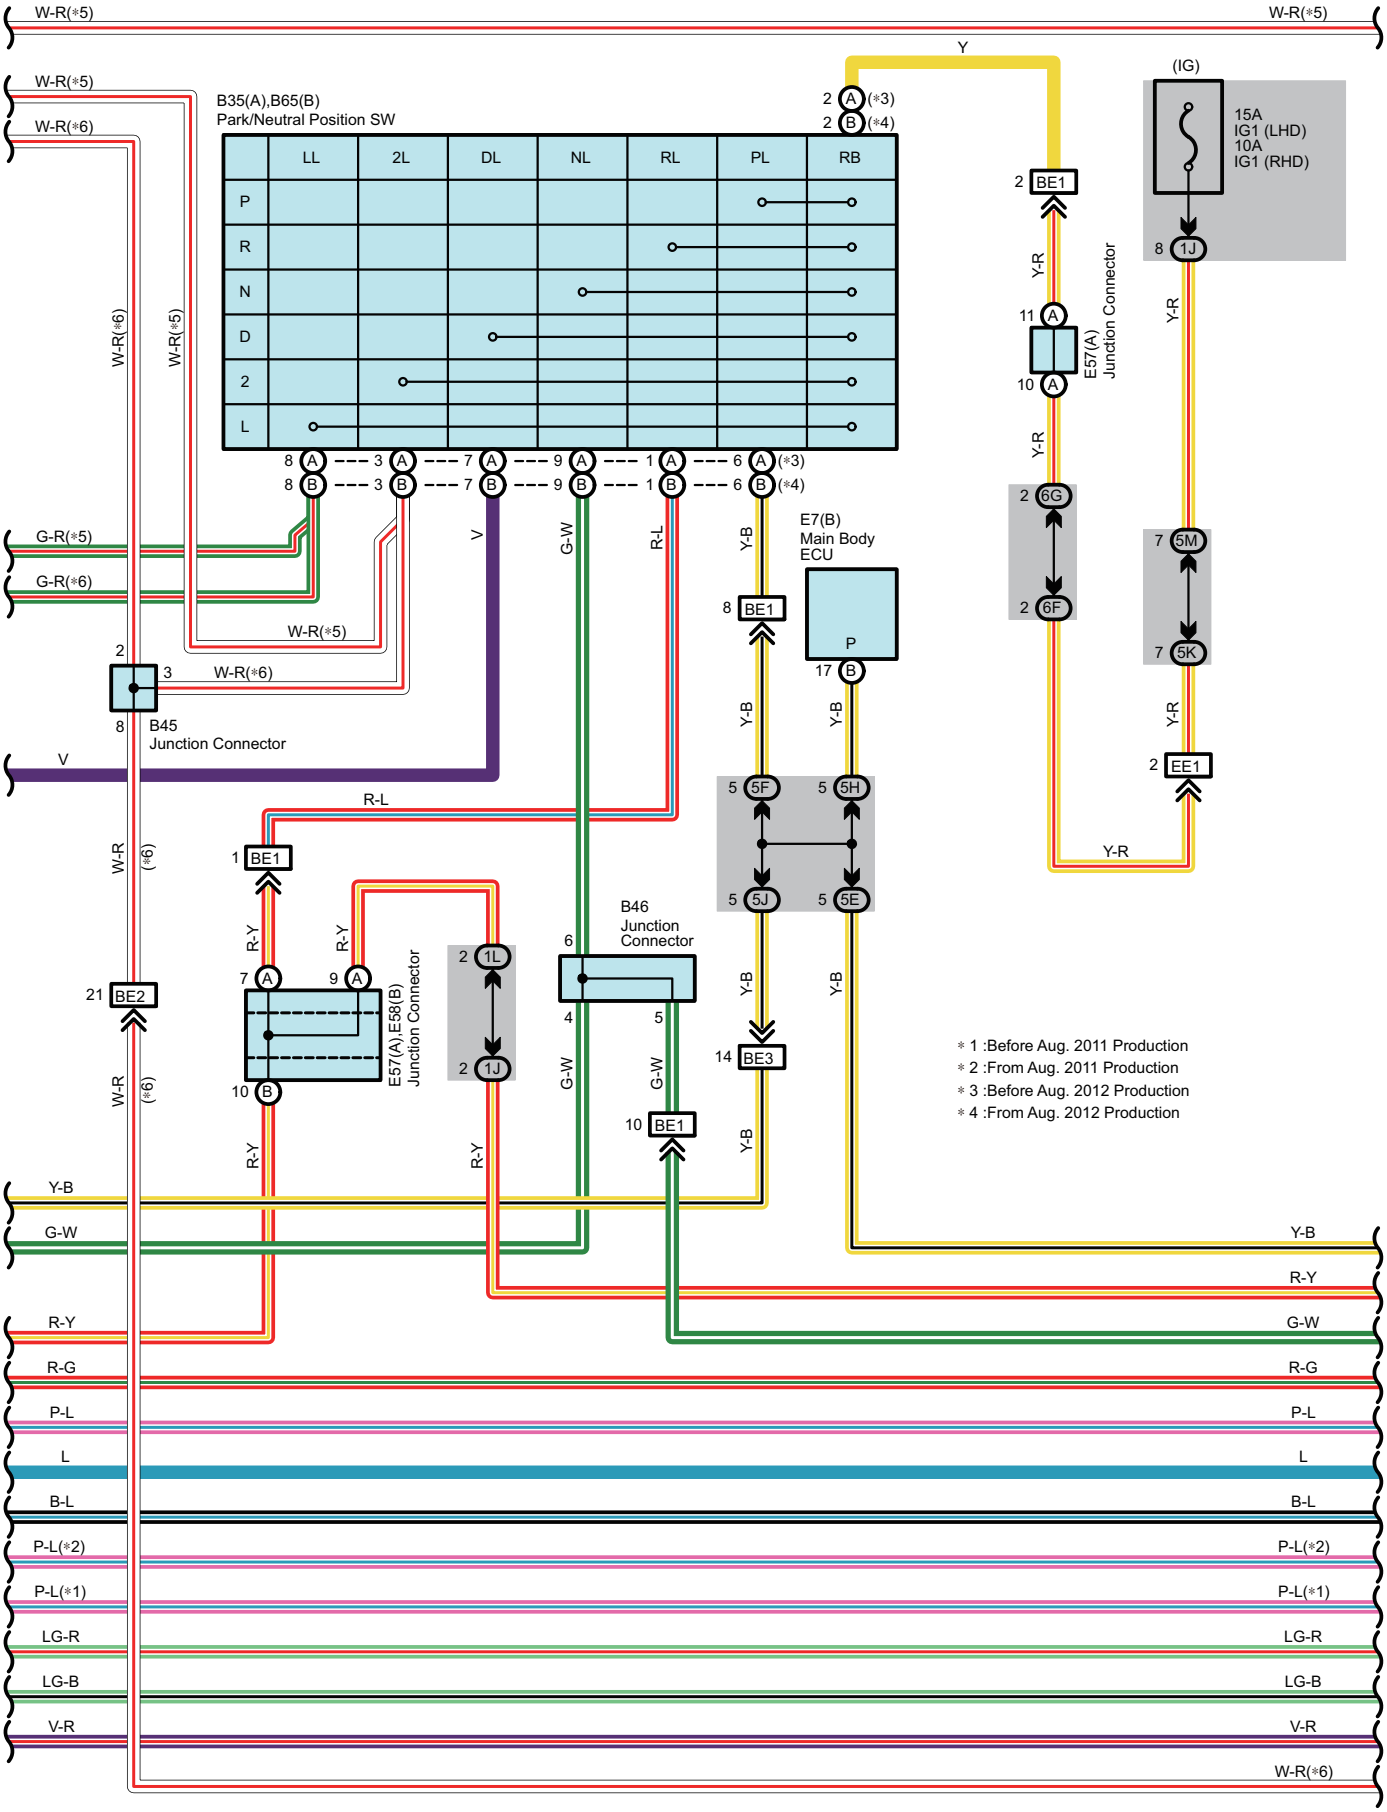

W-R(*5)
W-R(*6)
B35(A),B65(B)
Park/Neutral Position SW
LL
2L
DL
NL
RL
PL
RB
P
R
N
D
2
L
B45
Junction Connector
E7(B)
Main Body
ECU
B46
Junction Connector
E57(A),E58(B)
Junction Connector
E57(A)
Junction Connector
(IG)
15A
IG1 (LHD)
10A
IG1 (RHD)
G-R(*5)
G-R(*6)
V
R-L
W-R
Y-B
G-W
R-Y
R-G
P-L
L
B-L
P-L(*2)
P-L(*1)
LG-R
LG-B
V-R
Y
Y-R
* 1 :Before Aug. 2011 Production
* 2 :From Aug. 2011 Production
* 3 :Before Aug. 2012 Production
* 4 :From Aug. 2012 Production

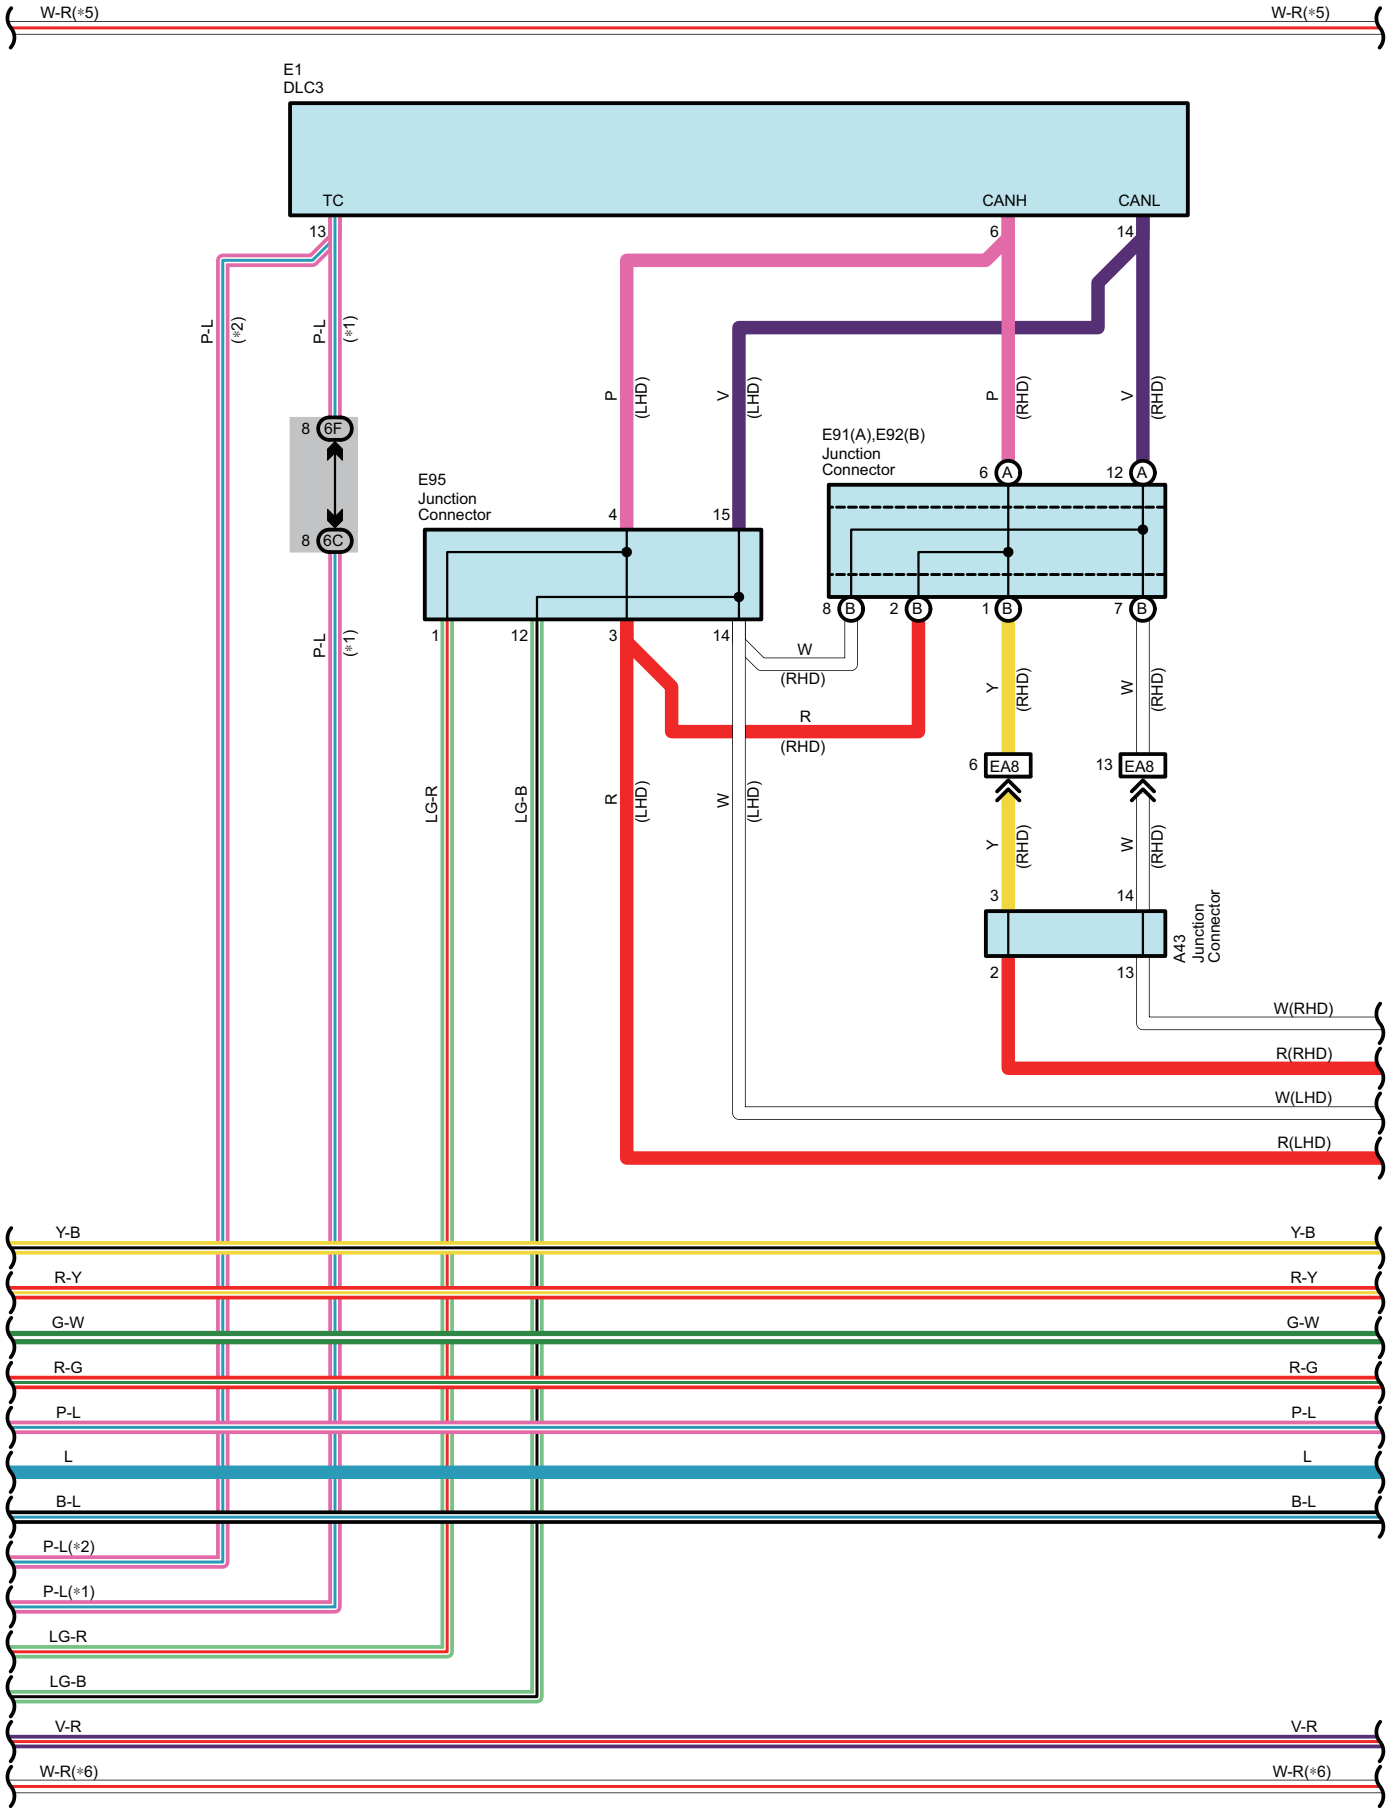
W-R(*5)
W-R(*5)
E1
DLC3
TC
CANH
CANL
13
6
14
P-L
(*2)
P-L
(*1)
P
(LHD)
V
(LHD)
P
(RHD)
V
(RHD)
8 6F
8 6C
E95
Junction
Connector
4
15
E91(A),E92(B)
Junction
Connector
6 A
12 A
8 B
2 B
1 B
7 B
1
12
3
14
W
(RHD)
R
(RHD)
Y
(RHD)
W
(RHD)
6 EA8
13 EA8
LG-R
LG-B
R
(LHD)
W
(LHD)
Y
(RHD)
W
(RHD)
3
14
A43
Junction
Connector
2
13
W(RHD)
R(RHD)
W(LHD)
R(LHD)
Y-B
R-Y
G-W
R-G
P-L
L
B-L
P-L(*2)
P-L(*1)
LG-R
LG-B
V-R
W-R(*6)
Y-B
R-Y
G-W
R-G
P-L
L
B-L
V-R
W-R(*6)

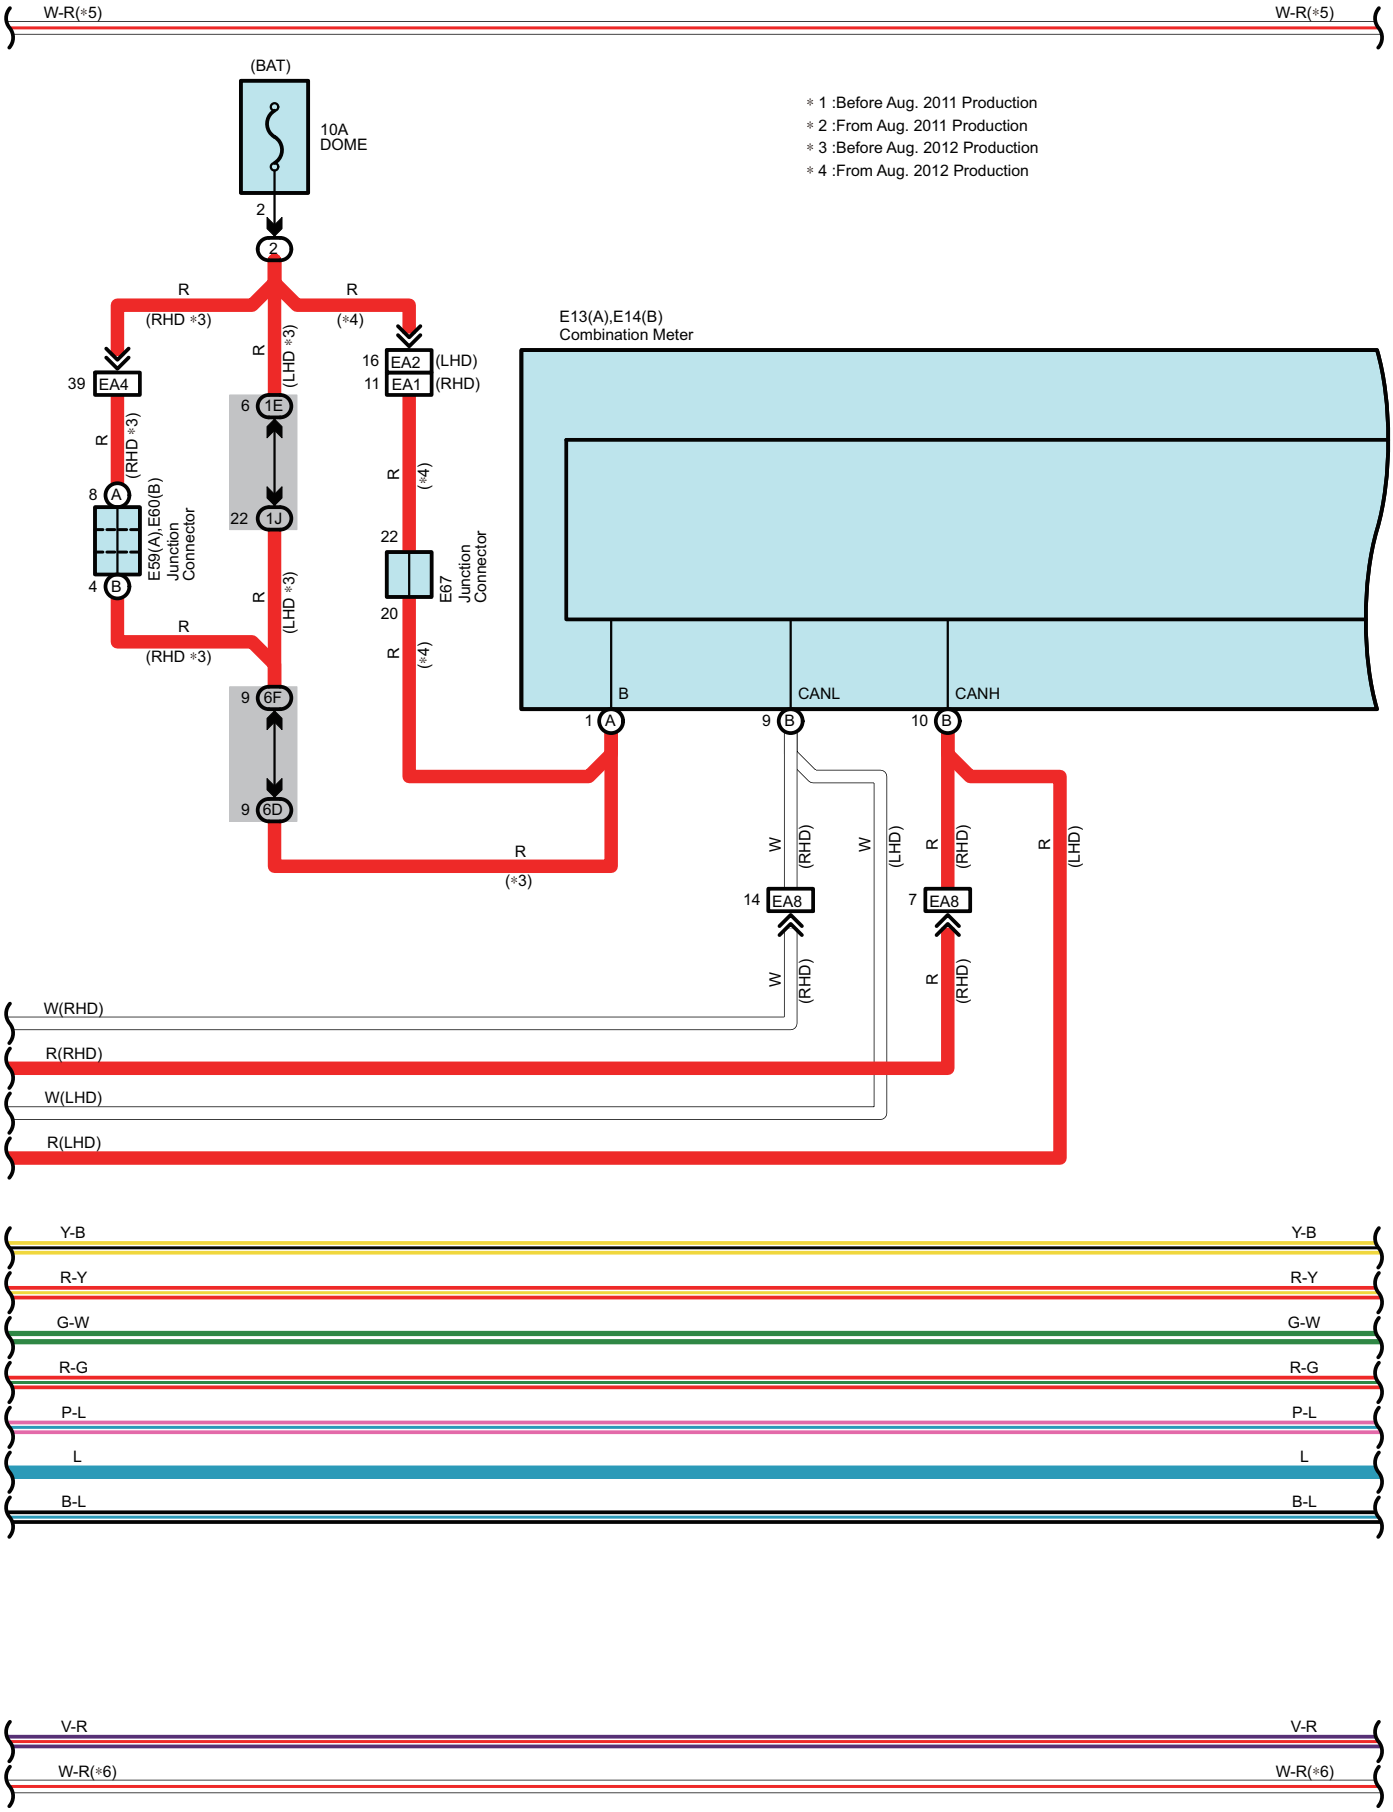


* 1 :Before Aug. 2011 Production
* 2 :From Aug. 2011 Production
* 3 :Before Aug. 2012 Production
* 4 :From Aug. 2012 Production

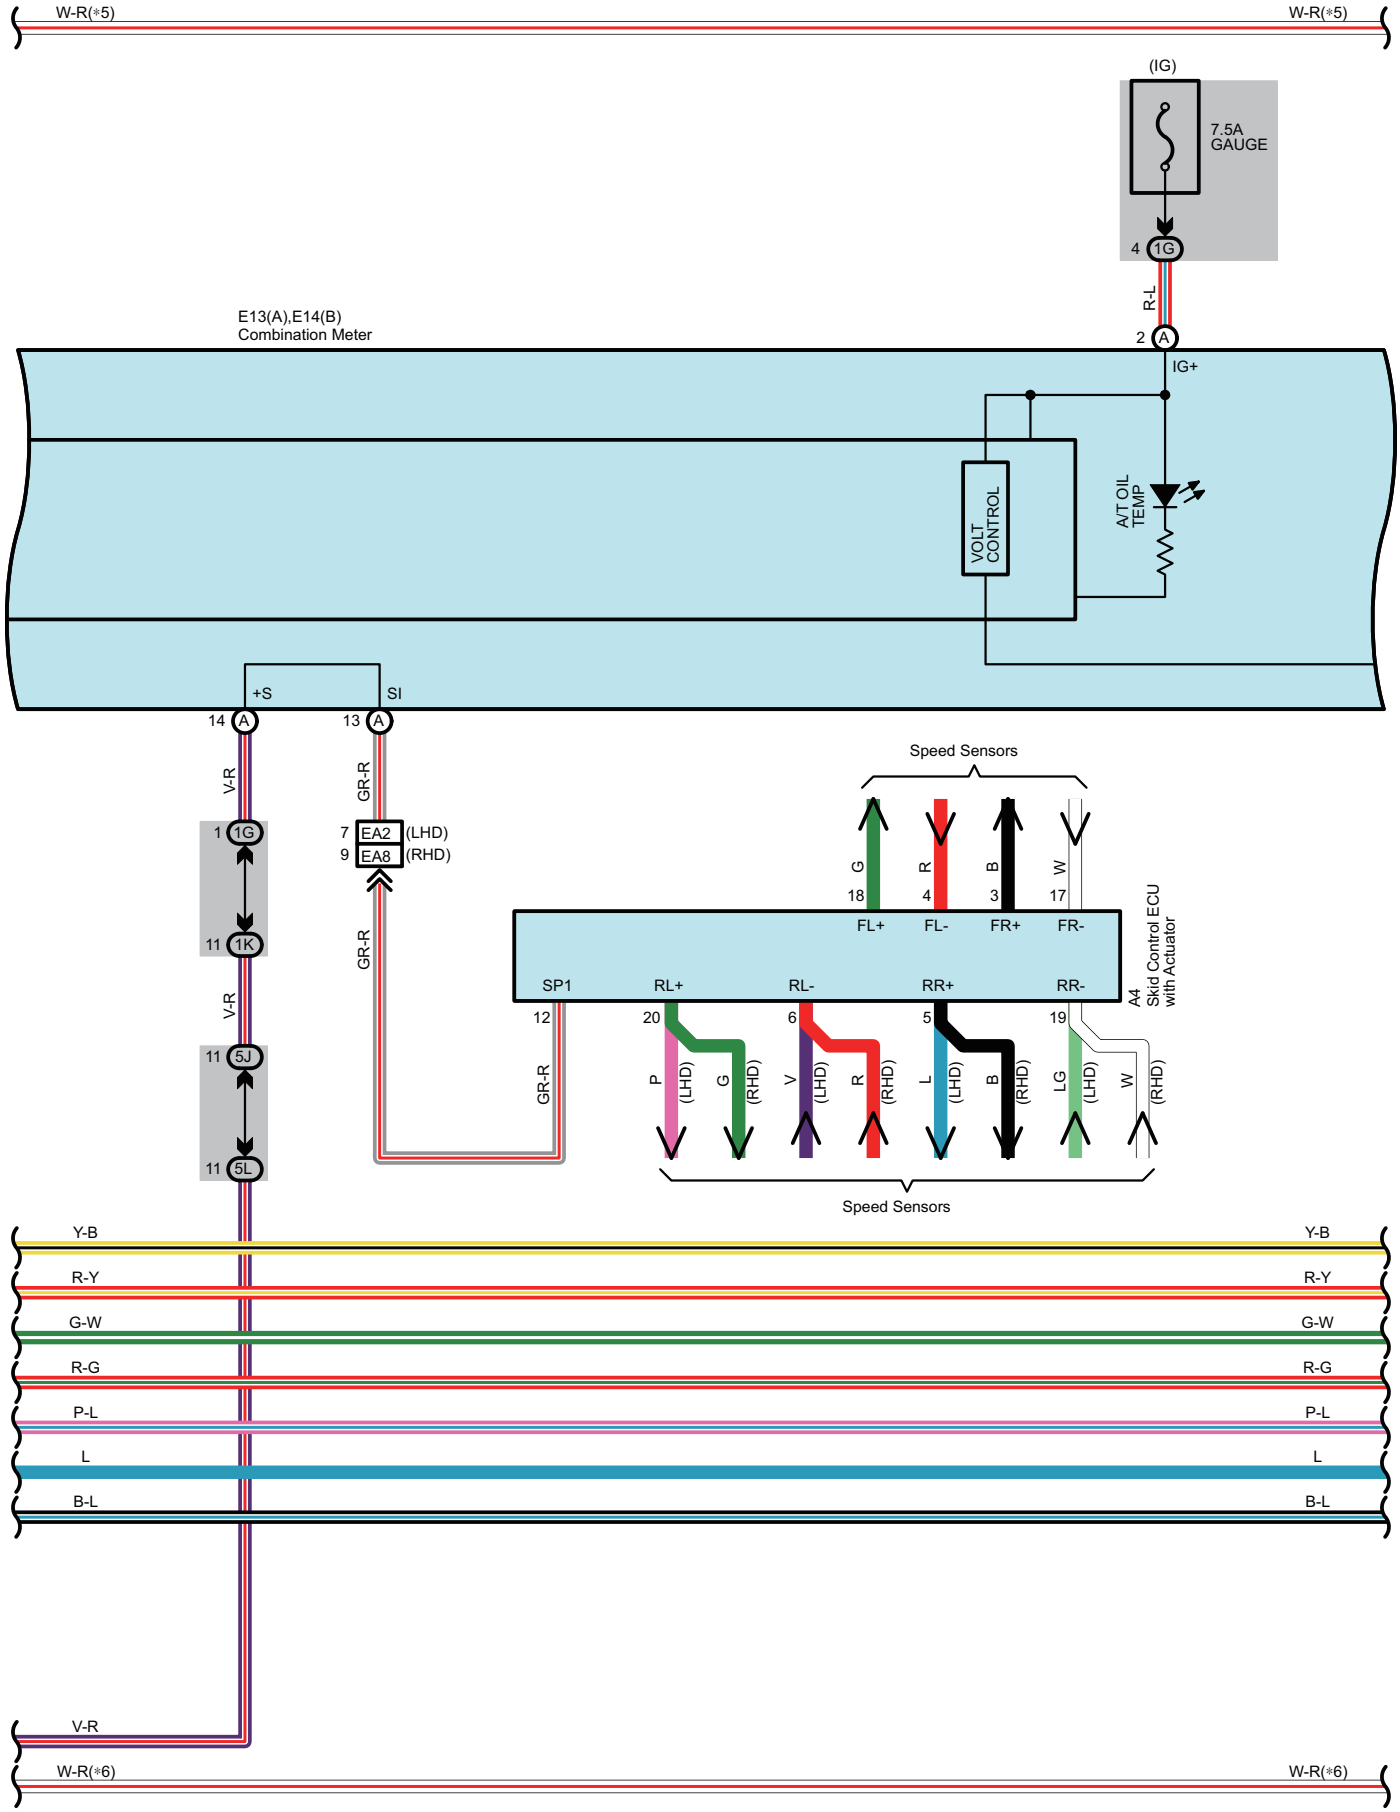

W-R(*5)
W-R(*5)
(IG)
7.5A
GAUGE
4 1G
R-L
2 A
IG+
E13(A),E14(B)
Combination Meter
VOLT
CONTROL
A/T OIL
TEMP
+S
SI
14 A
13 A
V-R
GR-R
1 1G
11 1K
V-R
11 5J
11 5L
7 EA2 (LHD)
9 EA8 (RHD)
GR-R
Speed Sensors
G
R
B
W
18
4
3
17
FL+
FL-
FR+
FR-
SP1
12
GR-R
RL+
RL-
RR+
RR-
20
6
5
19
P (LHD)
G (RHD)
V (LHD)
R (RHD)
L (LHD)
B (RHD)
LG (LHD)
W (RHD)
A4
Skid Control ECU
with Actuator
Speed Sensors
Y-B
R-Y
G-W
R-G
P-L
L
B-L
Y-B
R-Y
G-W
R-G
P-L
L
B-L
V-R
W-R(*6)
W-R(*6)

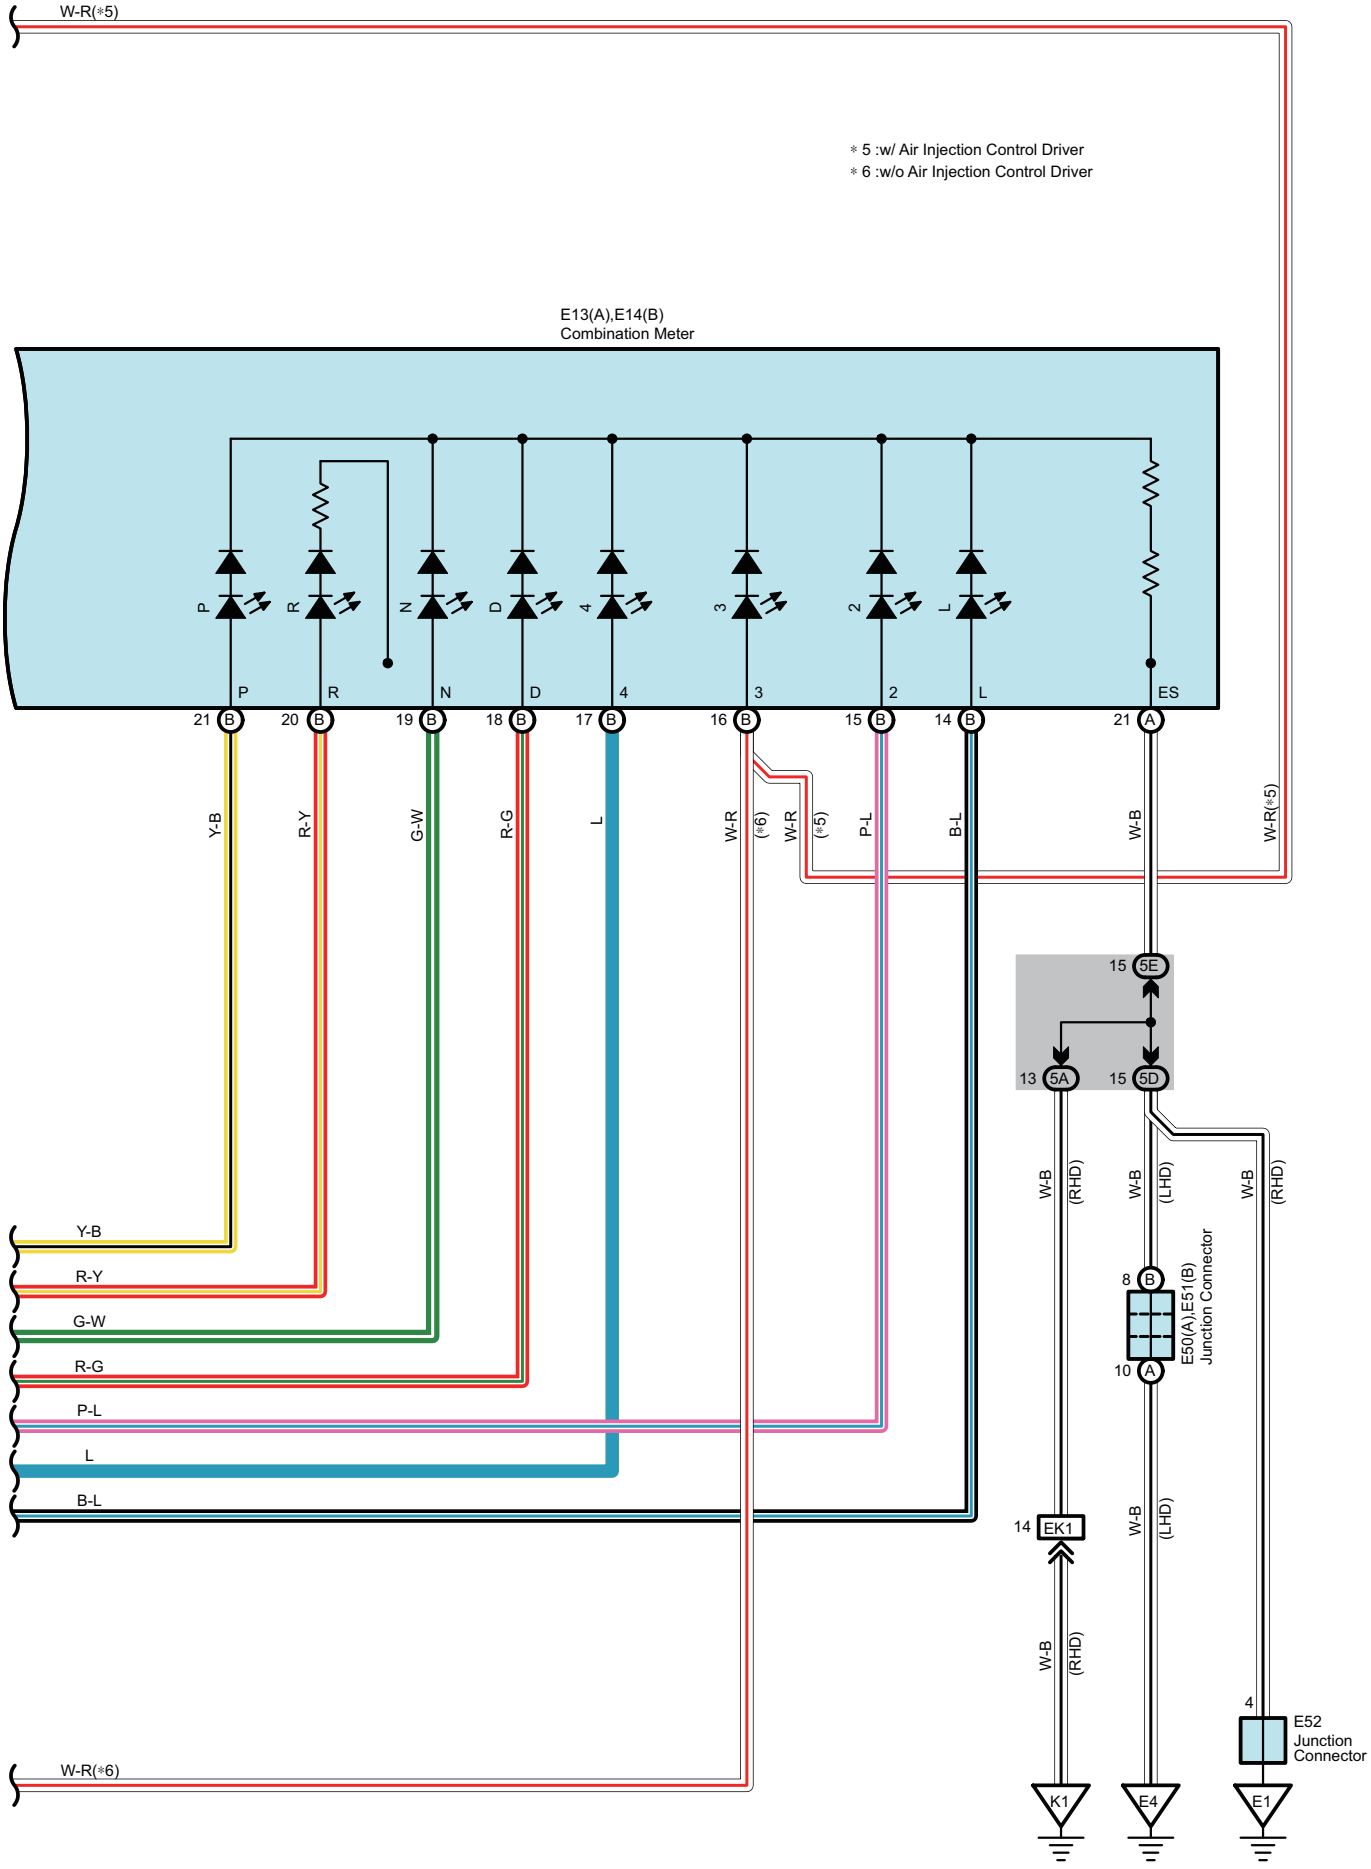
W-R(*5)
* 5 :w/ Air Injection Control Driver
* 6 :w/o Air Injection Control Driver
E13(A),E14(B)
Combination Meter
P
R
N
D
4
3
2
L
ES
21 B
20 B
19 B
18 B
17 B
16 B
15 B
14 B
21 A
Y-B
R-Y
G-W
R-G
L
W-R
(*6)
W-R
(*5)
P-L
B-L
W-B
W-R(*5)
15 5E
13 5A
15 5D
W-B (RHD)
W-B (LHD)
W-B (RHD)
8 B
10 A
E50(A),E51(B)
Junction Connector
14 EK1
W-B (RHD)
W-B (LHD)
4
E52
Junction
Connector
K1
E4
E1
W-R(*6)


A2
Black

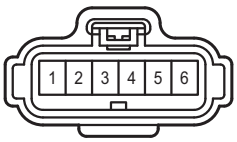


A3
White

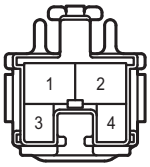


A4
Black

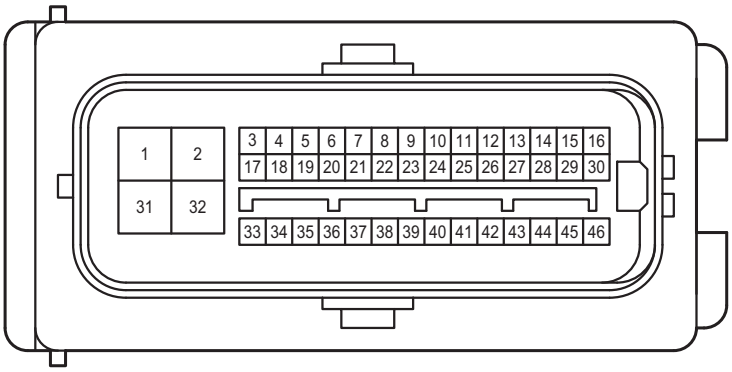


A27
Black

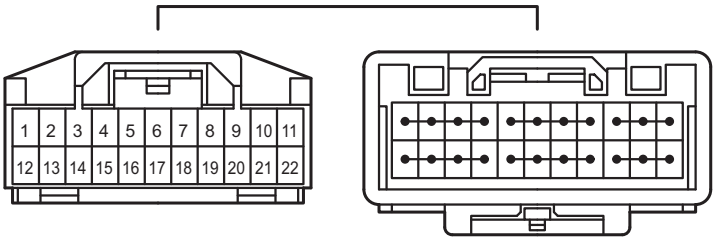


A29
Blue

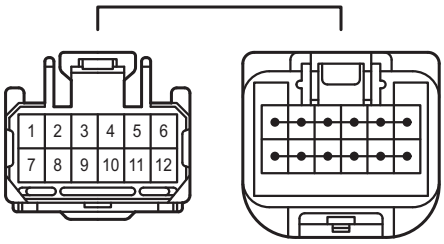


A41
White

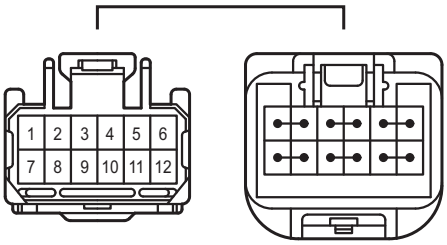


A42
White

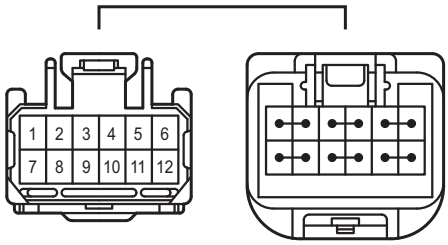


A43
Gray

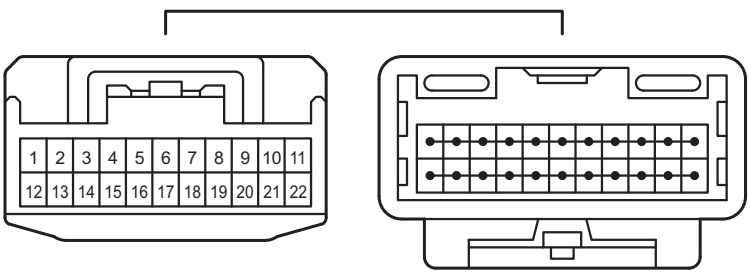


B14
Black

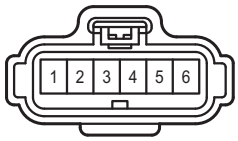


B29
Black

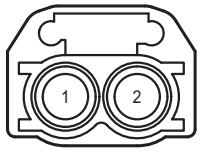


B32
Black

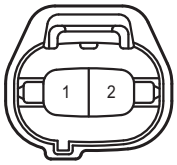


B35
Gray

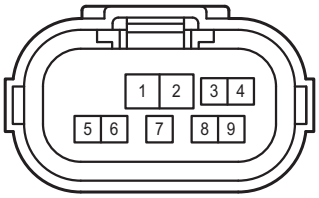


B37
Gray

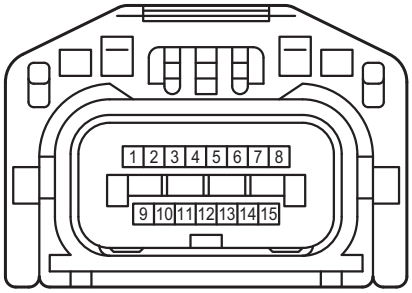


B38
Black

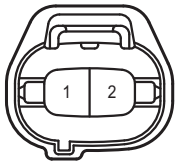


B45
Blue

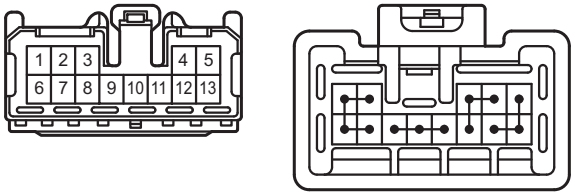


B46
White

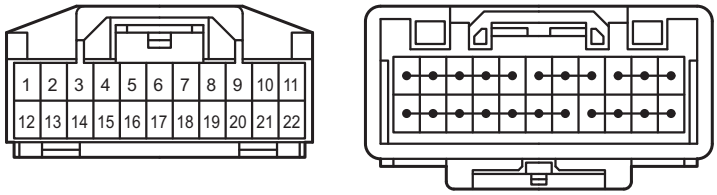


B47
White

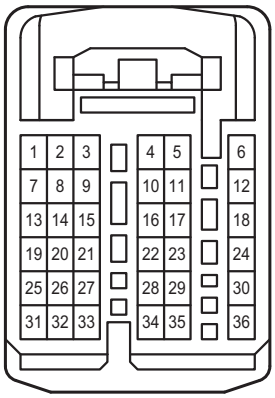


B48
White

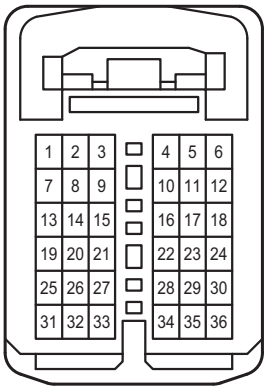

B49
White

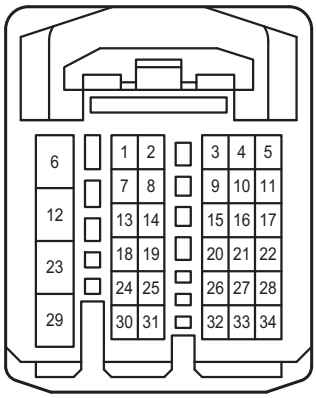

B50
White

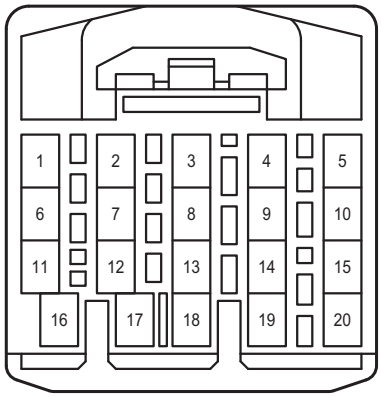


B51
Black




B52
Black




B65
Gray

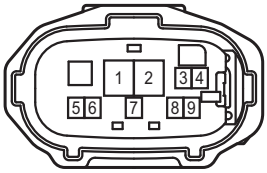


E1
White

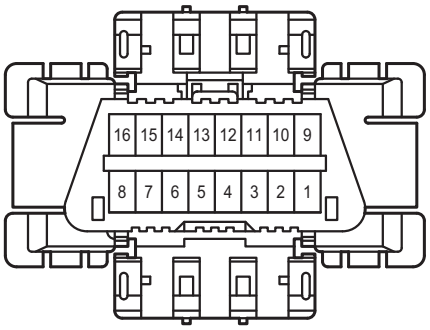


E7
White

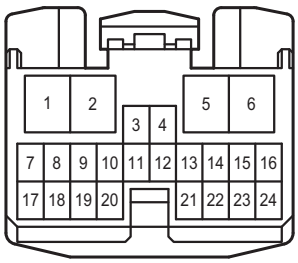

E13
White

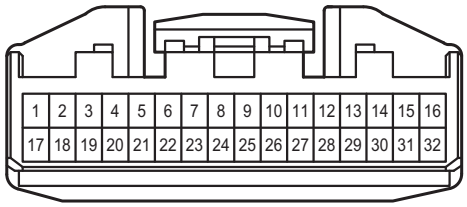


E14
White

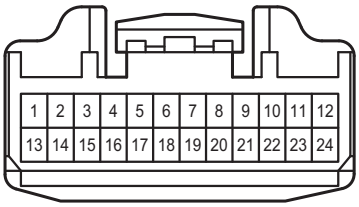


E28
White




E50
Black

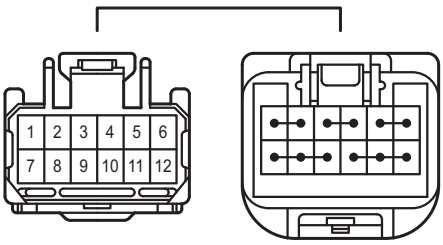


E51
Black

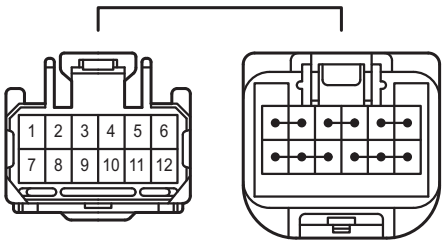


E52
White

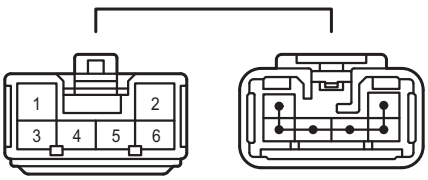


E57
Black

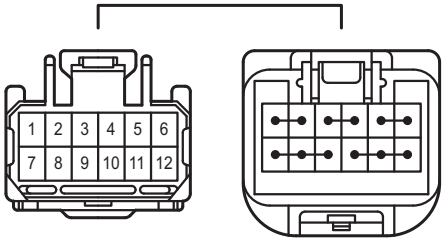


E58
Black

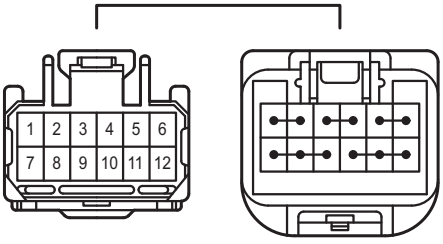


E59
Blue

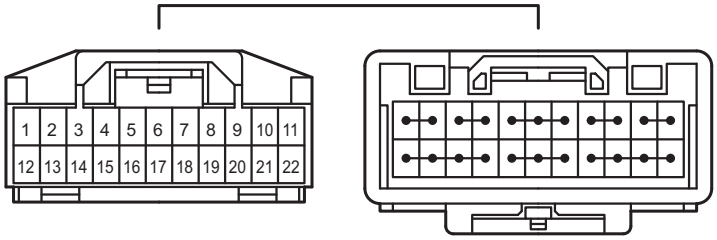


E60
Blue

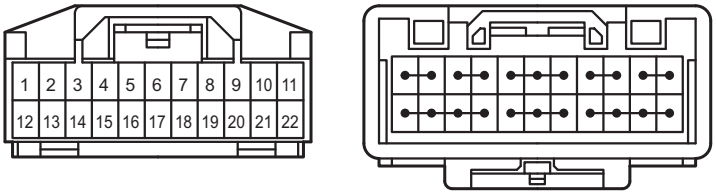


E67
Blue

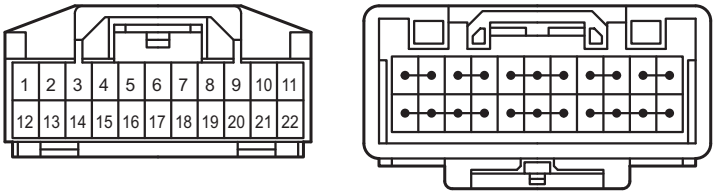


E81
White

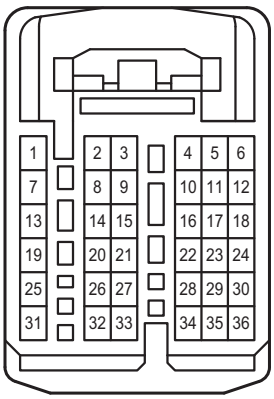


E82
White

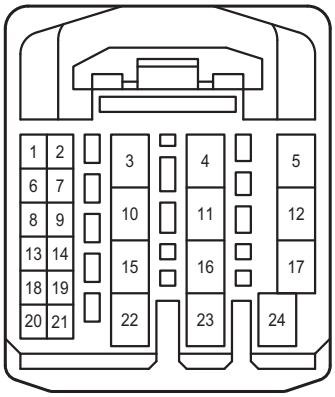


E91
White

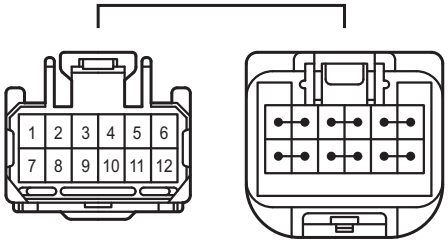


E92
White

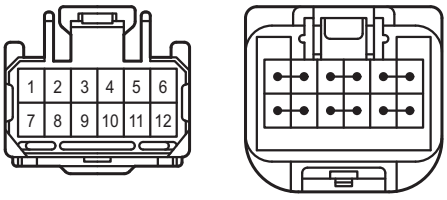


E95
Gray

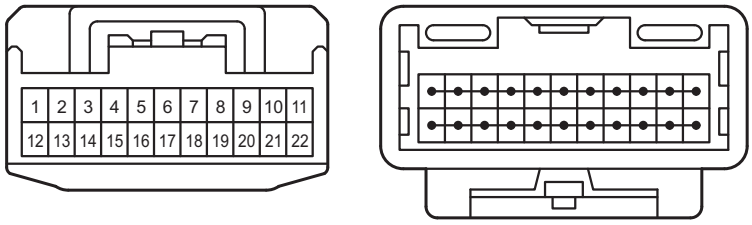


1 E
White

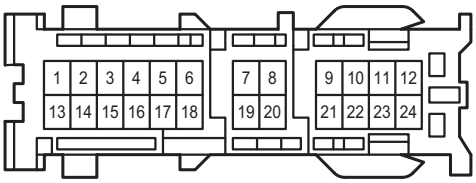


1 G
White

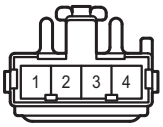


1 J
White

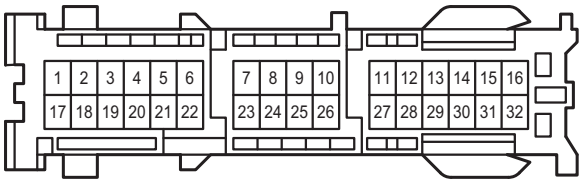


1 K
White

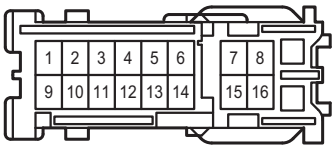


1 L
White

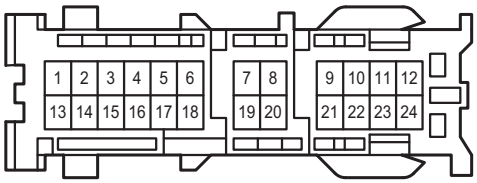


5 A
White




5 D
White




5 E
White




5 F
White




5 H
White




5 J
White




5 K
White




5 L
White




5 M
White




6 A
White




6 B
White




6 C
White




6 D
White




6 F
White




6 G
White




6 H
White




AB1
Gray

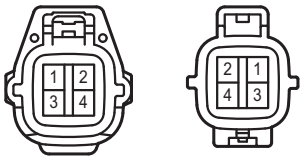


AB2
Black

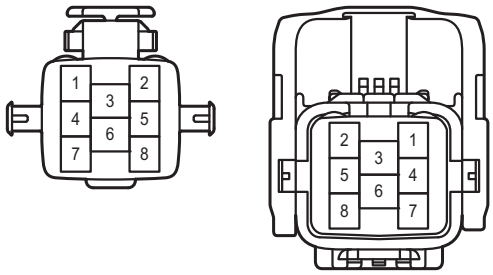


BE1
White

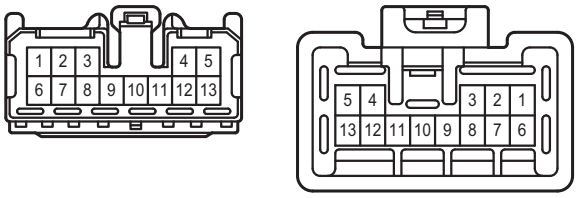


BE2
White

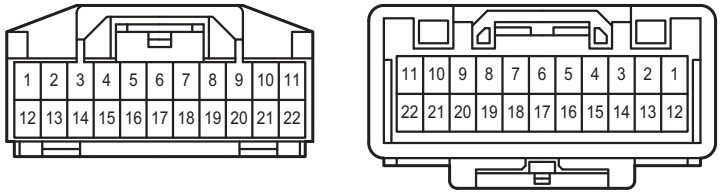


BE3
White

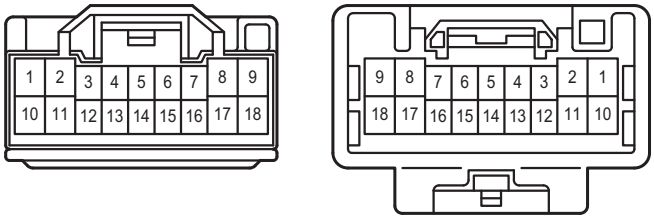


EA1
Blue

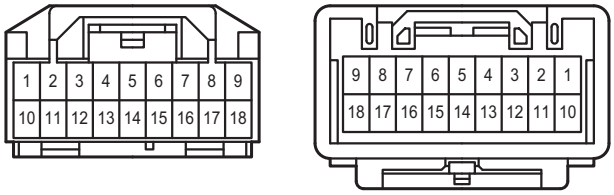

EA2
Gray

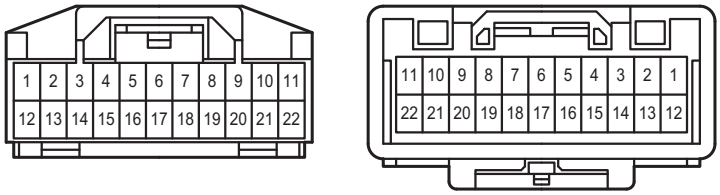

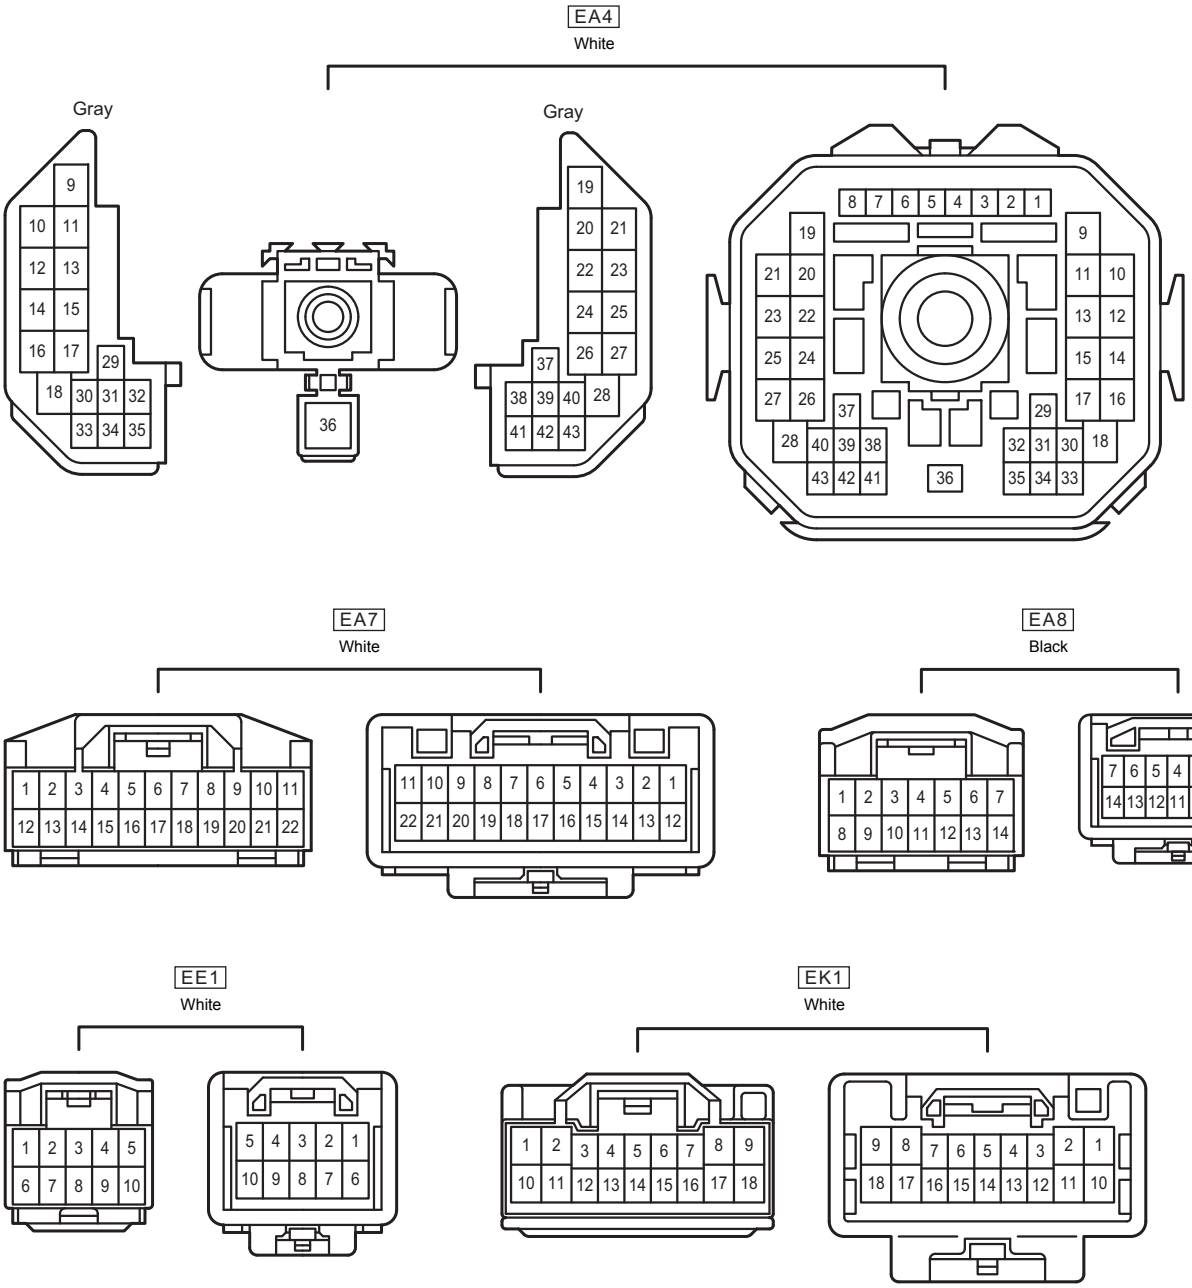
EA4
White
Gray
Gray
EA7
White
EA8
Black
EE1
White
EK1
White