
■ LIGHT AUTO TURN-OFF SYSTEM

- When all of the below conditions are met, the light auto turn-off system will turn off vehicle lights (headlights, taillights, license plate lights, and parking lights).
  - The ignition switch is in the off position.
  - Any of the doors are opened.
- This system is controlled by the Main Body ECU (Driver Side Junction Block).

▶ System Diagram ◀

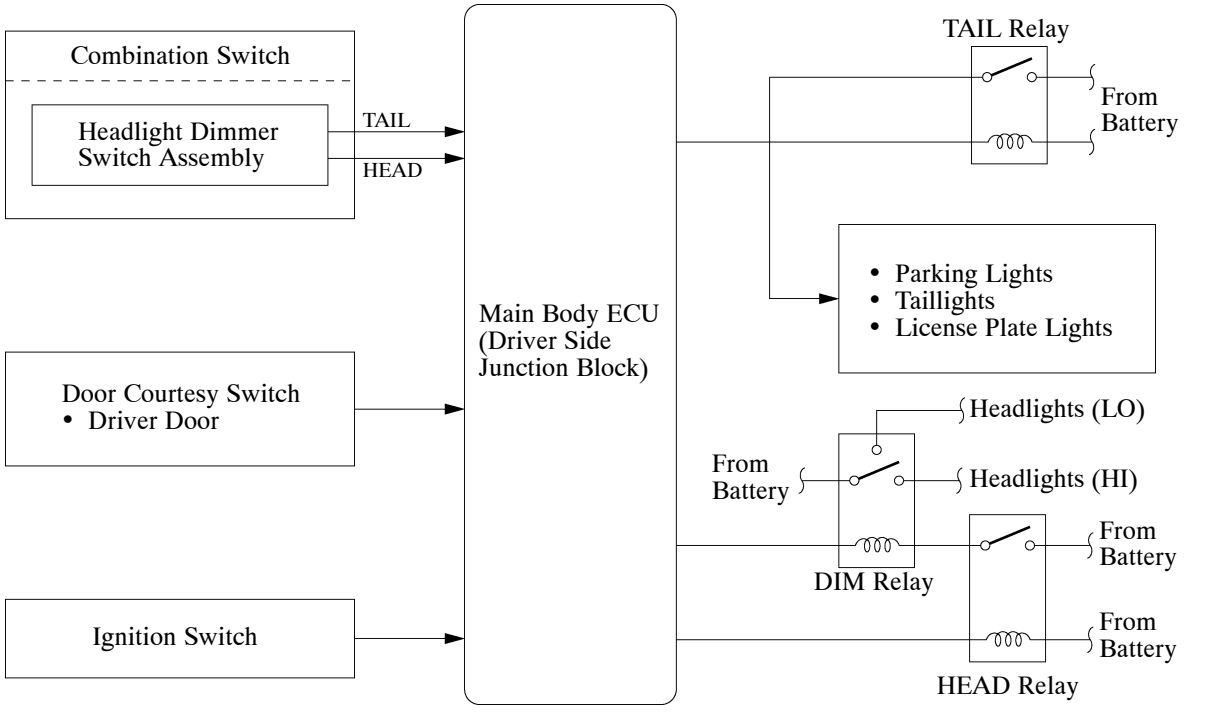

07D0BE02C