
■ILLUMINATED ENTRY SYSTEM

- When a door is unlocked using the key in a lock cylinder or unlocked using transmitter operation, or if a door is opened or closed, the illuminated entry system turns the front interior light, rear interior light and key illumination on.
- If the ignition switch is turned to the ACC or ON position, or if all doors are locked during the 15 seconds in which these lights are on, they will immediately turn off.
- This system is controlled by the Main Body ECU (Driver Side Junction Block).

▶ System Diagram ◀

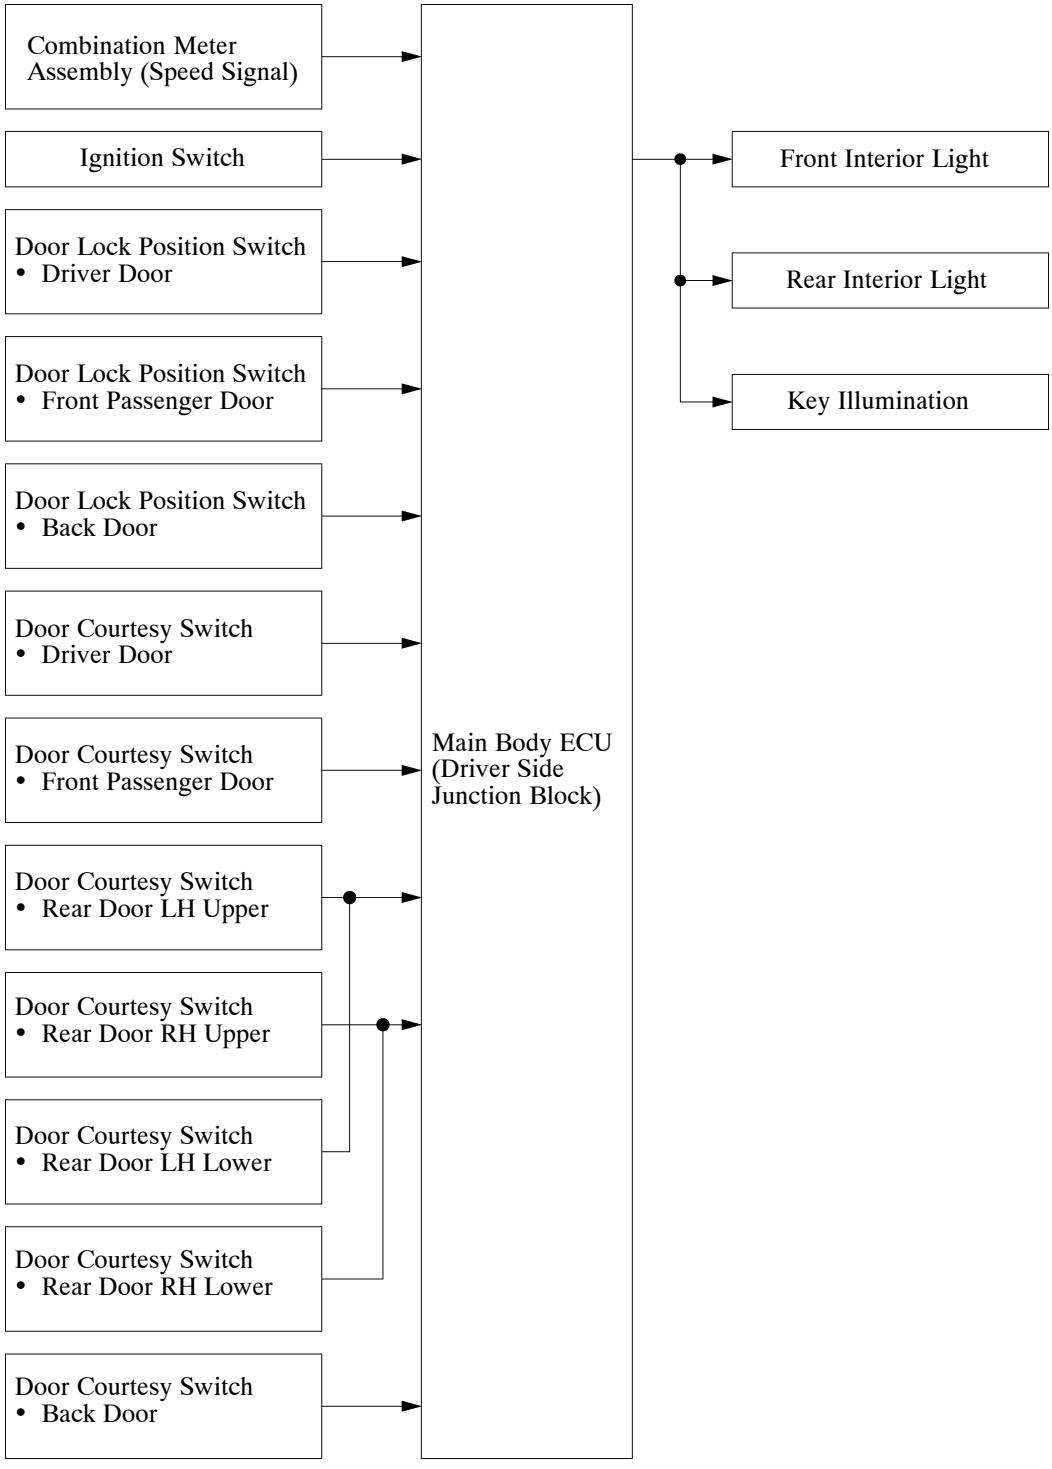

07D0BE03C

BE