TOYOTA PARKING ASSIST-SENSOR SYSTEM

■ DESCRIPTION


- This system uses ultrasonic sensors and is equipped with a beeping alarm. It can detect obstacles at the rear of the vehicle, and provide information to the driver regarding the distance.
- When an obstacle is detected by the TOYOTA parking assist-sensor system, the clearance warning buzzer sounds to alert the driver.
- TOYOTA parking assist-sensor system availability is as follows:

Item	Equipment		
	Middle East	General Countries	China
TOYOTA Parking Assist-sensor System	Option	Standard	Standard

- The conditions required to operate are as shown in the table below:

Operating Conditions
• Ignition switch is ON. • Back sonar switch is ON. • A/T shift lever is in the R position. (Models with Automatic Transmission) • Back-up light switch is ON. (Models with Manual Transmission)

■ SYSTEM DIAGRAM

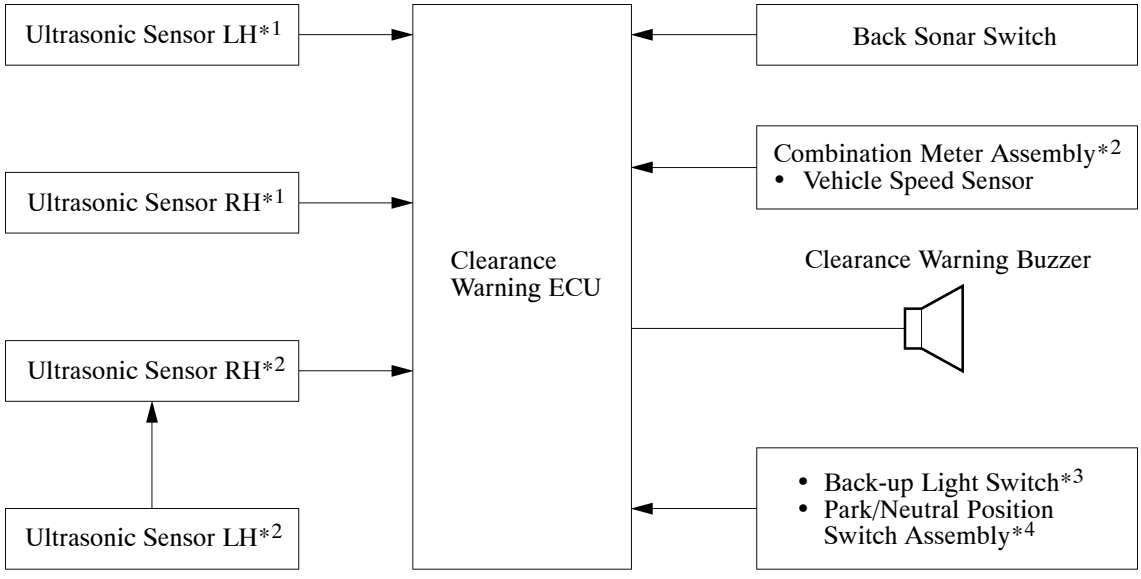

*1: Models for Middle East and General Countries *2: Models for China
*3: Models with Manual Transmission *4: Models with Automatic Transmission

07D1BE07C