
POWER WINDOW SYSTEM

■ DESCRIPTION

The power window system has the following functions:

Function	Outline
Manual up-and-down function	This function causes the window to open or close while the power window switch is being pulled halfway up or pushed halfway down. The window stops as soon as the switch is released.
Remote control function	The up-and-down operations of the front passenger door window can be controlled by operating the power window master switch.
Key-off operation function	The driver's door key-off operation function makes it possible to operate the power window for approximately 45 seconds after the ignition switch is turned to the ACC or LOCK position, if the driver's door is not opened.
Fail-safe	If the pulse sensor in the power window motor malfunctions, the power window fail-safe function will prohibit: • The driver's door one-touch auto up and auto down function and the remote control function are prohibited. • Manual operation is possible by operating each power window switch.

■ SYSTEM DIAGRAM

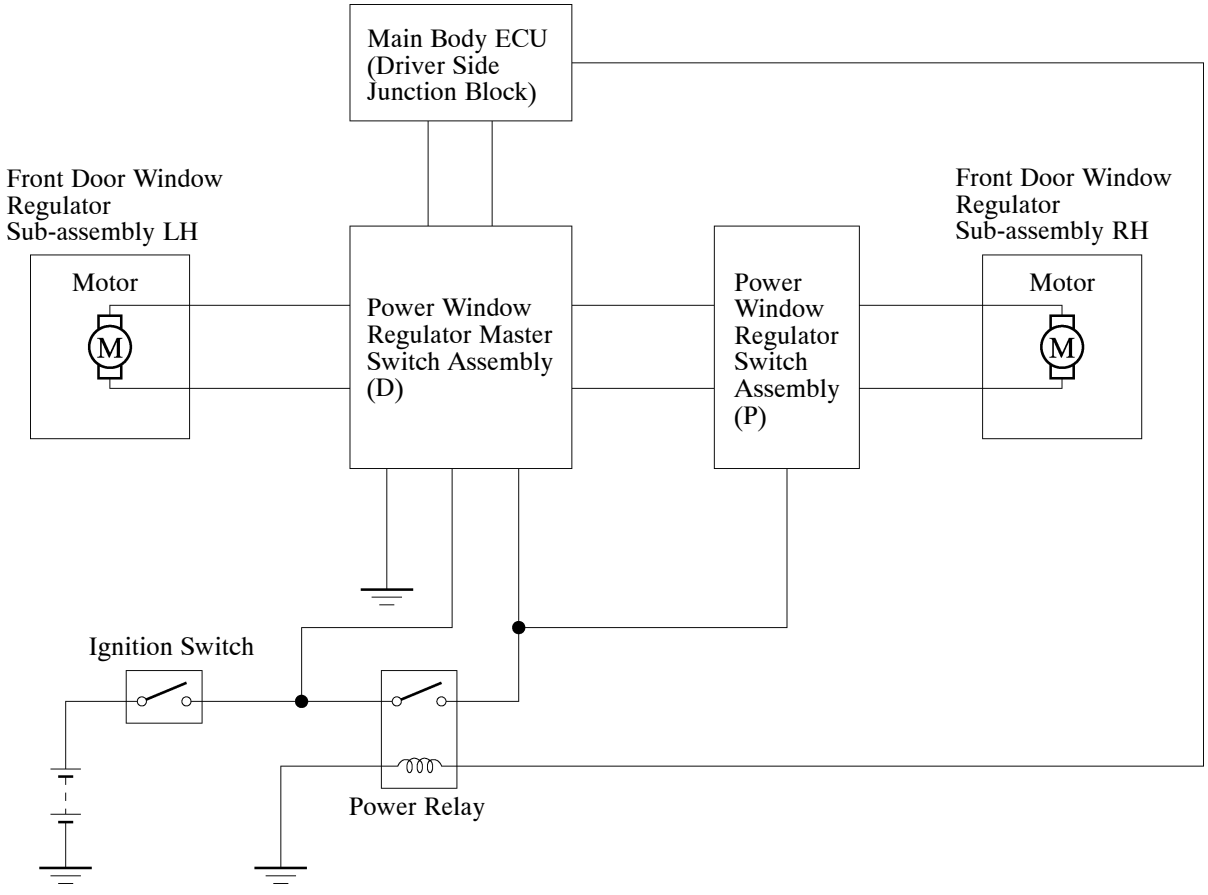

07D0BE07C

BE