
SRS AIRBAG SYSTEM

■ DESCRIPTION

The SRS (Supplemental Restraint System) airbag system has the following equipment:

Item		Equipment
Frontal Collision	SRS Driver Airbag	Standard
	SRS Front Passenger Airbag	
Side/Rear Side Collision	SRS Side Airbag	Optional
	SRS Curtain Shield Airbag	

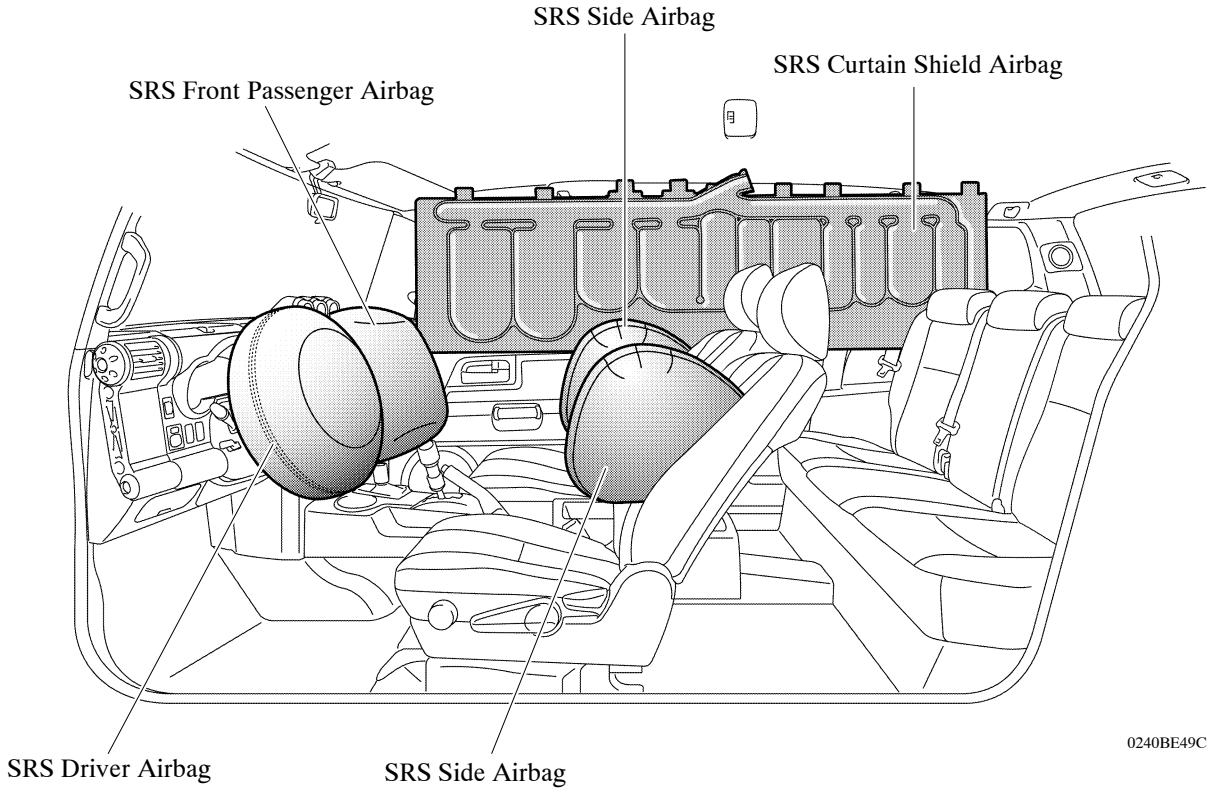

- The SRS driver and front passenger airbags are used as supplements to the seat belts to help reduce shocks applied to the head and chest of the driver or front passenger in the event of a frontal impact collision.
- The SRS side airbags are used to help reduce the shocks applied to the chest of the driver or front passenger in the event of a side impact collision.
- The SRS curtain shield airbags are used to help reduce the shocks applied to the head of the driver, front passenger, and rear outer passengers in the event of side or rear side impact collision.