
■AIRBAG FOR SIDE/REAR SIDE COLLISION


1. General

- When the side airbag sensor assembly detects a side impact, the Center Airbag Sensor Assembly causes the curtain shield airbag assembly and the front seat side airbag assembly to be deployed simultaneously.
- When the rear airbag sensor detects a rear side impact, the Center Airbag Sensor Assembly causes the curtain shield airbag assembly to be deployed.

▶ System Operation ◀

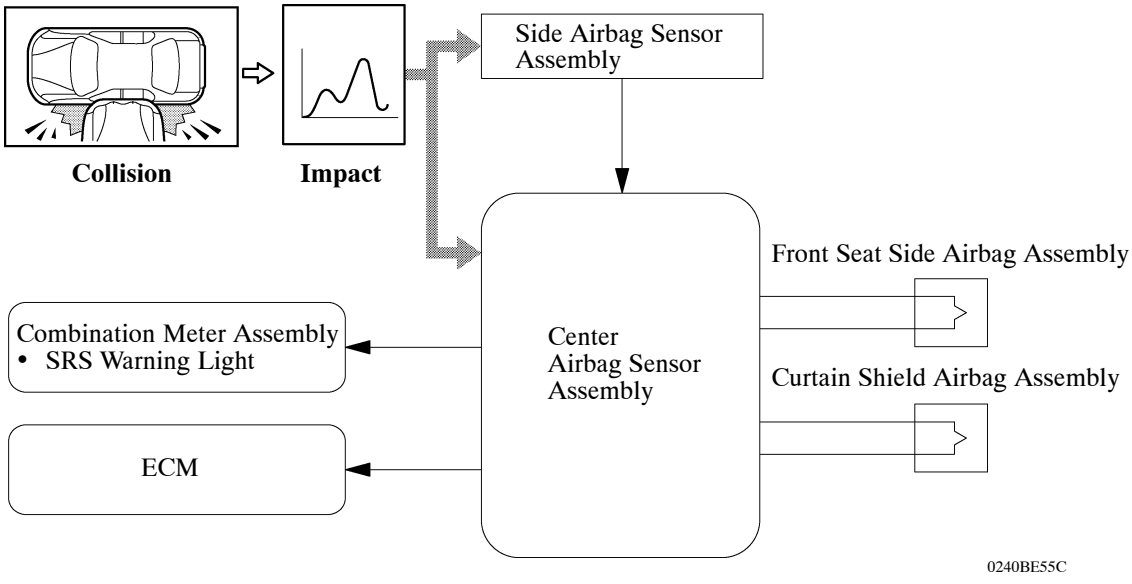

Airbag for Side Collision

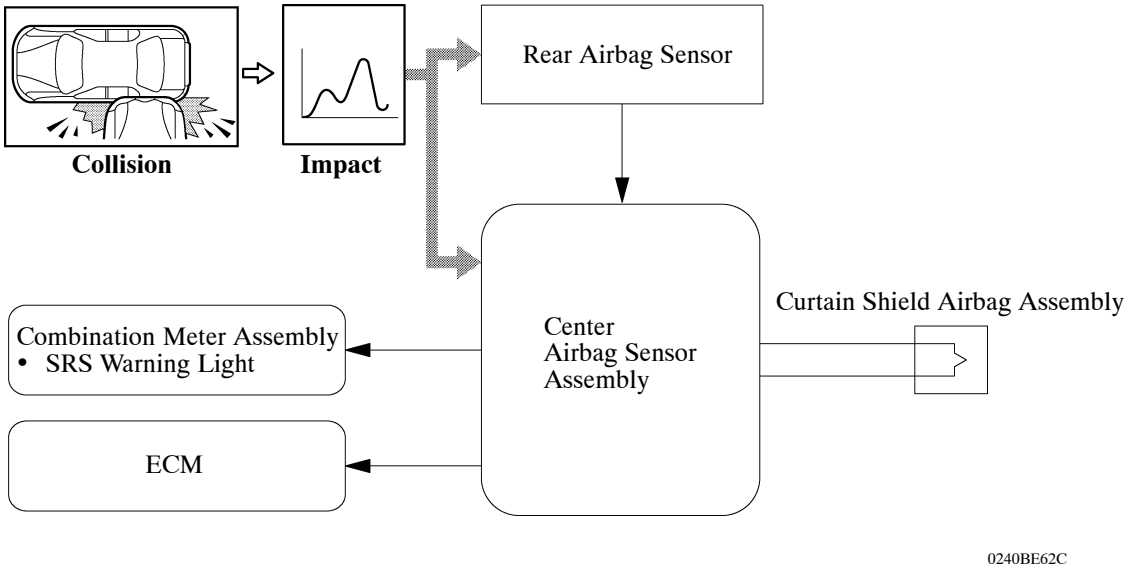

Airbag for Rear Side Collision

BE

2. Front Seat Side Airbag Assembly

SRS side airbags are installed in the seat backs of the driver seat and the front passenger seat. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

3. Curtain Shield Airbag Assembly

SRS curtain shield airbags are installed in the area close to the sides of the headliner. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

4. Side or Rear Airbag Sensors

Deceleration sensors are enclosed in the side or rear airbag sensors. Based on the acceleration of the vehicle during a side or side rear collision, a distortion is created in the sensor and converted into an electrical signal.