SEAT BELT WARNING SYSTEM


■ DESCRIPTION

If the seat belt is not fastened, this system flashes the seat belt warning light or sounds the buzzer in the combination meter as a reminder.

- The system has a buzzer warning cancel mode.
- When the ignition switch is turned ON, this system detects the condition of the seat belts based on the signals indicated below.

Seat	Base Signal	Warning Method
Driver	Seat Belt Buckle Switch (Non-Contact Type)	• Buzzer sounds • Warning light flashes
Front Passenger	• Seat Belt Buckle Switch (Contact Type) • Occupant Detection Sensor	• Buzzer sounds • Warning light flashes

▶ System Diagram ◀

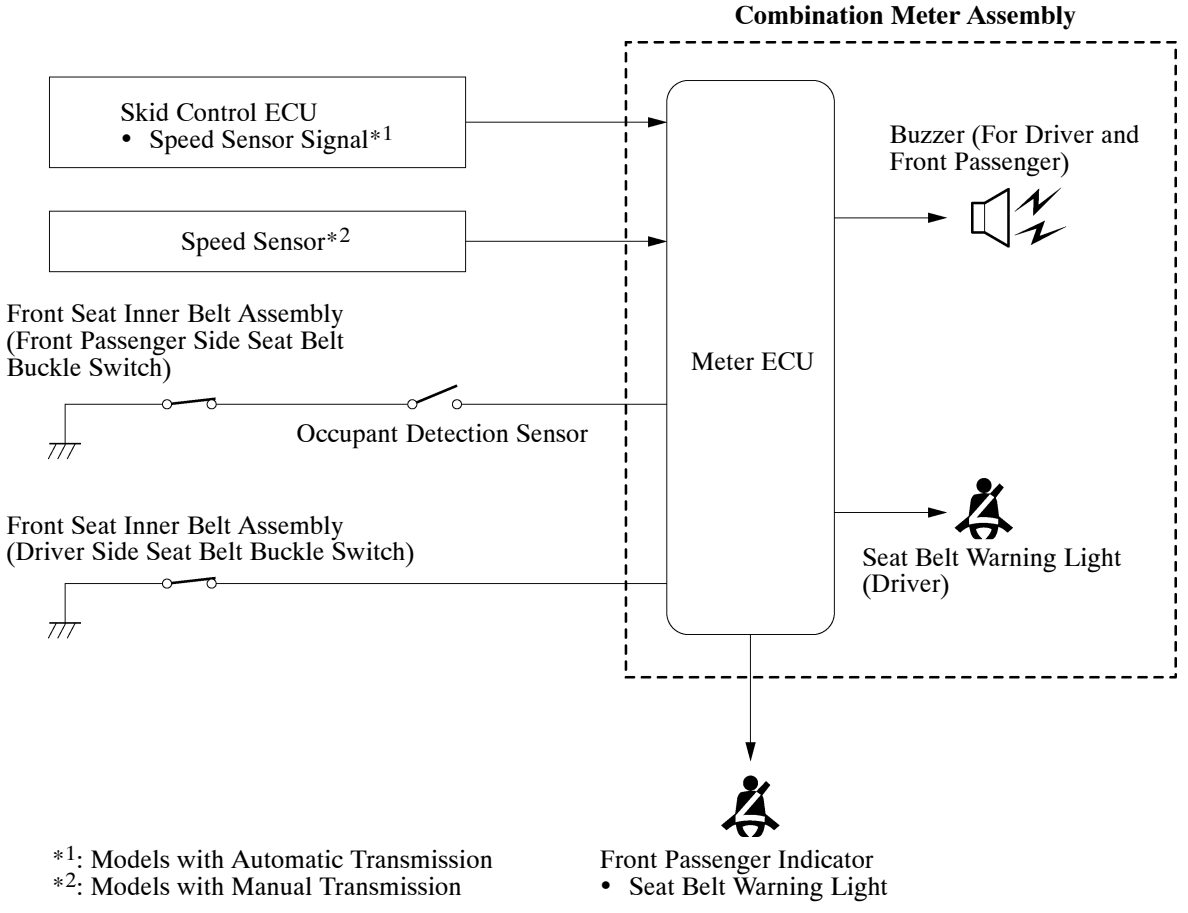

*1: Models with Automatic Transmission
*2: Models with Manual Transmission

07D0BE13C

BE

Service Tip

Buzzer Warning Cancel Mode Setting

1) Set the LCD on the combination meter to the ODO display.
2) Press and hold the TRIP meter reset knob for ten seconds or more within six seconds of turning the ignition switch ON. Fastening the driver's seat belt or front passenger seat belt while holding the knob cancels the buzzer warning.
   - If the driver seat belt is fastened: the system changes to the driver and front passenger buzzer warning cancel mode.
   - If the front passenger seat belt is fastened: the system changes to the front passenger buzzer warning cancel mode.
3) When this occurs, the LCD displays "b-oFF". The buzzer warning can be switched between ON and OFF each time the TRIP meter reset knob is pressed. The LCD displays "b-on" or "b-oFF" according to the buzzer warning ON/OFF status. The display changes to the ODO or TRIP meter if the knob is not pressed for ten seconds.
4) Performing steps 1) and 2) again when the buzzer warning is off exits cancel mode (the buzzer will be re-enabled).
5) The cancel mode will also be exited when the battery or combination meter connector is disconnected and reconnected.