■SEAT BELT

1. General


The following types of seat belts are provided.

Seat	Seat Belt Type	Remarks
Driver	3-point ELR*1	Electrical Sensing type Pretensioner & Force Limiter
Front Passenger	3-point ELR & ALR*2	Electrical Sensing type Pretensioner & Force Limiter
Rear (LH, RH, and Center)		-

*1: Emergency Locking Retractor *2: Automatic Locking Retractor

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the Center Airbag Sensor Assembly, the seat belt pretensioners activate simultaneously with the deployment of SRS airbags for a frontal collision.
In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

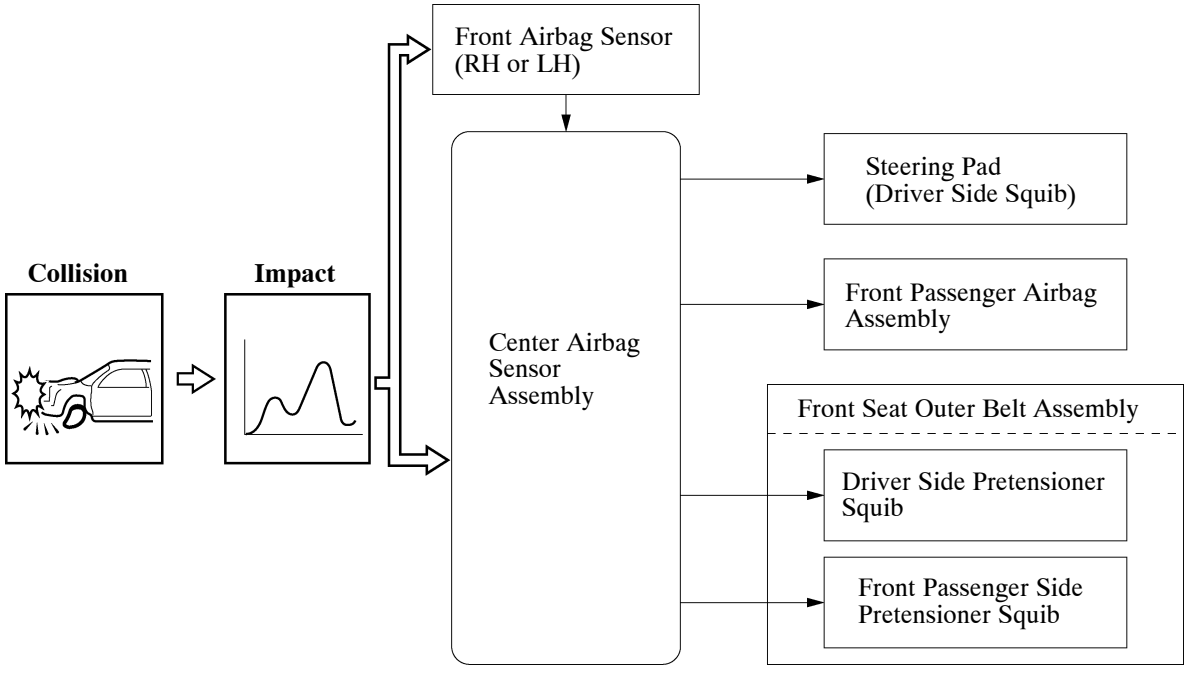

07D0BO08C