
SAFETY

SRS Airbag System


The SRS (Supplemental Restraint System) driver and front passenger airbags are used to help reduce shocks to the head and chest of the driver or front passenger in the event of frontal impact collision and as supplements to the seat belts.

- The deployment force of the SRS driver and front passenger airbags is optimally controlled in dual-stages, in response to the following information:

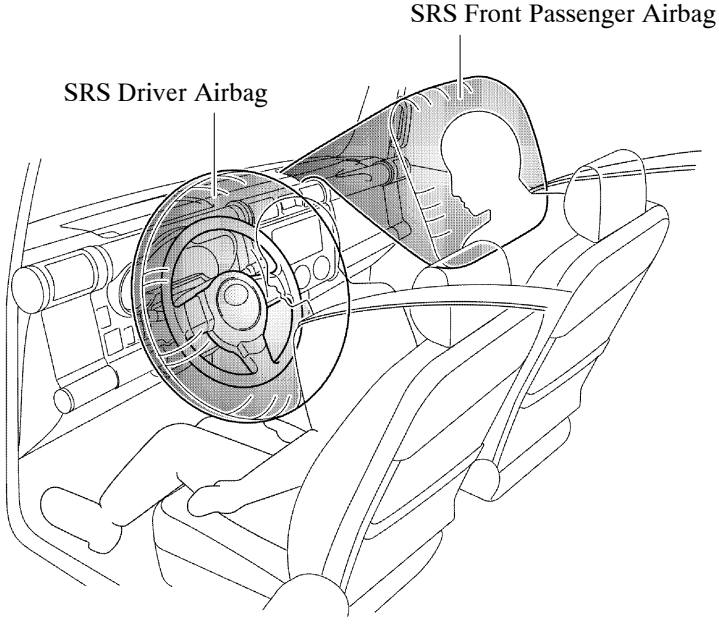

0240MO32Z

The SRS side and curtain shield airbags are used to help reduce shocks to the head and chest of the driver, front passenger, and rear outer passenger in the event of side impact collision.

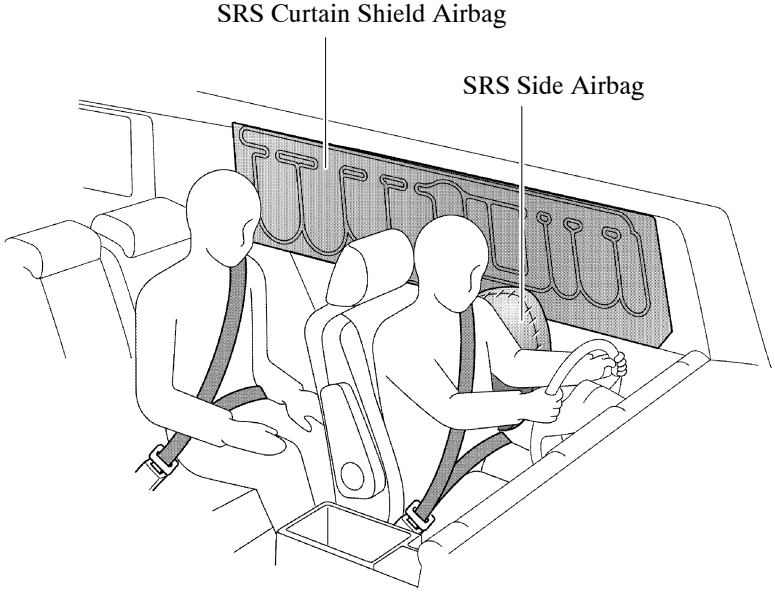

0240MO33Z