
# WIRELESS DOOR LOCK REMOTE CONTROL SYSTEM

## ■ FUNCTION

### 1. Panic Alarm Function

- A panic alarm function is used on models for Australia.
- Keeping the PANIC button of the key pressed for longer than about 1 second causes the following alarms to activate.
  - – Sounds the low pitched horn assembly.
  - – Flashes the hazard warning lights.

**▶ System Diagram ◀**

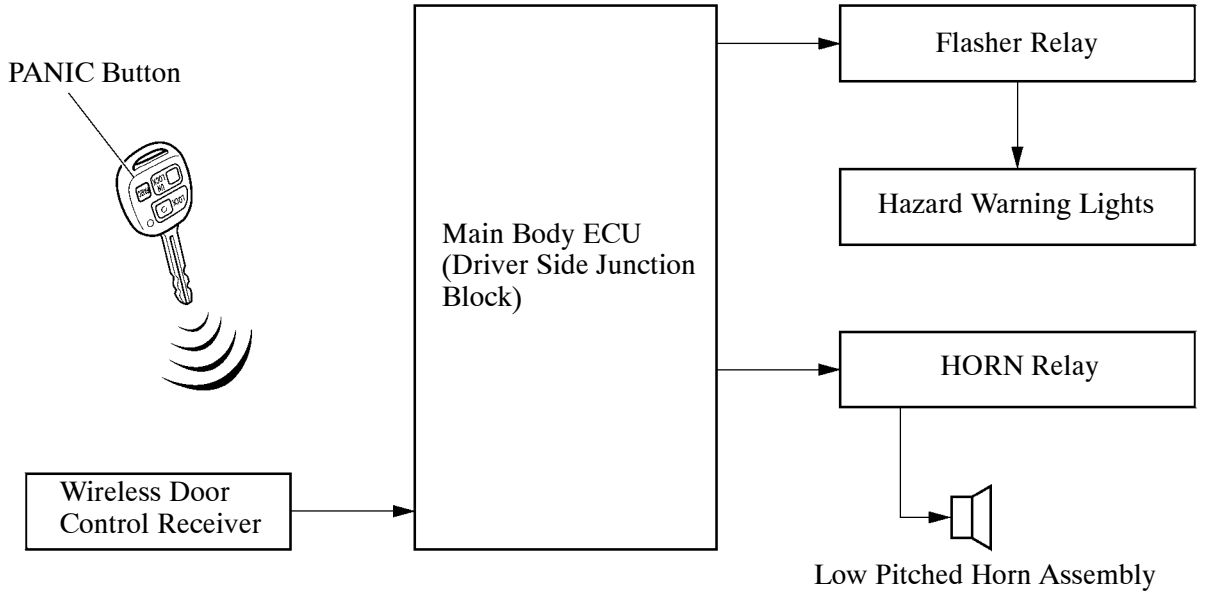


07DNF415S

## 2. Layout of Main Components

