RADIATOR UPPER SUPPORT (ASSY)




F25271A

Symbol meaning

REMOVAL	▲ : Remove Weld Points
INSTALLATION	⊙ : Spot Weld ◘ : MIG Plug Weld

F25271B

REMOVAL·INSTALLATION

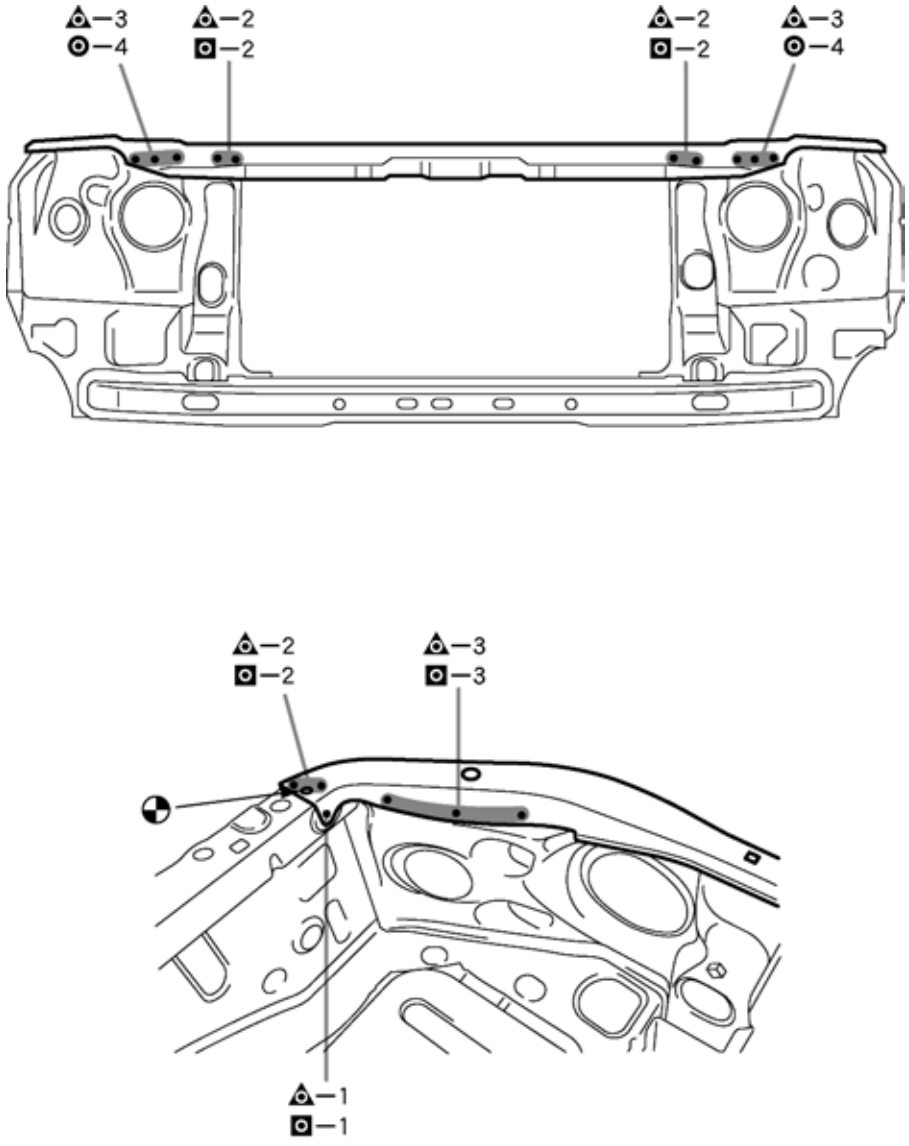


F25271

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

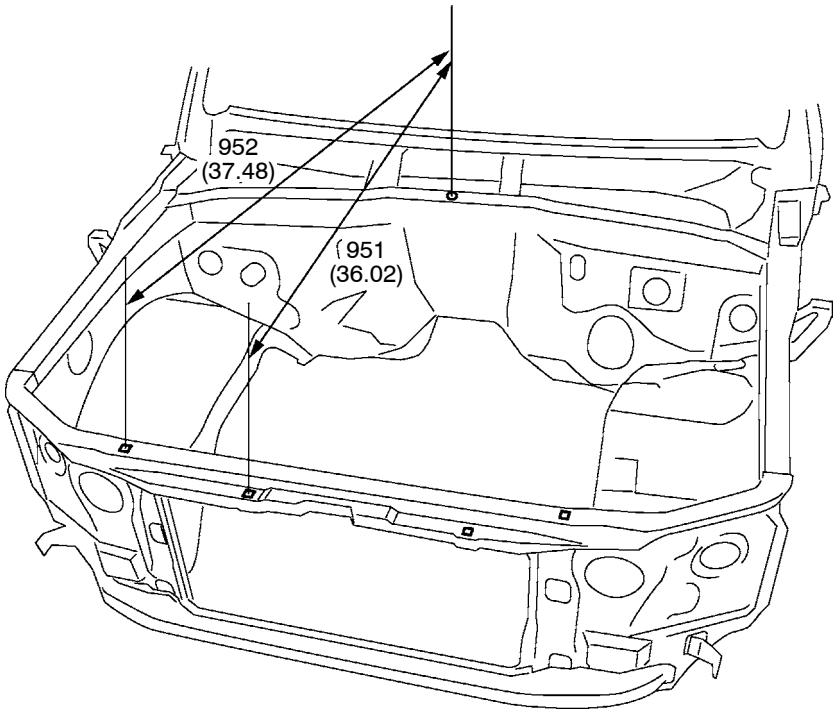

mm (in.)

F25272

INSTALLATION POINT

1 Measure the dimensions before installing the headlights.
2 These values are reference values.