RADIATOR SIDE SUPPORT (ASSY)



F25273A


With the radiator upper support removed.

Symbol meaning

REMOVAL	▲ ▲M ▲I : Remove Weld Points
INSTALLATION	● : Spot Weld ■ ■M ■I : MIG Plug Weld

F25273B

REMOVAL·INSTALLATION

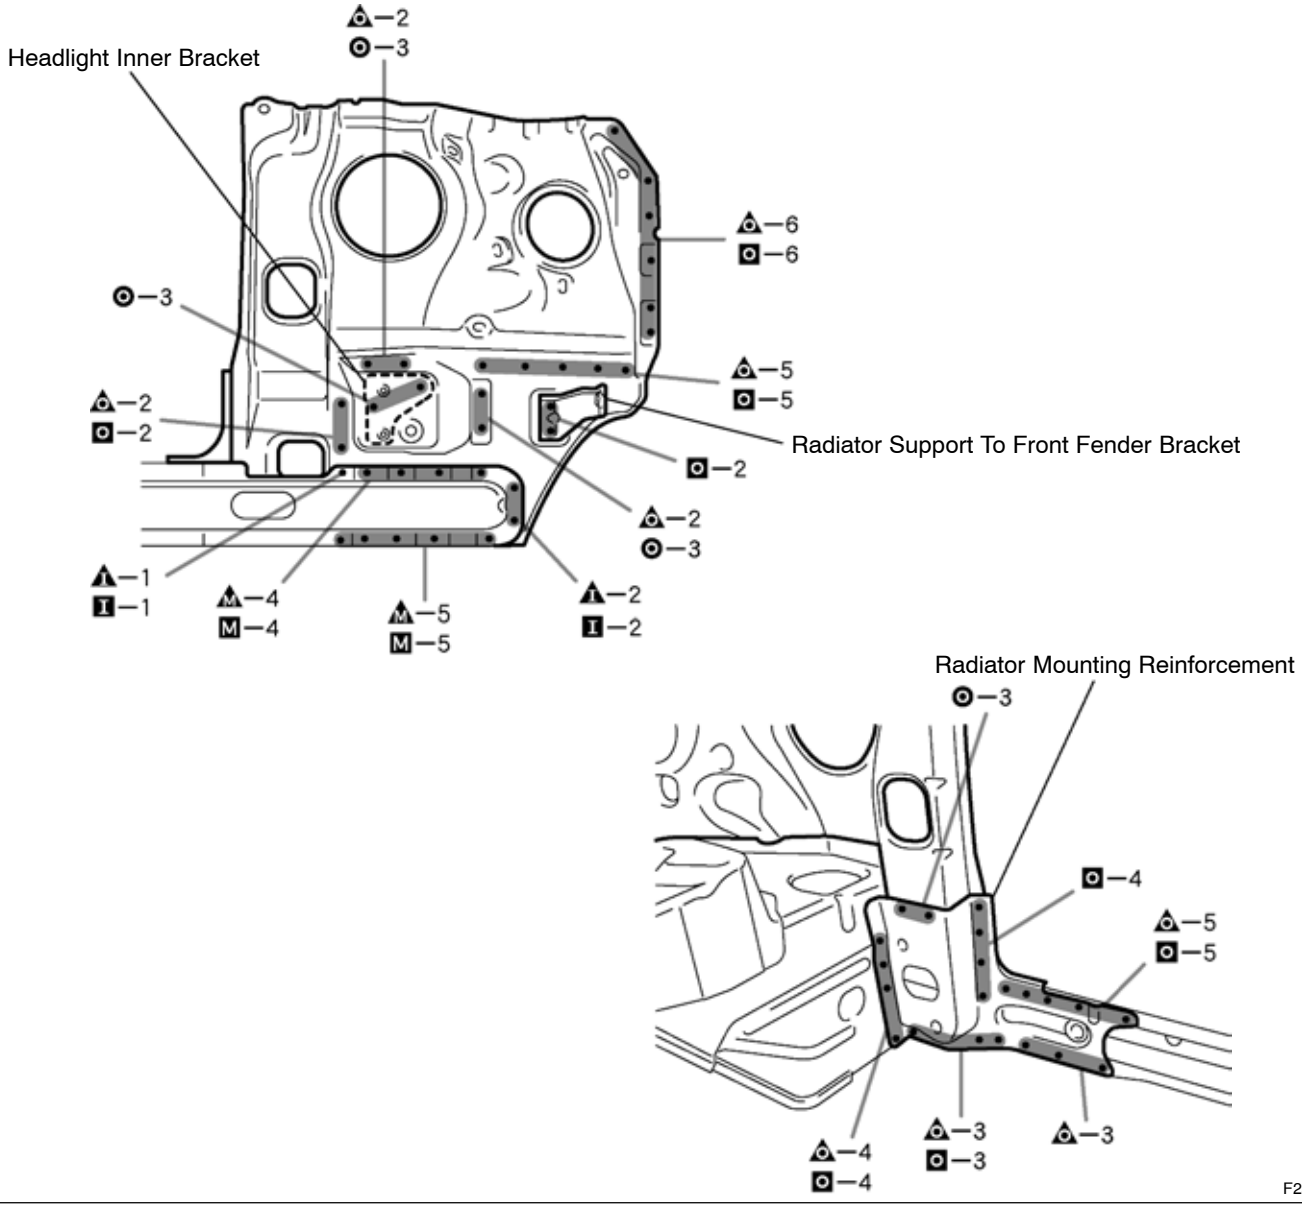

REMOVAL POINT

1 Remove the radiator mounting reinforcement at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)