QUARTER PANEL REINFORCEMENT (CUT)


F25294A


With the quarter panel removed.

Symbol meaning

		: Cut with disc sander, etc.	
REMOVAL	: Remove Weld Points	: Cut and Join Location	
INSTALLATION	: MIG Plug Weld	: Tack Weld	: Butt Weld

F25294B

REMOVAL·INSTALLATION

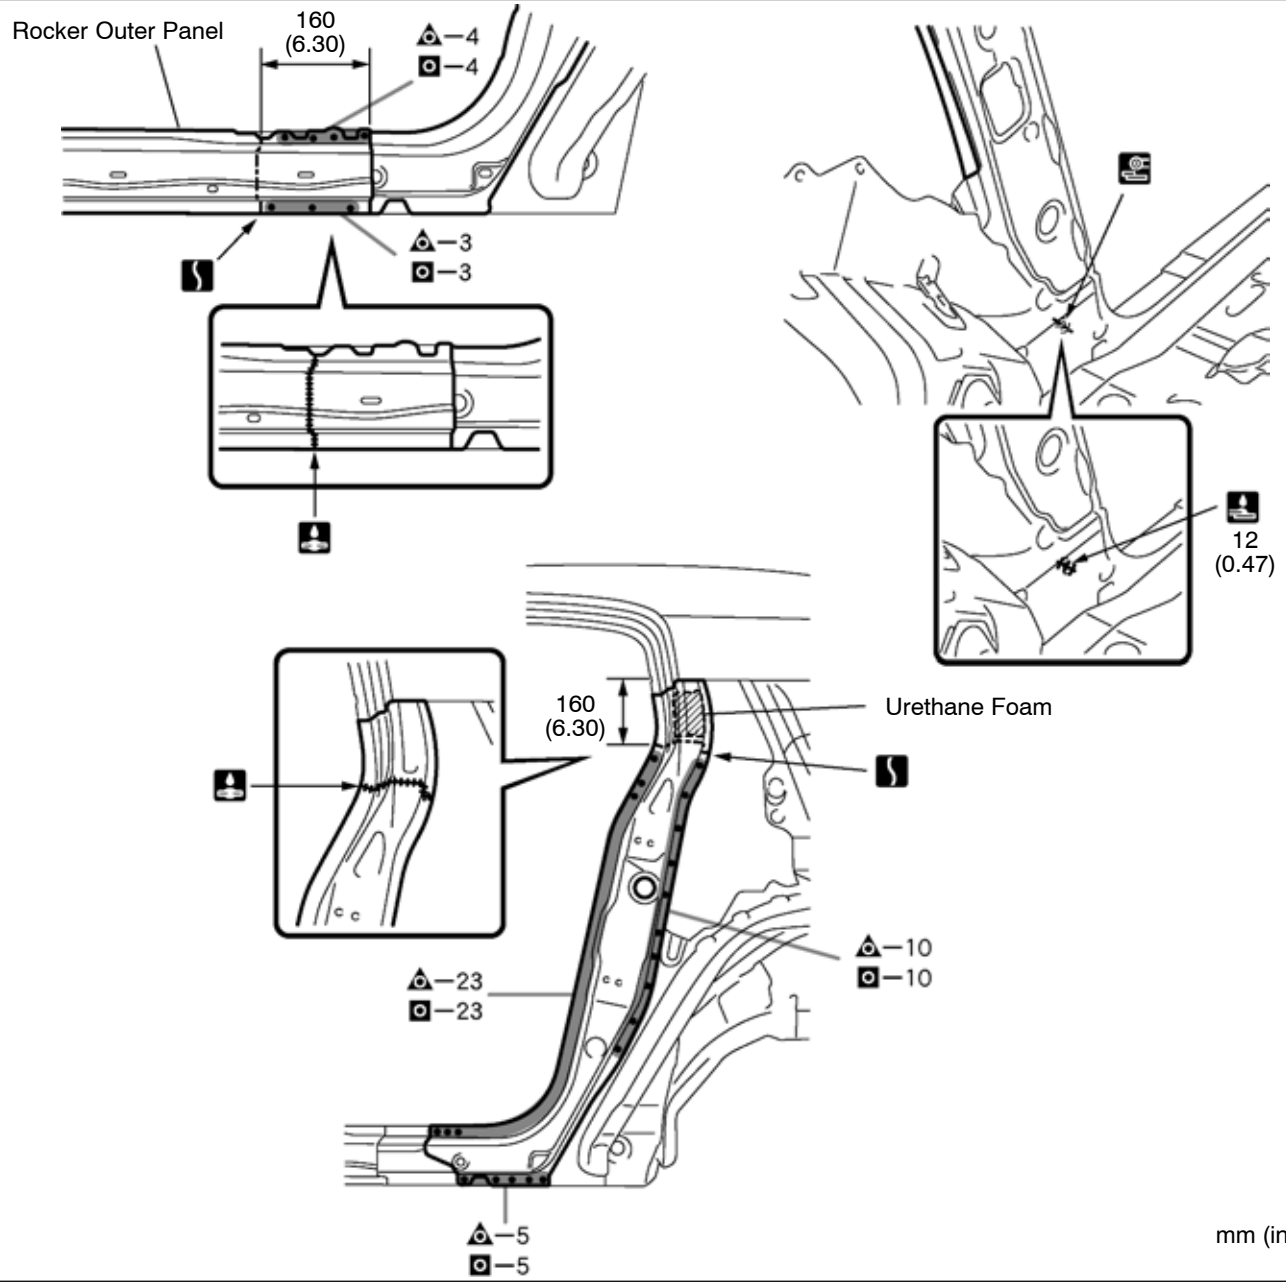

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply the polyurethane foam to the corresponding parts. (See the paint·coating)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.