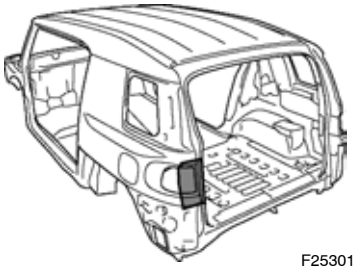
QUARTER INNER PANEL (CUT)


F25301A


With the quarter panel and back door opening side reinforcement removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: MIG Plug Weld	: Butt Weld

F25301B

REMOVAL·INSTALLATION

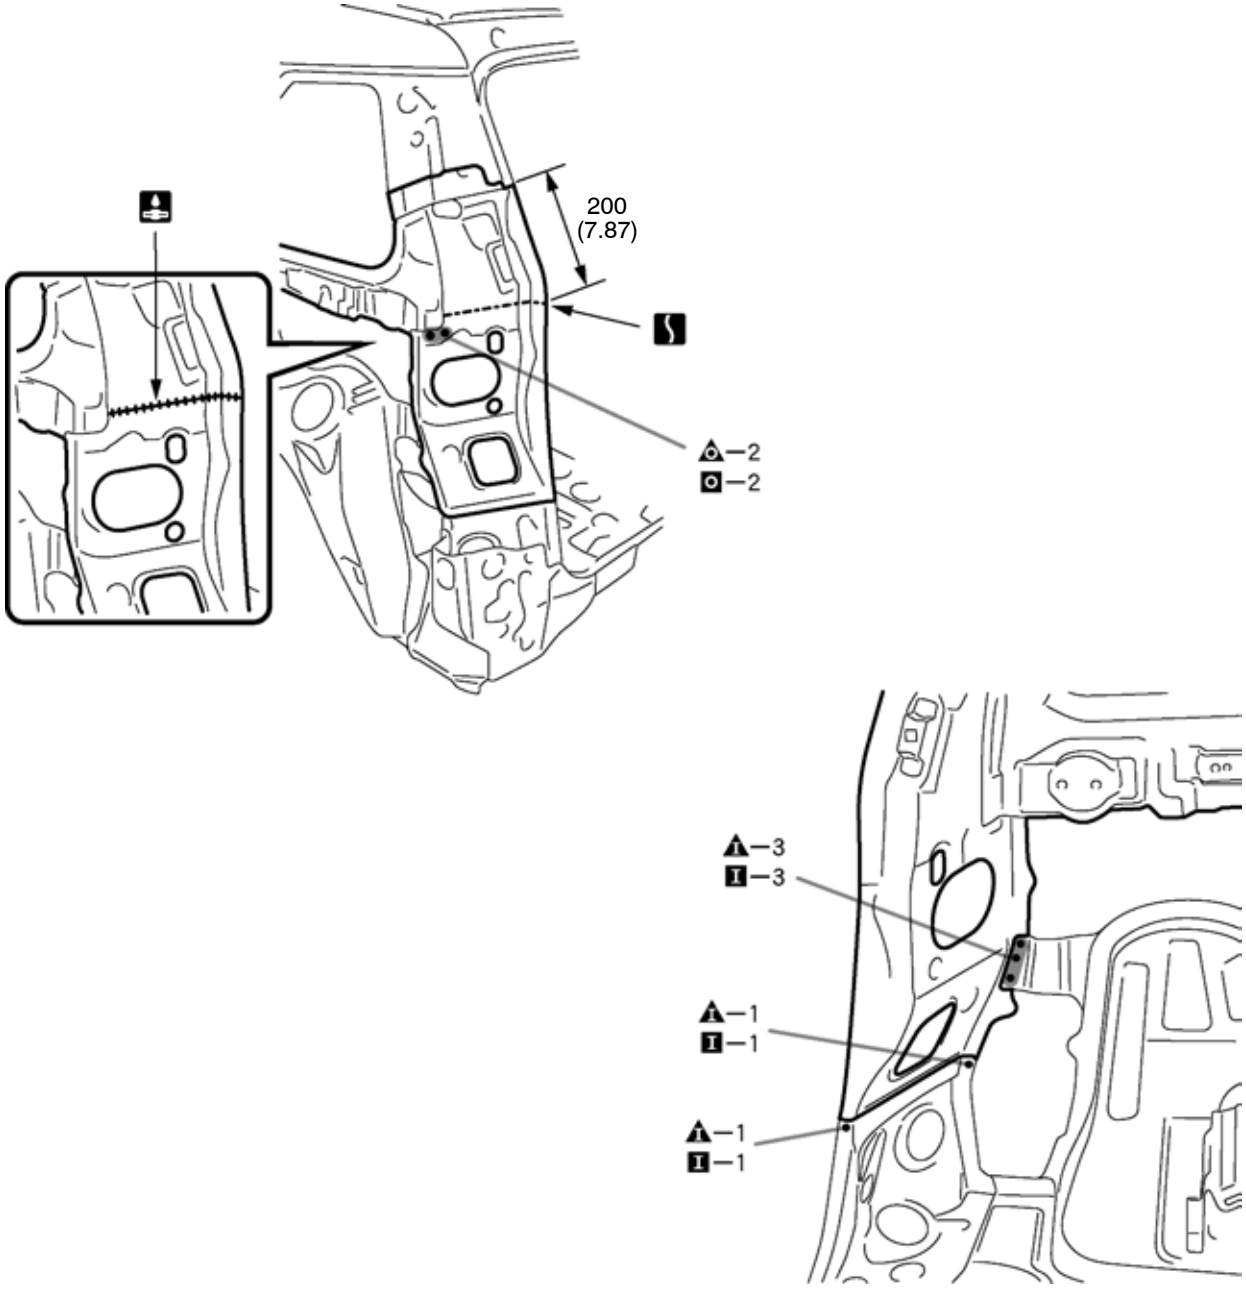

INSTALLATION POINT

1 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.