
DAMAGED VEHICLE DISPOSAL PRECAUTION (SRS AIRBAG SYSTEM)


For SRS airbag system adjustment methods, refer to the TOYOTA Repair Manual.

(1) When using an electric welder, first remove all airbags and the seat belt pretensioner.

(2) If impacts are likely to occur to the front airbag sensor, side airbag sensor, rear airbag sensor or seat position sensor, remove each sensor as necessary beforehand.

(3) Do not allow the front airbag sensor, side airbag sensor, rear airbag sensor or seat position sensor to become heated to high temperatures.

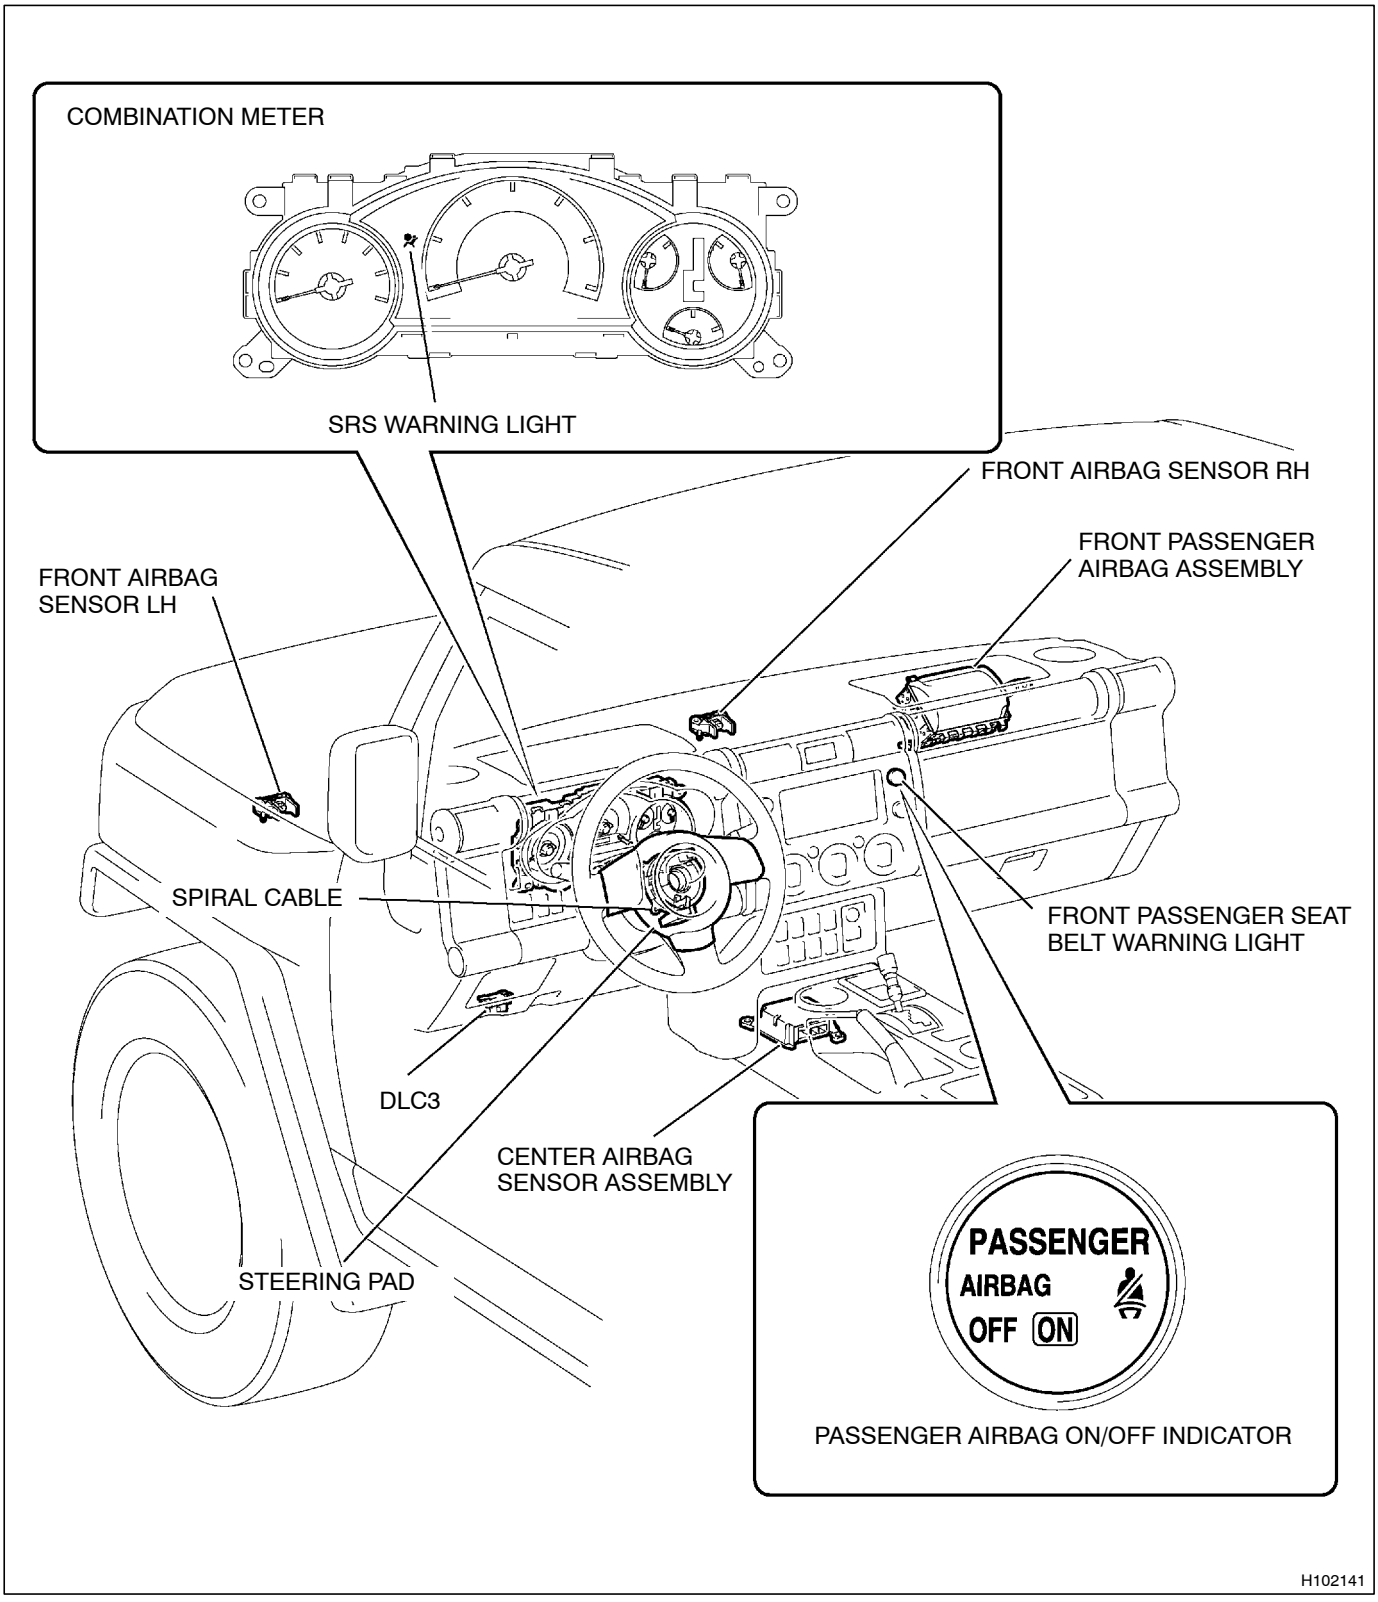

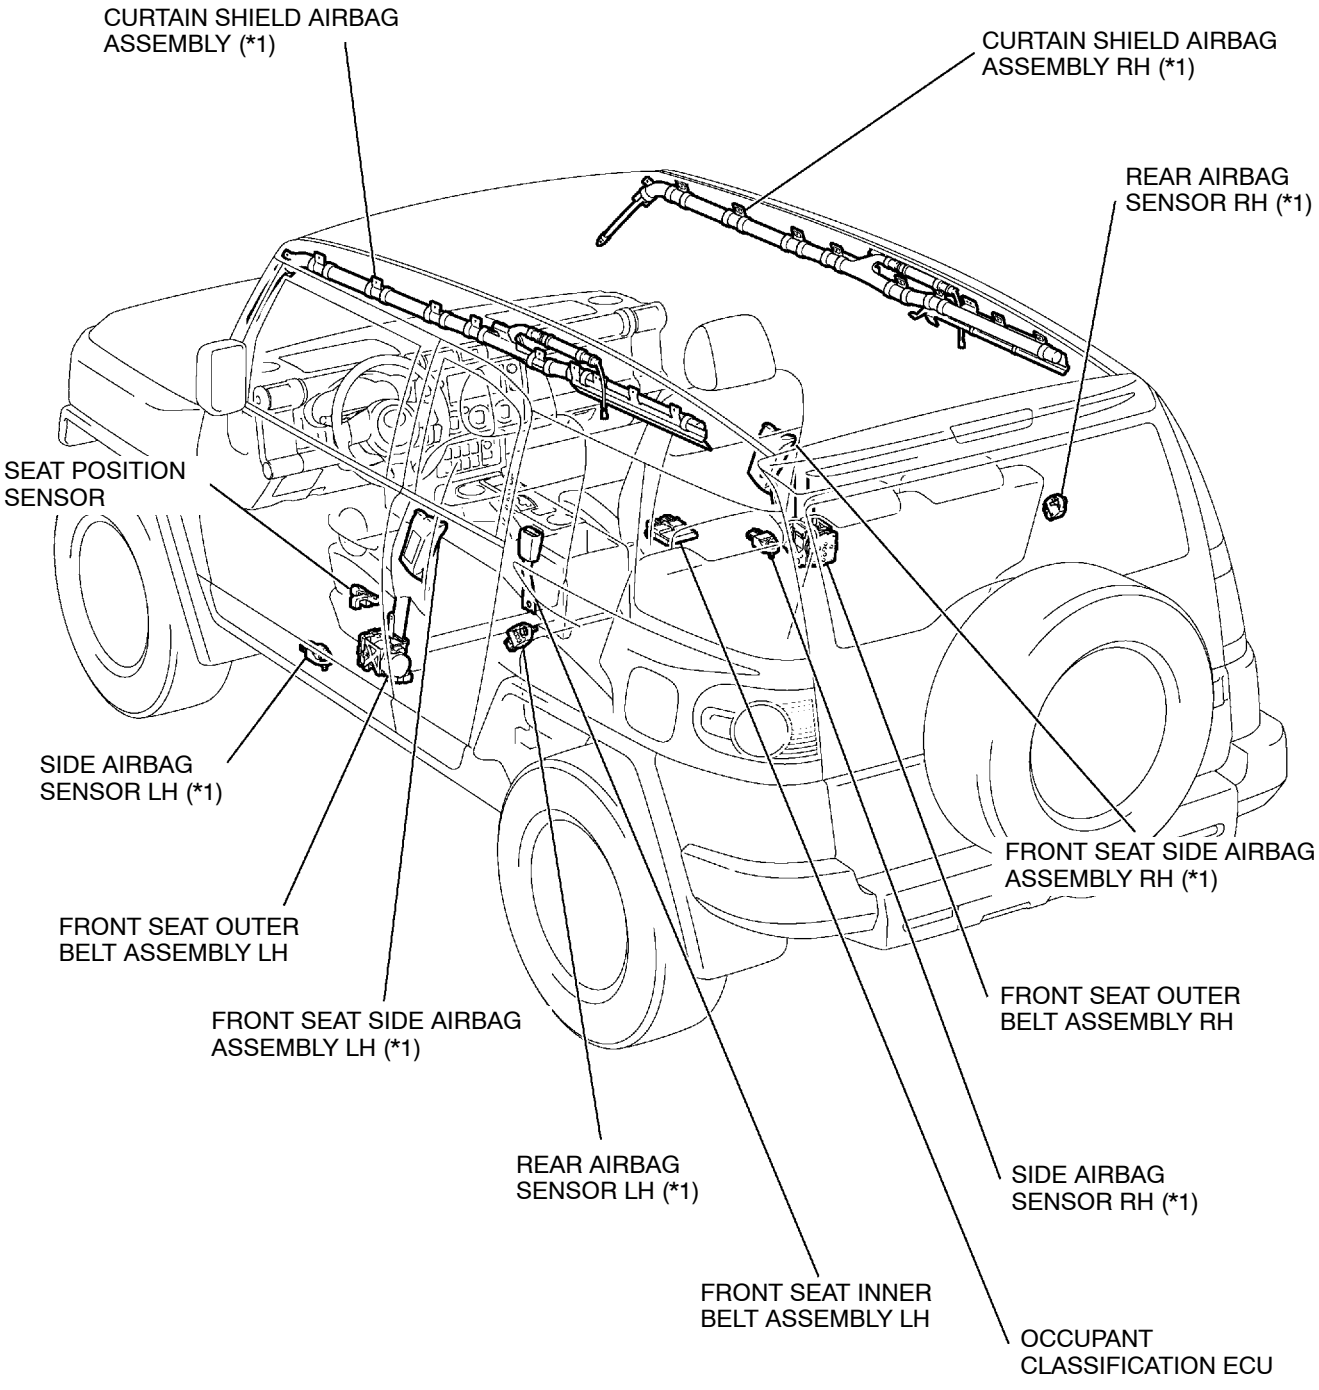

*1: w/ Side Airbag Assembly and Curtain Shield Airbag Assembly

H102142