

NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

1. NOTICE FOR USING JACK AND SAFETY STAND

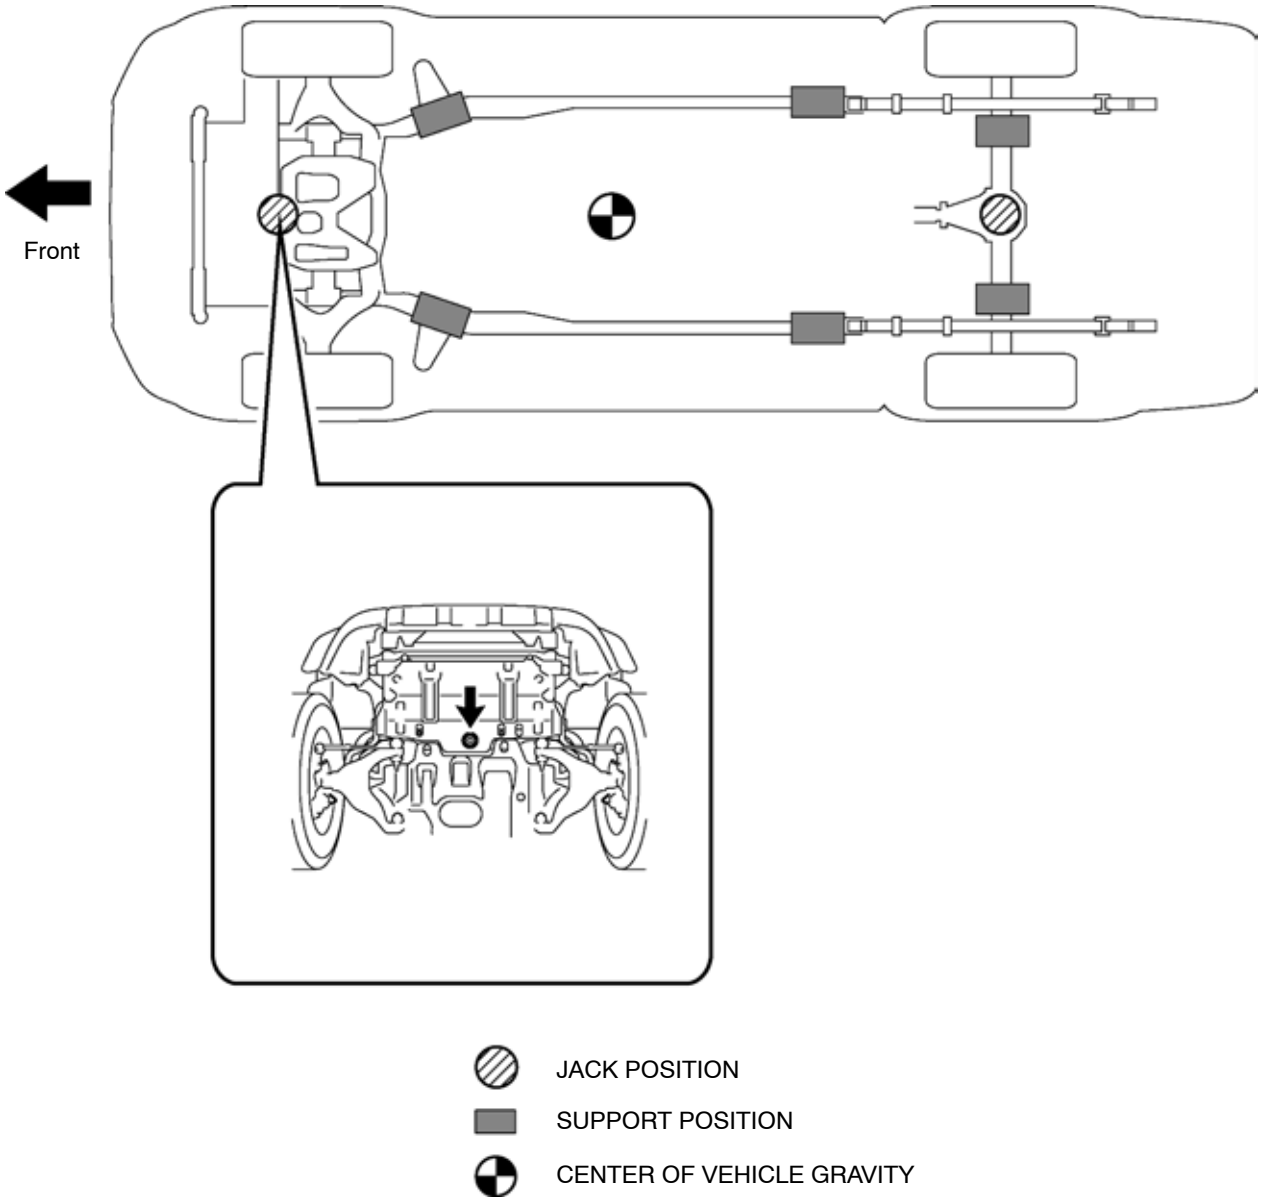

2. NOTICE FOR USING SWING ARM TYPE LIFT

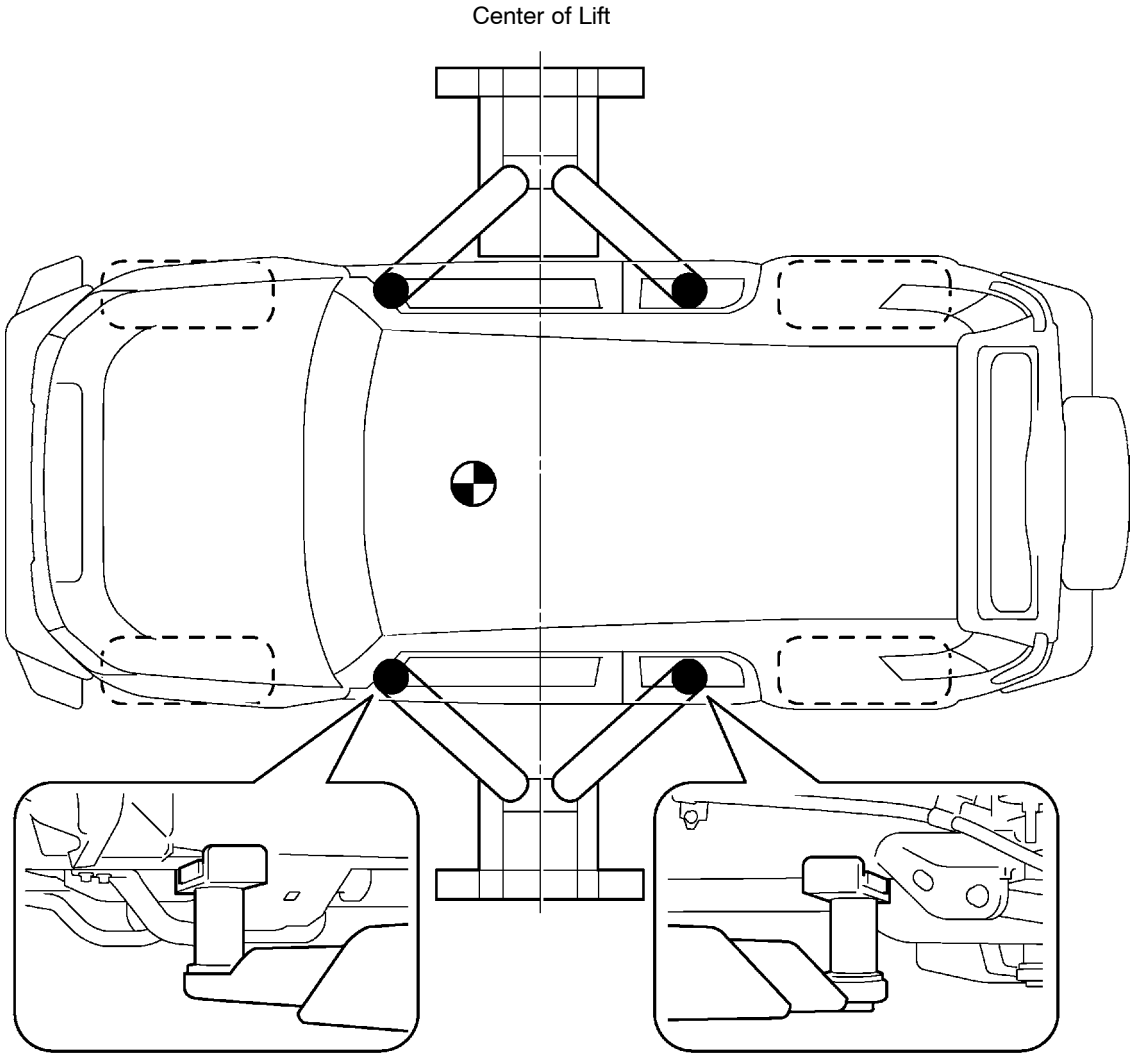

CENTER OF VEHICLE GRAVITY (Unloaded condition)

B144198