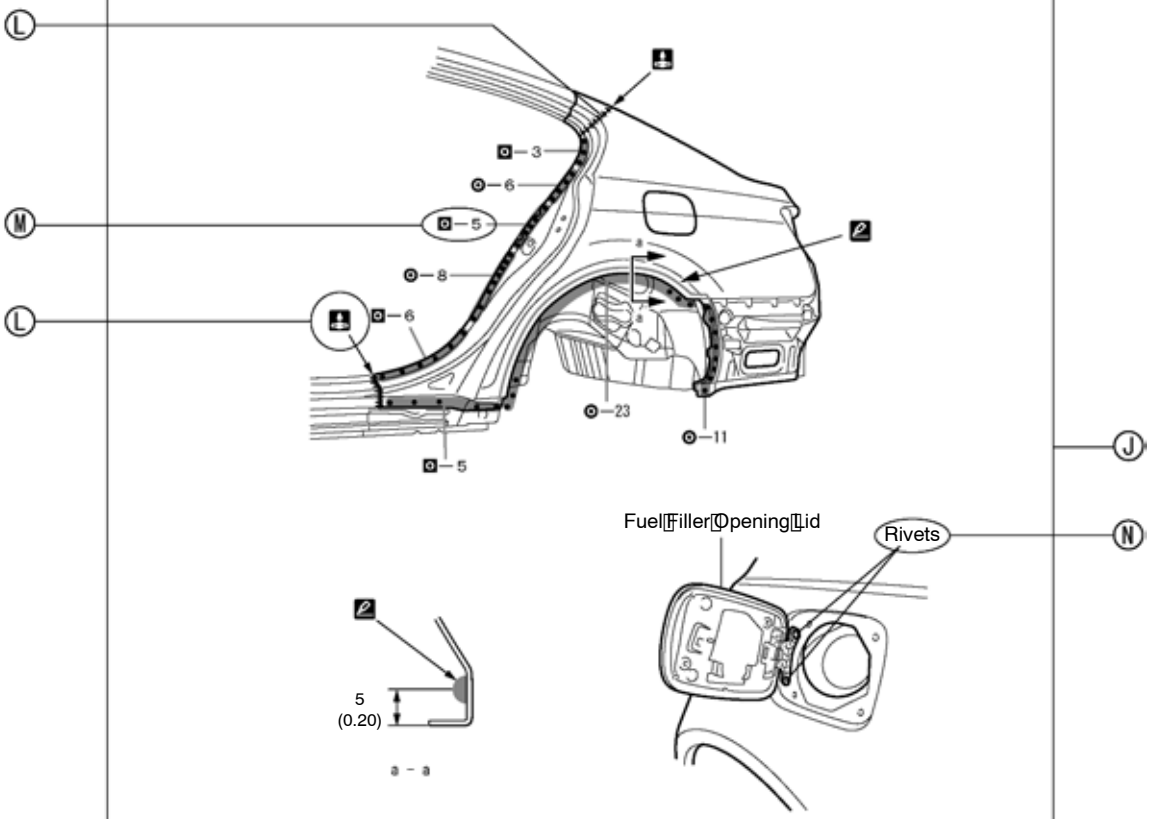
HOW TO USE THIS MANUAL

1. BODY PANEL REPLACEMENT THIS MANUAL

Symbol meaning

: MIG Plug Weld : Spot Weld
: Body Sealer : Butt Weld

INSTALLATION



POINT

1. Before temporarily installing the new parts, apply sealer to the wheel arch.
   HINT
   1) Apply body sealer evenly about 5 mm (0.20 in.) from the flange, avoiding any oozing.
   2) Apply sealer evenly, about 3 – 4 mm (0.12 – 0.16 in.) in diameter.
2. Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3. After welding, apply body sealer and undercoating to the corresponding parts.

Ⓘ SYMBOL MEANING

Ⓙ INSTALLATION DIAGRAM
Describes in detail installation to the new parts involving repair by welding and/or cutting, but excluding painting.

Ⓚ INSTALLATIOLN GUIDE
Provides additional to more efficiently help you perform the installation.

Ⓛ SYMBOLS (See page IN-34)

Ⓜ INSTALLATION OF WELD POINTS (See page IN-36)
Weld method and panel position symbols

Ⓝ PART NAME

F33026

Ⓐ QUARTER PANEL (CUT)



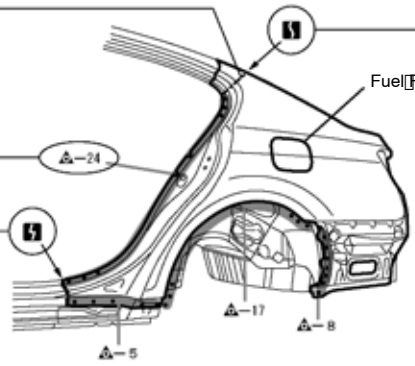
Ⓑ

Ⓒ · With the body lower back panel removed.

Ⓓ Symbol meaning
▲ ▲ ▲ : Remove Weld Points
: Cut and Join Location
: Cut Location for Suplly Parts

REMOVAL


Ⓗ



Ⓖ

Ⓗ

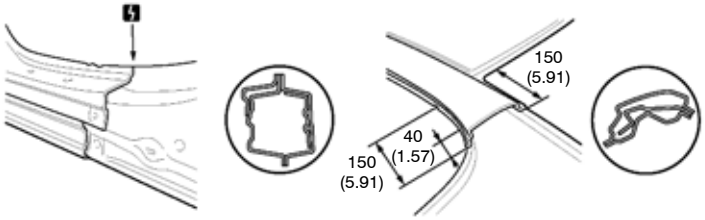Ⓔ



REMOVAL POINT
1. Remove the Fuel Filler Opening Lid at the same time.

Ⓕ

Ⓐ REPLACEMENT PART AND METHOD
QUARTER PANEL (CUT)
- Replacement method
  (ASSY)...Assembly replacement
  (CUT)...Major cutting (less than 1/2 of part used)
  (CUT-H)...Half cutting (about 1/2 of part used)
  (CUT-P)...Partial cutting (most of part used)
- Replacement part

Ⓑ PART LOCATION

Ⓒ REMOVAL CONDITIONS

Ⓓ SYMBOL MEANING

Ⓔ REMOVAL DIAGRAM
Describes in detail the removal of the damaged part involving repair by cutting.

Ⓕ REMOVAL GUIDE
Provides additional information to more efficiently help you perform the removal.

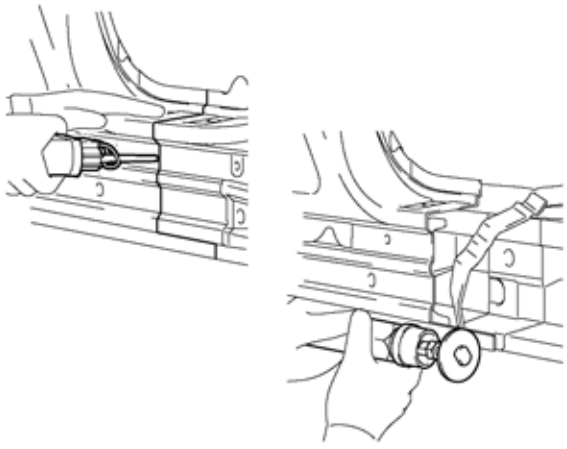
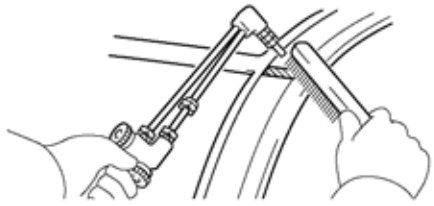
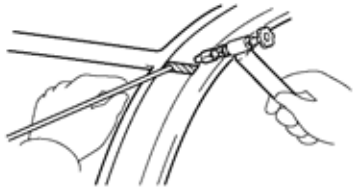
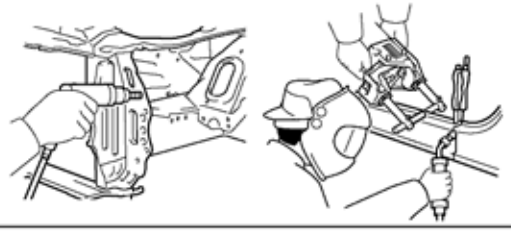
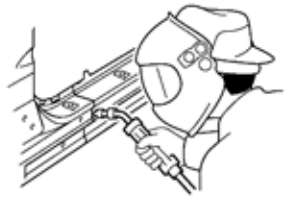
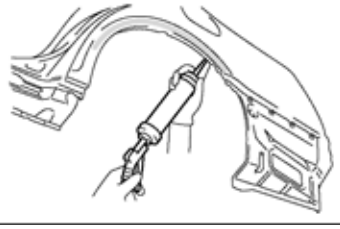
Ⓖ INSTALLATION OF WELD POINTS
Weld method and panel position symbols
(See page IN-36)

Ⓗ SYMBOLS (See page IN-34)

F33027

2. SYMBOLS

The following symbols are used in the welding diagrams in section BP of this manual to indicate cutting areas and the types of weld required.


SYMBOLS	MEANING	SYMBOLS	MEANING	ILLUSTRATION
	CUT		CUT AND JOIN LOCATION (Saw Cut)	
			CUT AND JOIN LOCATION (Cut Location for Supply Parts)	
			CUT LOCATION	
			CUT WITH DISC SANDER ETC.	
	BRAZE		BRAZE (Removal)	
	BRAZE		BRAZE (Installation)	
M I I M I	WELD POINTS	—	SPOT WELD OR MIG PLUG WELD	
	WELDING		CONTINUOUS MIG WELD (BUTT WELD)	
			CONTINUOUS MIG WELD (TACK WELD)	
	SEALER		BODY SEALER	 F33004

SYMBOLS	MEANING	SYMBOLS	MEANING	ILLUSTRATION
—			Assembly Mark	—
	—	—	BODY SEALER (Flat Finishing)	
	—		BODY SEALER (Flat Finishing)	F33005


3. ILLUSTRATION OF WELD POINT SYMBOLS



EXAMPLE:


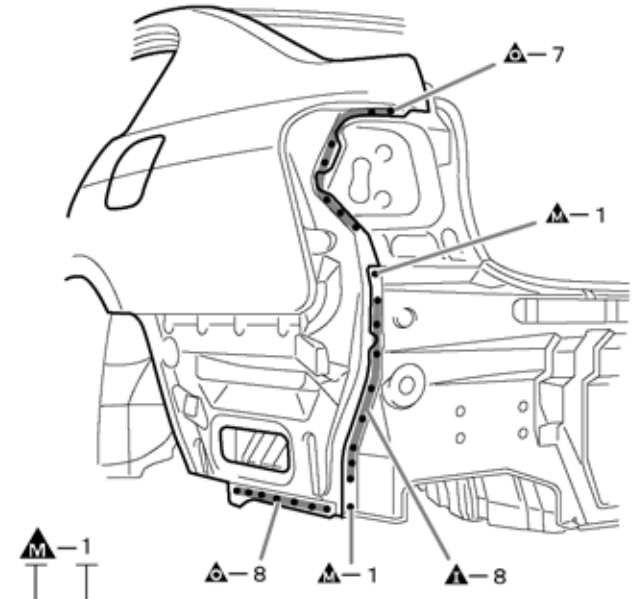
REMOVAL



INSTALLATION

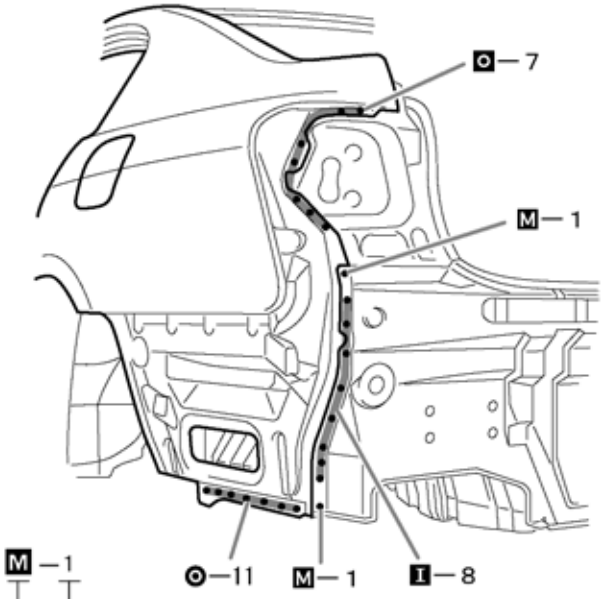

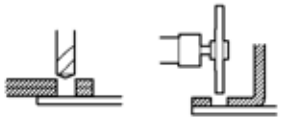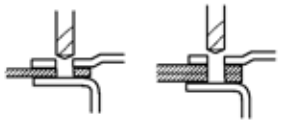SYMBOLS	MEANING	ILLUSTRATION
▲	Remove Weld Points	
O	(Outside)	
M	(Middle)	
I	(Inside)	

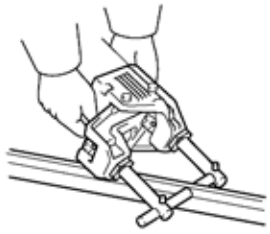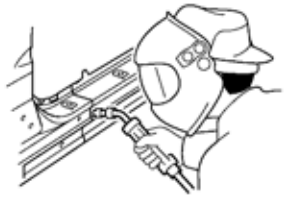SYMBOLS	MEANING	ILLUSTRATION
●	Spot Weld	
■	MIG Plug Weld	
+	Spot MIG Weld	

F33006