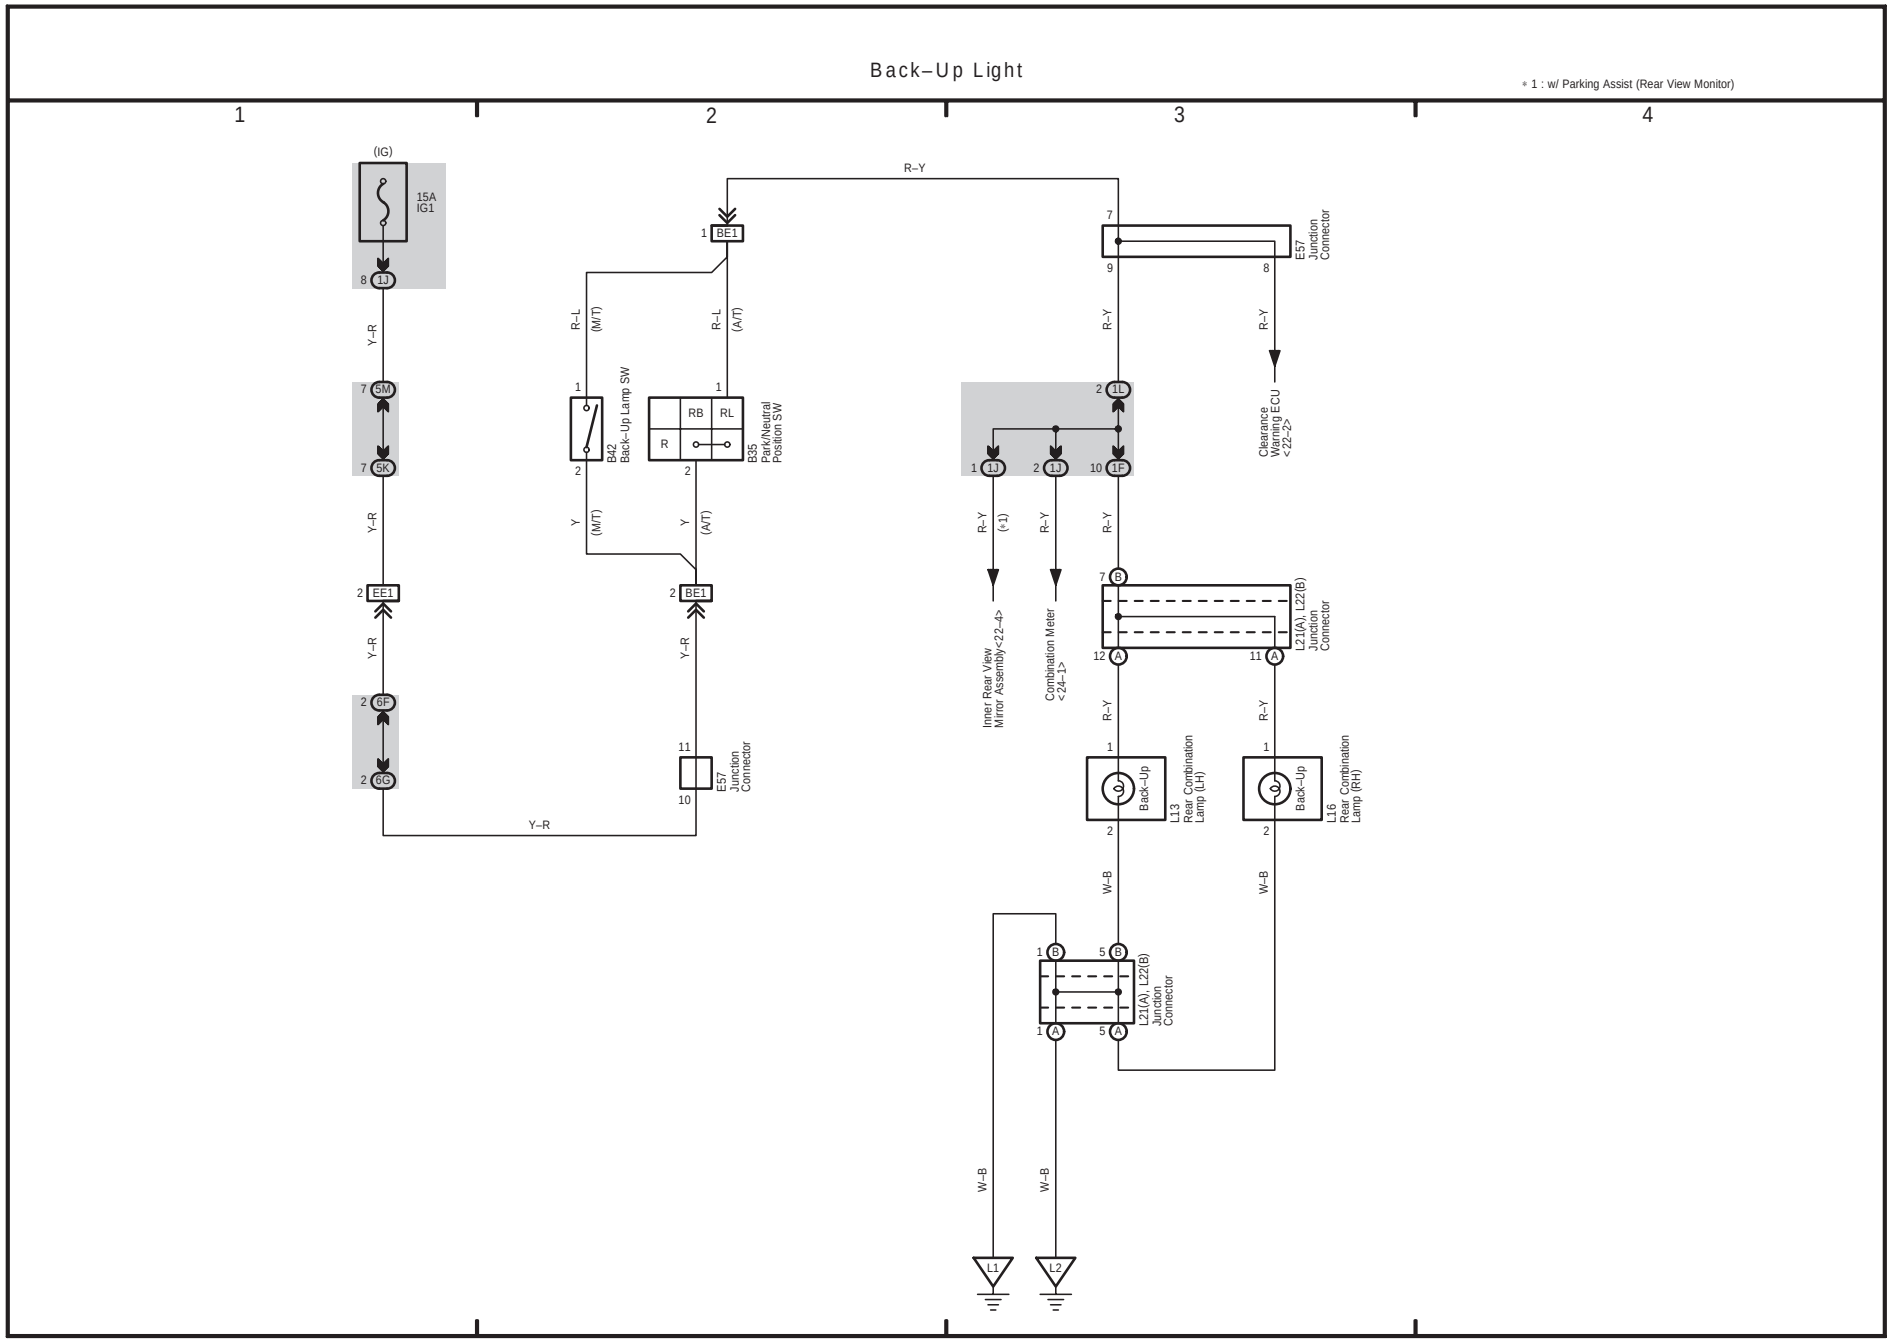

Back–Up Light
* 1 : w/ Parking Assist (Rear View Monitor)
1
2
3
4
(IG)
15A
IG1
8 1J
Y–R
7 5M
7 5K
Y–R
2 EE1
Y–R
2 6F
2 6G
Y–R
1 BE1
R–L (M/T)
R–L (A/T)
1
B42
Back–Up Lamp SW
2
Y (M/T)
1
RB
RL
R
B35
Park/Neutral Position SW
2
Y (A/T)
2 BE1
Y–R
11
E57
Junction Connector
10
R–Y
7
9
8
E57
Junction Connector
R–Y
Clearance Warning ECU <22–2>
2 1L
1 1J
2 1J
10 1F
R–Y (*1)
R–Y
R–Y
Inner Rear View Mirror Assembly<22–4>
Combination Meter <24–1>
7 B
12 A
11 A
L21(A), L22(B) Junction Connector
R–Y
R–Y
1
Back–Up
L13
Rear Combination Lamp (LH)
2
1
Back–Up
L16
Rear Combination Lamp (RH)
2
W–B
W–B
1 B
5 B
1 A
5 A
L21(A), L22(B) Junction Connector
W–B
W–B
L1
L2