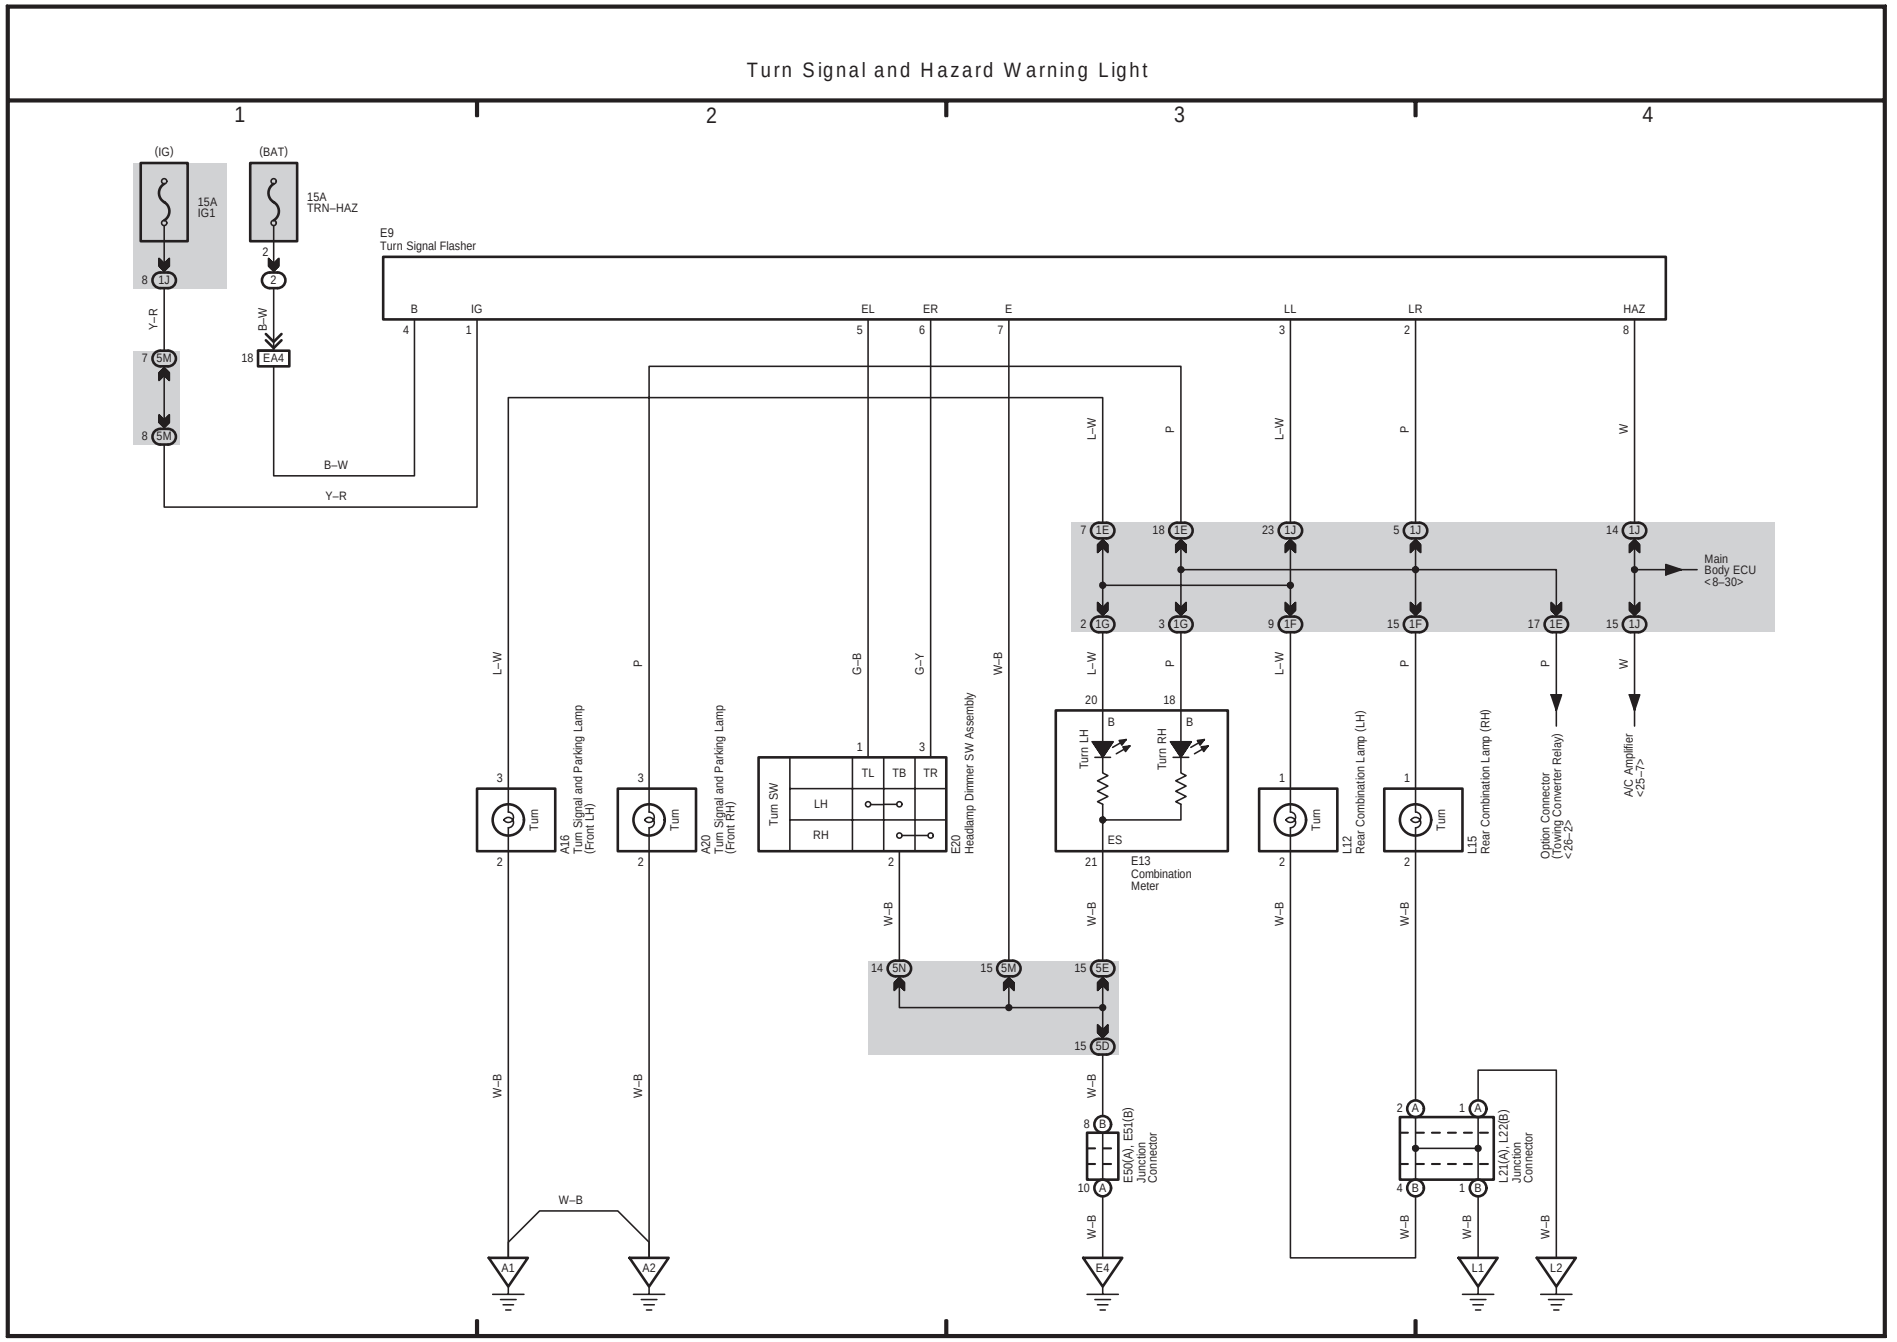

Turn Signal and Hazard Warning Light
1
2
3
4
(IG)
(BAT)
15A
IG1
15A
TRN–HAZ
E9
Turn Signal Flasher
B
IG
EL
ER
E
LL
LR
HAZ
Y–R
B–W
L–W
P
W
G–B
G–Y
W–B
Main
Body ECU
<8–30>
A16
Turn Signal and Parking Lamp
(Front LH)
A20
Turn Signal and Parking Lamp
(Front RH)
Turn SW
TL
TB
TR
LH
RH
E20
Headlamp Dimmer SW Assembly
Turn LH
Turn RH
E13
Combination
Meter
L12
Rear Combination Lamp (LH)
L15
Rear Combination Lamp (RH)
Option Connector
(Towing Converter Relay)
<26–2>
A/C Amplifier
<25–7>
E50(A), E51(B)
Junction
Connector
L21(A), L22(B)
Junction
Connector
A1
A2
E4
L1
L2