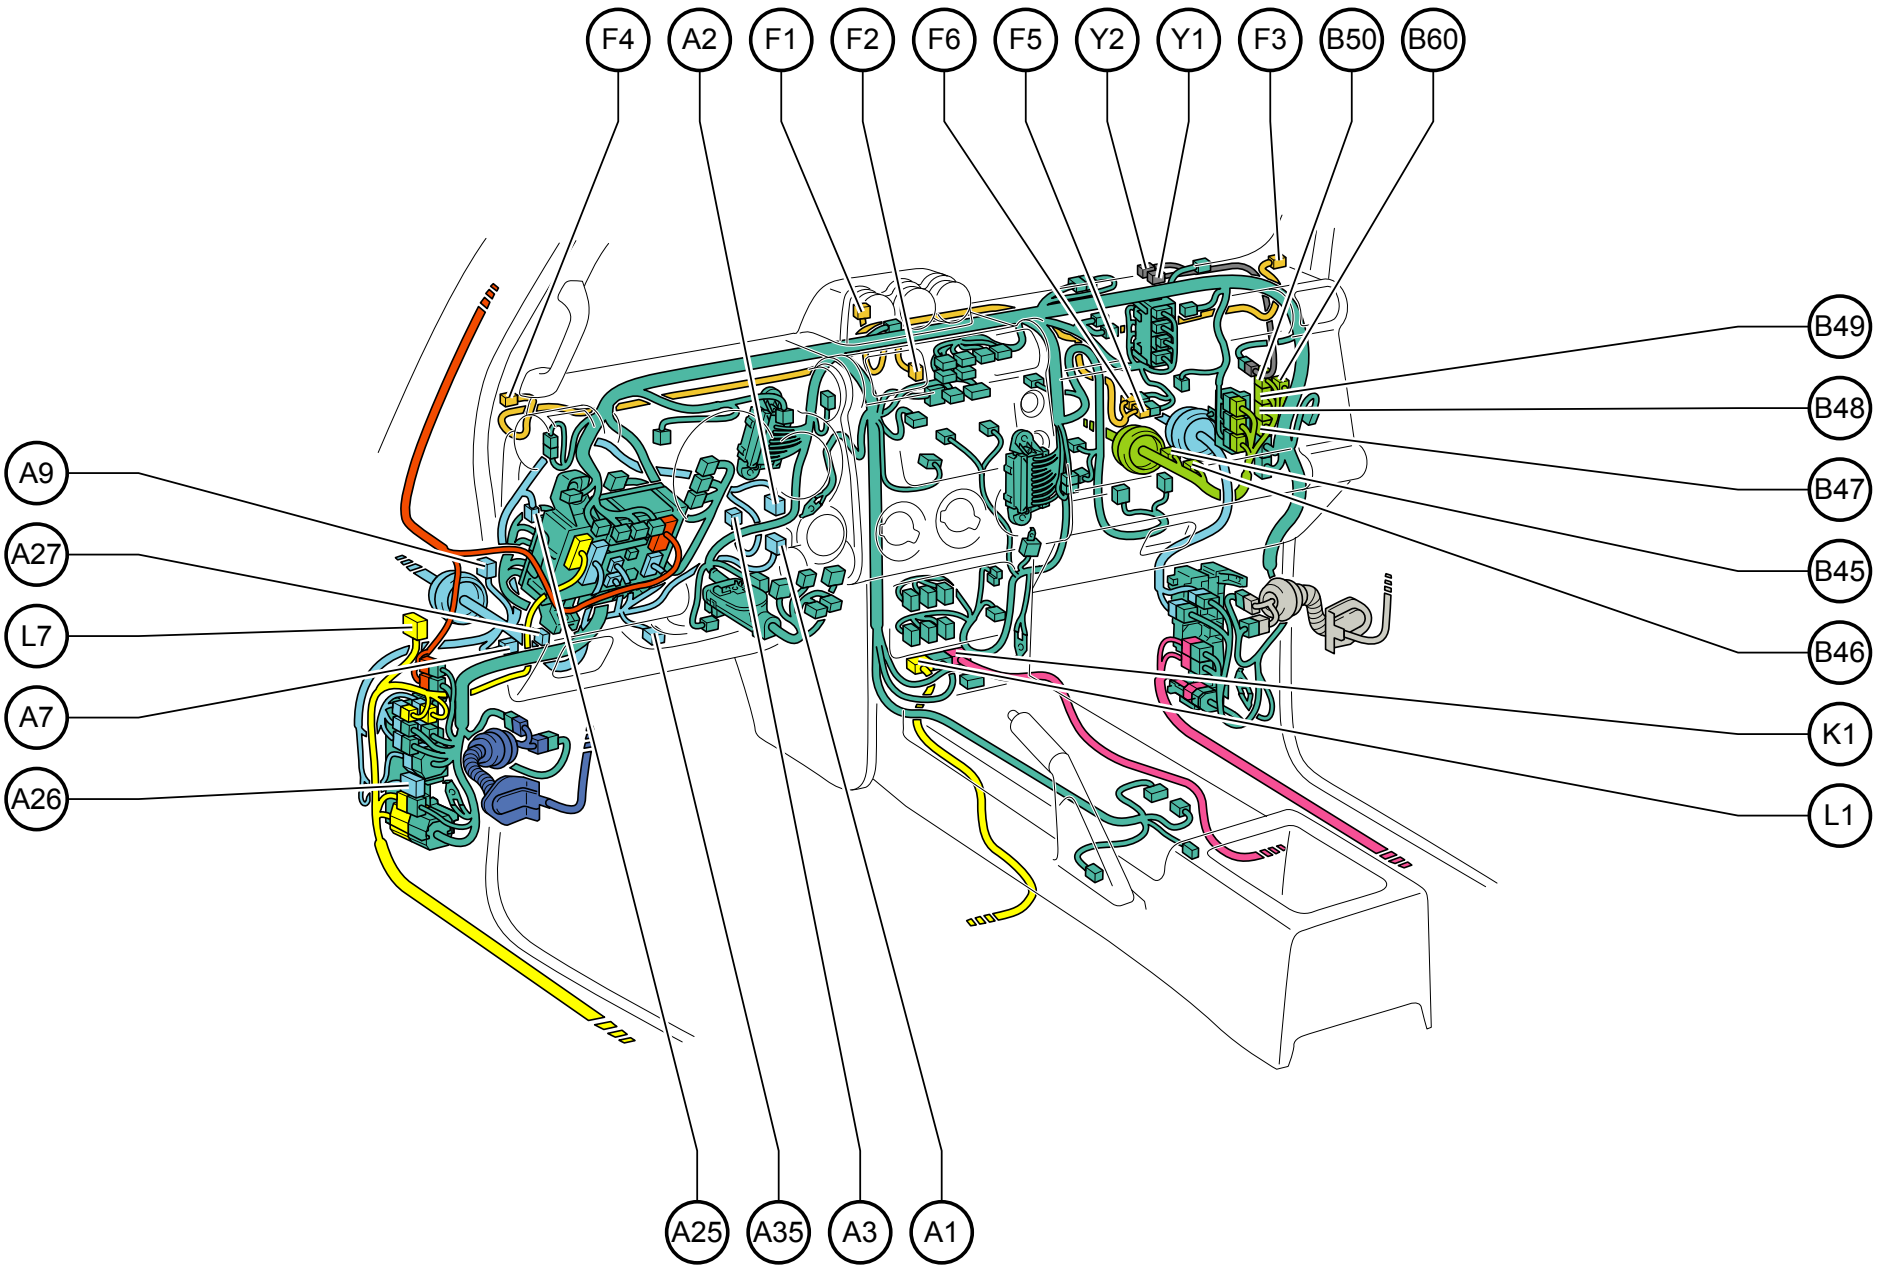

F4
A2
F1
F2
F6
F5
Y2
Y1
F3
B50
B60
B49
B48
B47
B45
B46
K1
L1
A9
A27
L7
A7
A26
A25
A35
A3
A1

A 1 Ignition SW
A 2 Accelerator Position Sensor
A 3 Stop Lamp SW
A 7 Option Connector (Towing Converter Relay)
A 9 Clutch Start SW
A 25 Cruise Control Clutch SW
A 26 Option Connector (Driving Lamp SW)
A 27 Junction Connector
A 35 Tire Pressure Warning Reset SW

B 45 Junction Connector
B 46 Junction Connector
B 47 Engine Control Module
B 48 Engine Control Module
B 49 Engine Control Module
B 50 Engine Control Module
B 60 4WD Control ECU

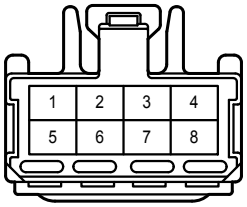
F 1 Accessory Meter
F 2 Clock
F 3 Tweeter (Front RH)
F 4 Tweeter (Front LH)
F 5 Junction Connector
F 6 Junction Connector

K 1 Airbag Sensor Assembly Center

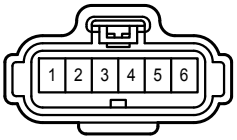
L 1 Airbag Sensor Assembly Center
L 7 4WD Control ECU (Rear Diff. Lock)

Y 1 Airbag Squib (Front Passenger's Airbag Assembly)
Y 2 Airbag Squib (Front Passenger's Airbag Assembly)

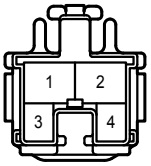
A 1
White



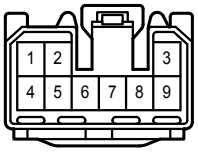

A 2
Black





A 3
White





A 7
White



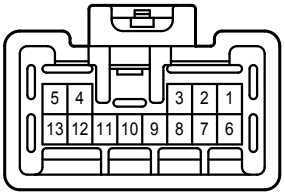

A 9
Black



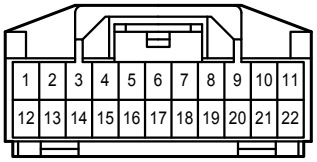

A 25
White




A 26
White



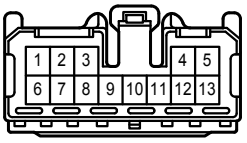

A 27
Black



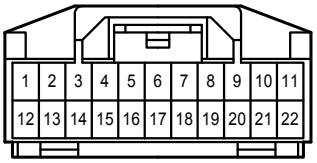

A 35
Black



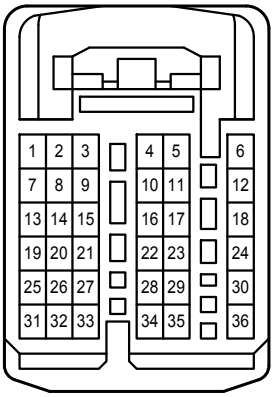

B 45
Blue



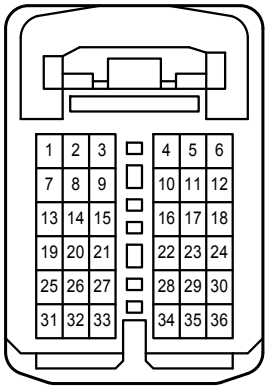

B 46
White



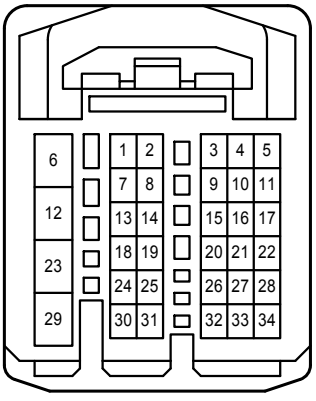

B 47
White



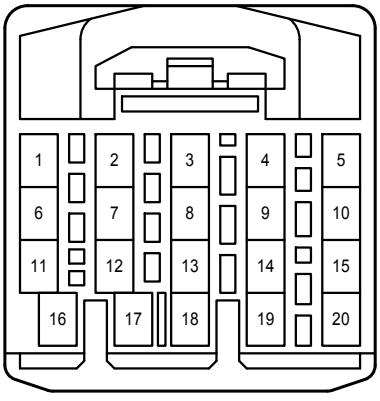

B 48
White



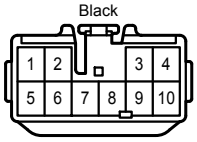

B 49
White



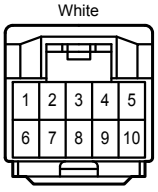

B 50
White



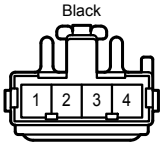

B 60
Black



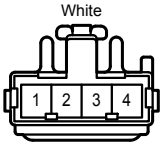

F 1
White



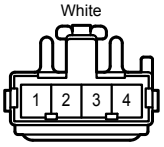

F 2
Black



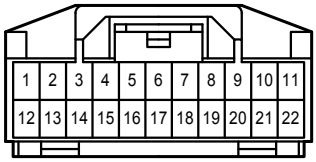

F 3
White



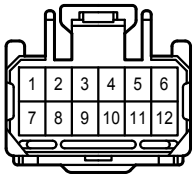

F 4
White



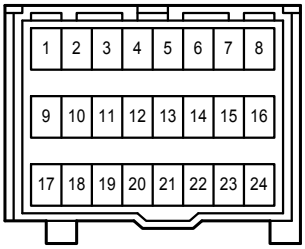
F 5
Blue



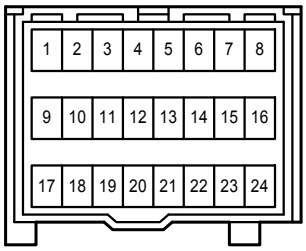

F 6
White



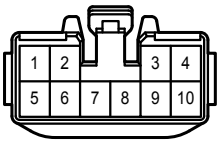

K 1
Yellow





L 1
Yellow




L 7
White




Y 1
Orange




Y 2
Black

