




(IG)
15A
IG1
8 1J
Y–R
7 5M
7 5K
Y–R
2 EE1
Y–R
2 6F
2 6G
Y–R
10 A
11 A
E57(A)
Junction
Connector
R–L
(M/T)
R–L
(A/T)
1 BE1
1
2
B42
Back–Up Lamp SW
RB
RL
R
B35
Park/Neutral
Position SW
Y
(M/T)
Y
(A/T)
2 BE1
Y–R
R–Y
7 A
9 A
E57(A)
Junction
Connector
R–Y
2 1L
2 1J
Turn Signal
Flasher
L–W
P
Park/Neutral
Position SW
Y–B
(A/T)
Park/Neutral
Position SW
G–W
(A/T)
Shift Lock
Control ECU
R–G
(A/T)
L
(A/T)
20 A
18 A
21 B
20 B
19 B
18 B
17 B
B
B
(M/T)
P
R
N
D
4
(A/T)
Turn LH
Turn RH
A/T P
P
R
N
D
4
(M/T)
A/T3
22 B
E13(A), E14(B)
Combination Meter
B–R
(A/T)
Transfer Indicator SW
(Neutral Position)
*10 : w/ Crawl


W–B
4
EK4
4 IK1
W–B
W–B
W–B
W–B
W–B
1
E52
Junction
Connector
W–B
I1
K1
K2
E1
E5


(BAT)
10A
DOME
50A
J/B
10A TAIL
TAIL Relay
E67(A)
Junction
Connector
Park/Neutral
Position SW
Shift Lock
Control ECU
Main Body ECU
W–R
P–L
B–L
R–W
G
R
L–W
(A/T)
(M/T)
Beam
Door
Illumination
VOLT
CONTROL
SI
SW
DOOR
KSW
ILL–
RHCL
ES
V–Y
W–L
V–G
BR–W
W–G
(*10)
W–B
GR–R
Light Control
Rheostat
Illuminations
E50(A), E51(B)
Junction
Connector
E13(A), E14(B)
Combination Meter
E4



(IG)
7. 5A
GAUGE
4 1G
11 1K
V–R
14
SPD
1 1G
Main Body
ECU
V–R
R–L
R
W
R
W
E13(A), E14(B)
Combination Meter
10 B
9 B
2 A
14 A
CANH
CANL
IG+
+S
Tire
Pressure
ODO/TRIP
SRS
Driver' s
Seat Belt
Fuel
Warning
TPMS
CONTROL
FLASHING
FUEL
CONTROL
TIRE
L
WRNP
L
E3
32 A
8 A
7 A
16 A
5 A
P–B
G–Y
LG
V–W
Y–B
7 EL2
15 EL2
Front Seat
Inner Belt (LH)
A/C Amplifier
V–W
B–R
3
Gage
2
L5
Fuel Suction Pump
and Gage Assembly
9 5G
9 5D
9 5F
9 5C
B–W
B–W
B–W
B–W
E33
A/C Amplifier
5
4
9
20
IND
TACH
TAC
TACO
SPD
TW
2
21
3
E74
Tire Pressure
Warning ECU
E1
Data Link
Connector 3
V–R
V–R
BR–B
V–R
GR–R
GR–R
B–W
V–R

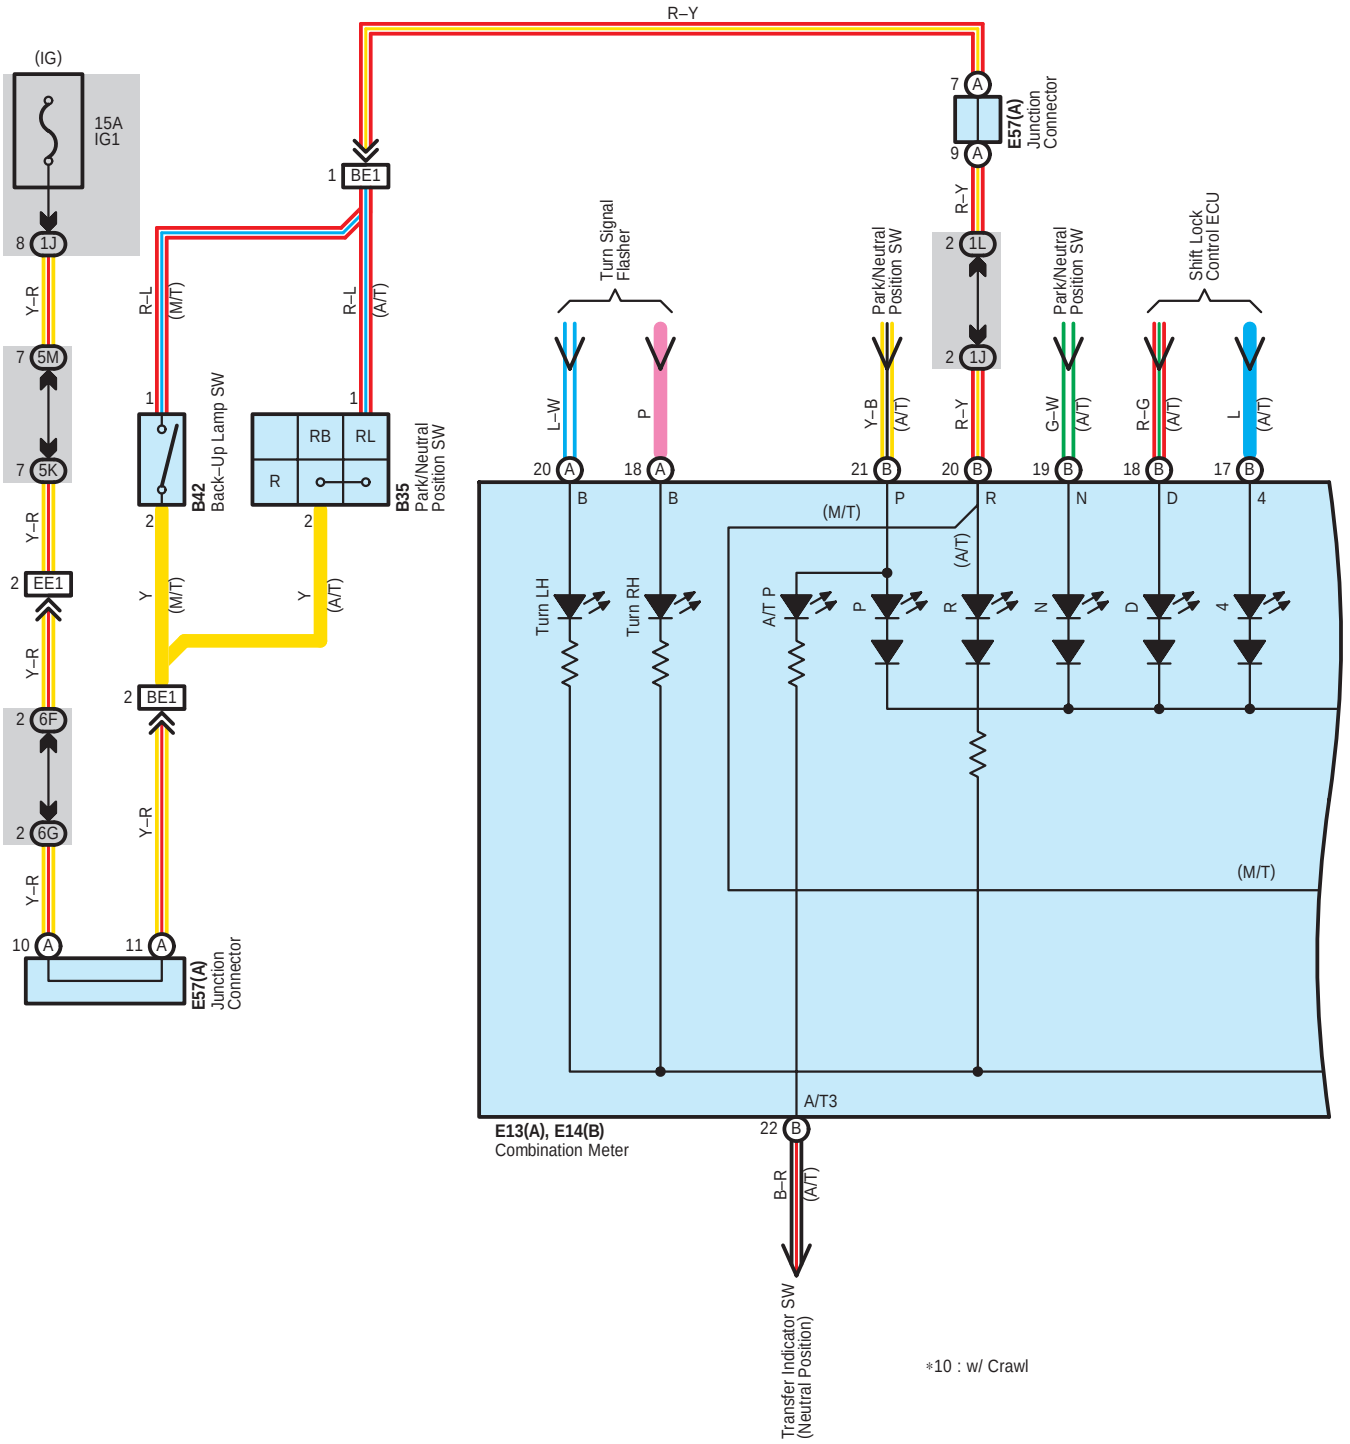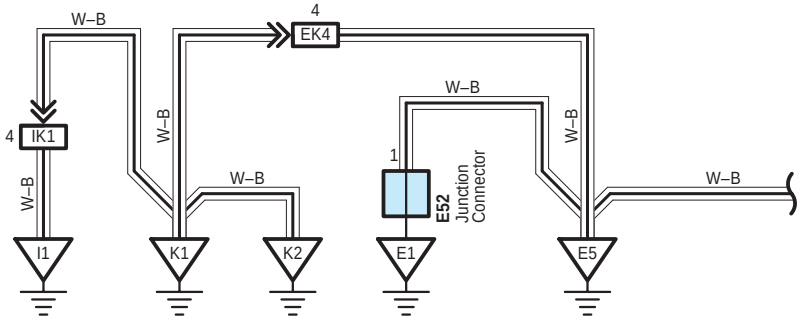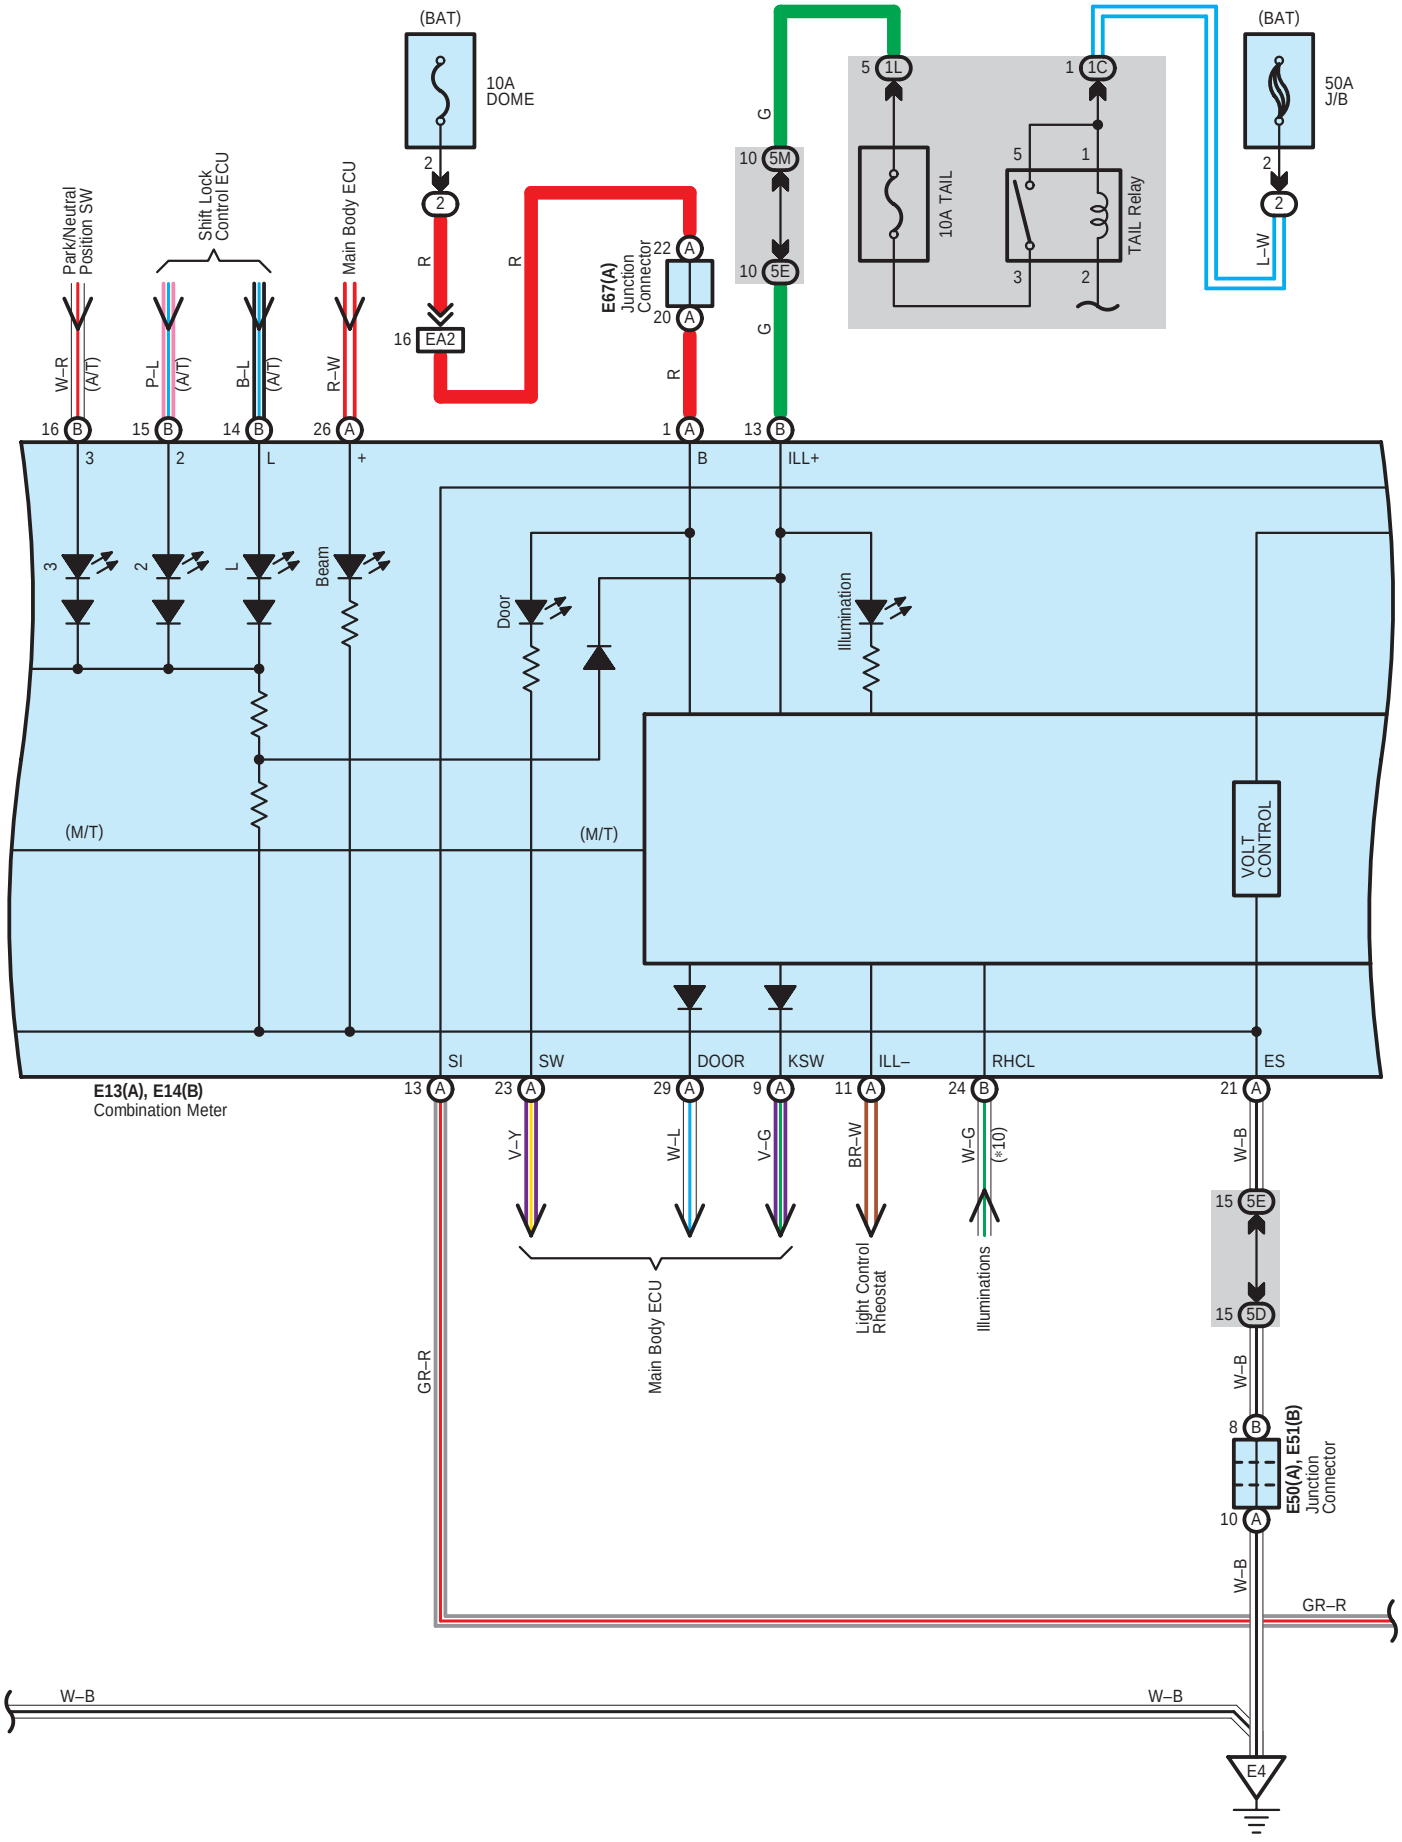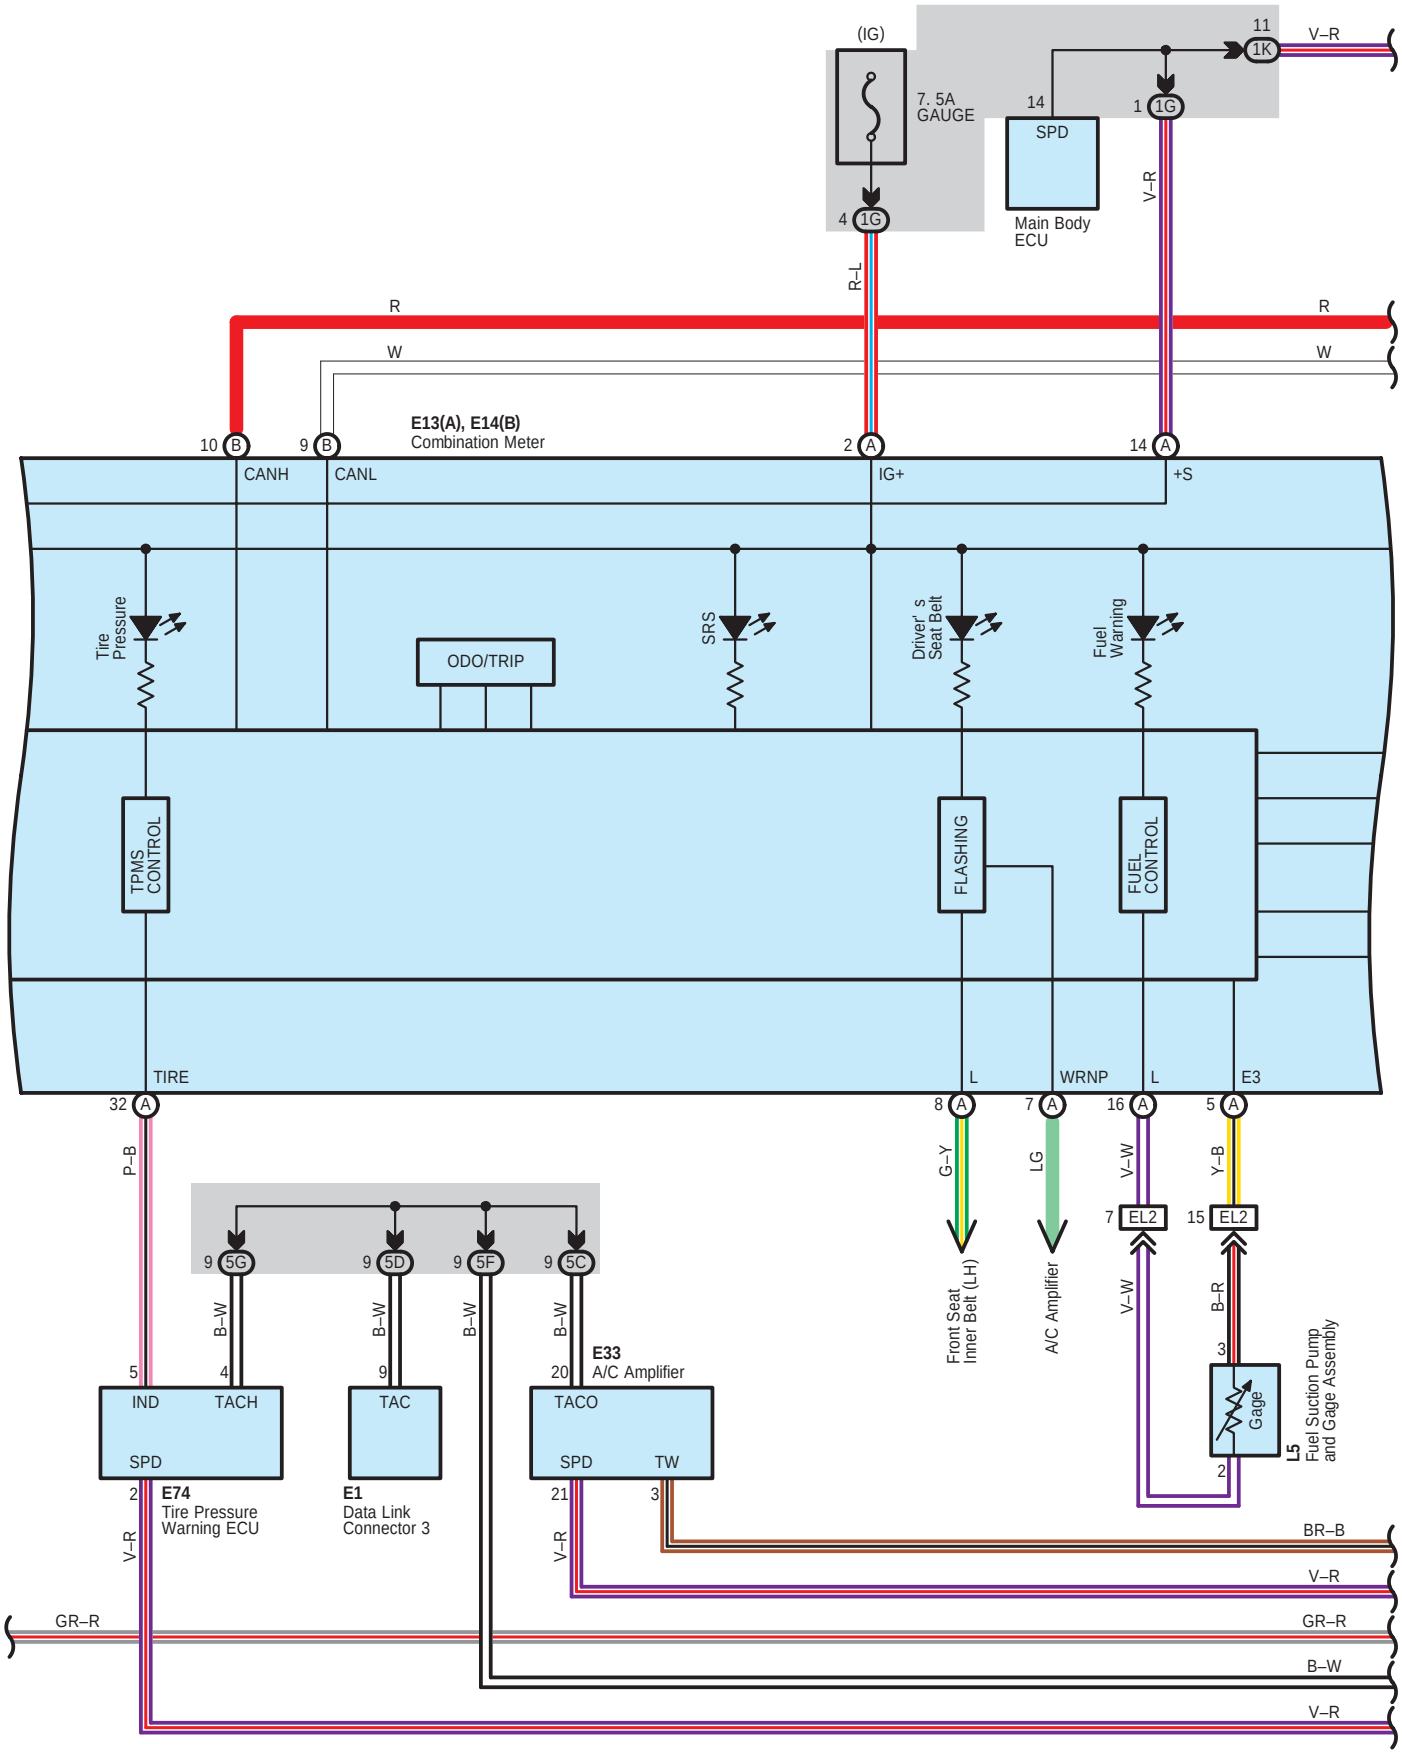


∗ 3 : USA
∗ 4 : Except USA
∗10 : w/ Crawl
∗11 : w/o Crawl





E13(A), E14(B)
Combination Meter

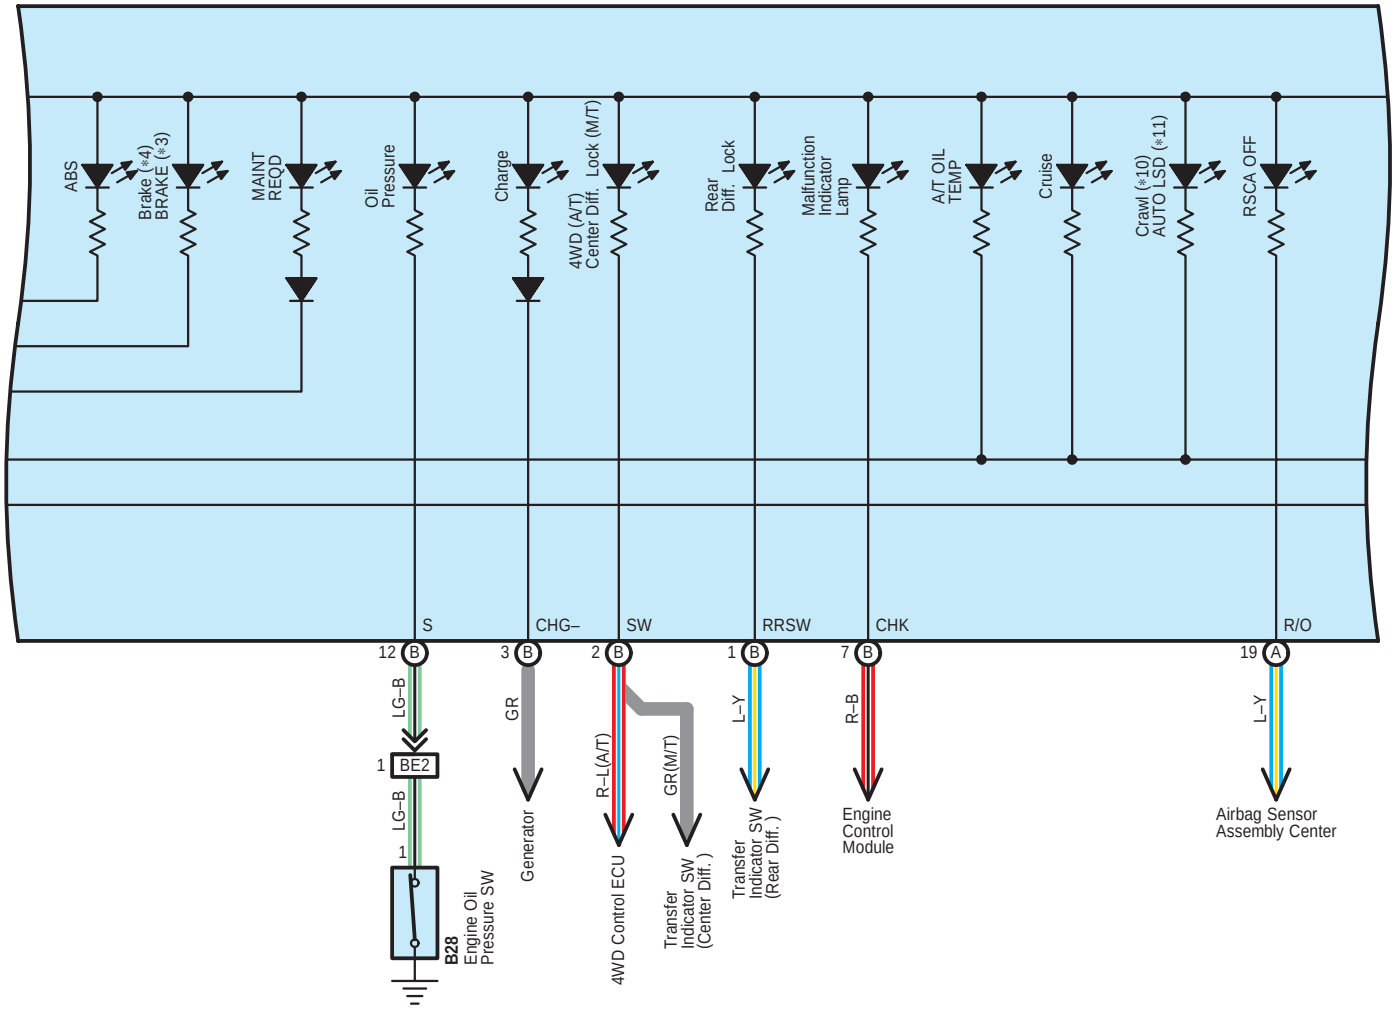

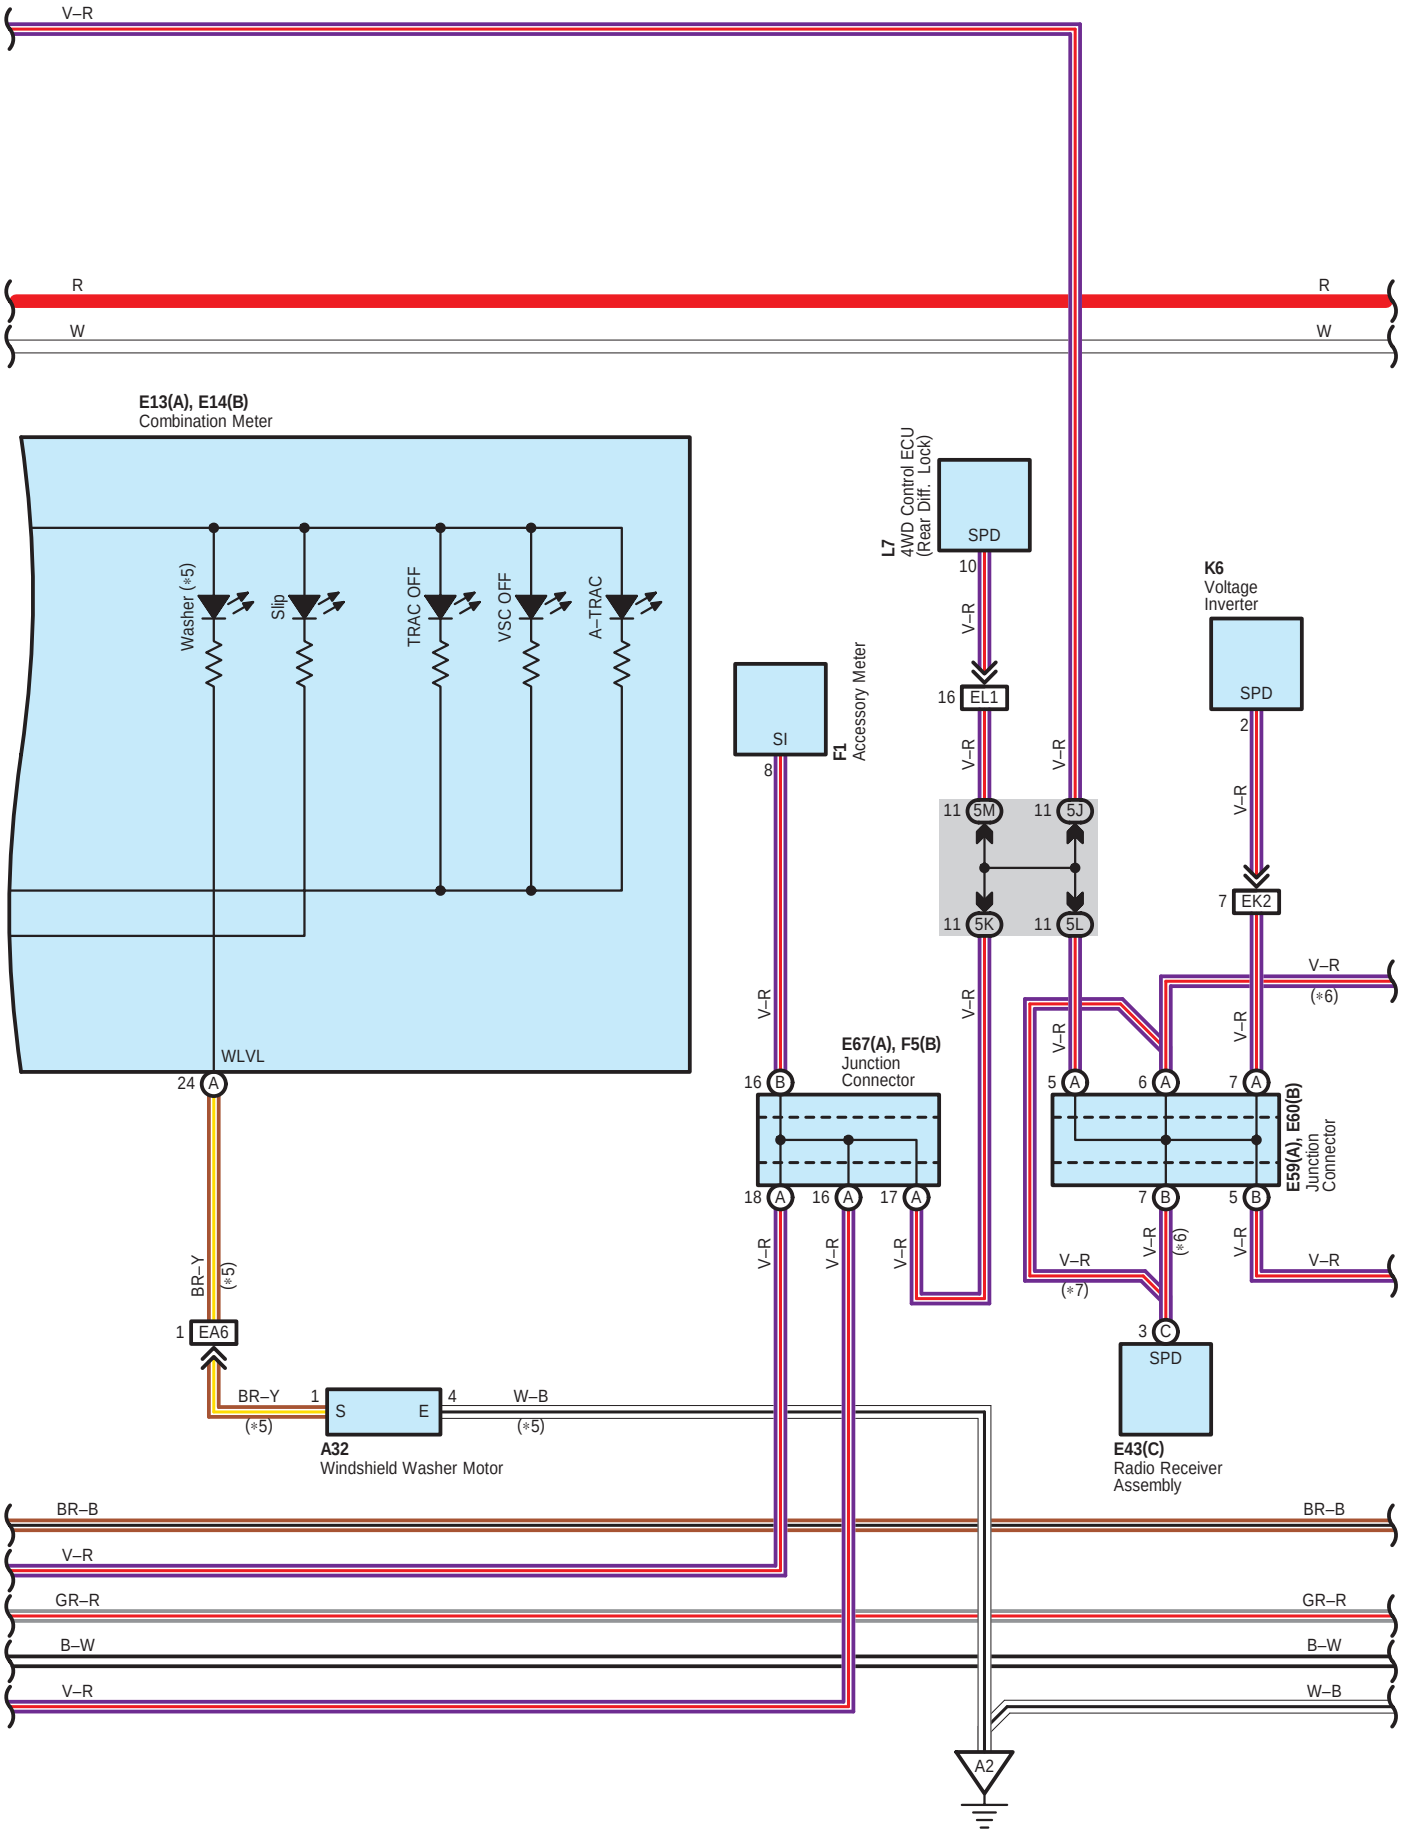



V–R
R
W
R
W
E13(A), E14(B)
Combination Meter
Washer (*5)
Slip
TRAC OFF
VSC OFF
A–TRAC
WLVL
24 A
BR–Y
(*5)
1 EA6
BR–Y
1
S
E
4
W–B
(*5)
(*5)
A32
Windshield Washer Motor
L7
4WD Control ECU
(Rear Diff. Lock)
SPD
10
V–R
16 EL1
V–R
11 5M
11 5J
11 5K
11 5L
V–R
V–R
SI
8
F1
Accessory Meter
V–R
16 B
E67(A), F5(B)
Junction
Connector
18 A
16 A
17 A
V–R
V–R
V–R
K6
Voltage
Inverter
SPD
2
V–R
7 EK2
V–R
(*6)
5 A
6 A
7 A
E59(A), E60(B)
Junction
Connector
7 B
5 B
V–R
(*6)
V–R
V–R
V–R
(*7)
3 C
SPD
E43(C)
Radio Receiver
Assembly
BR–B
V–R
GR–R
B–W
V–R
BR–B
GR–R
B–W
W–B
A2

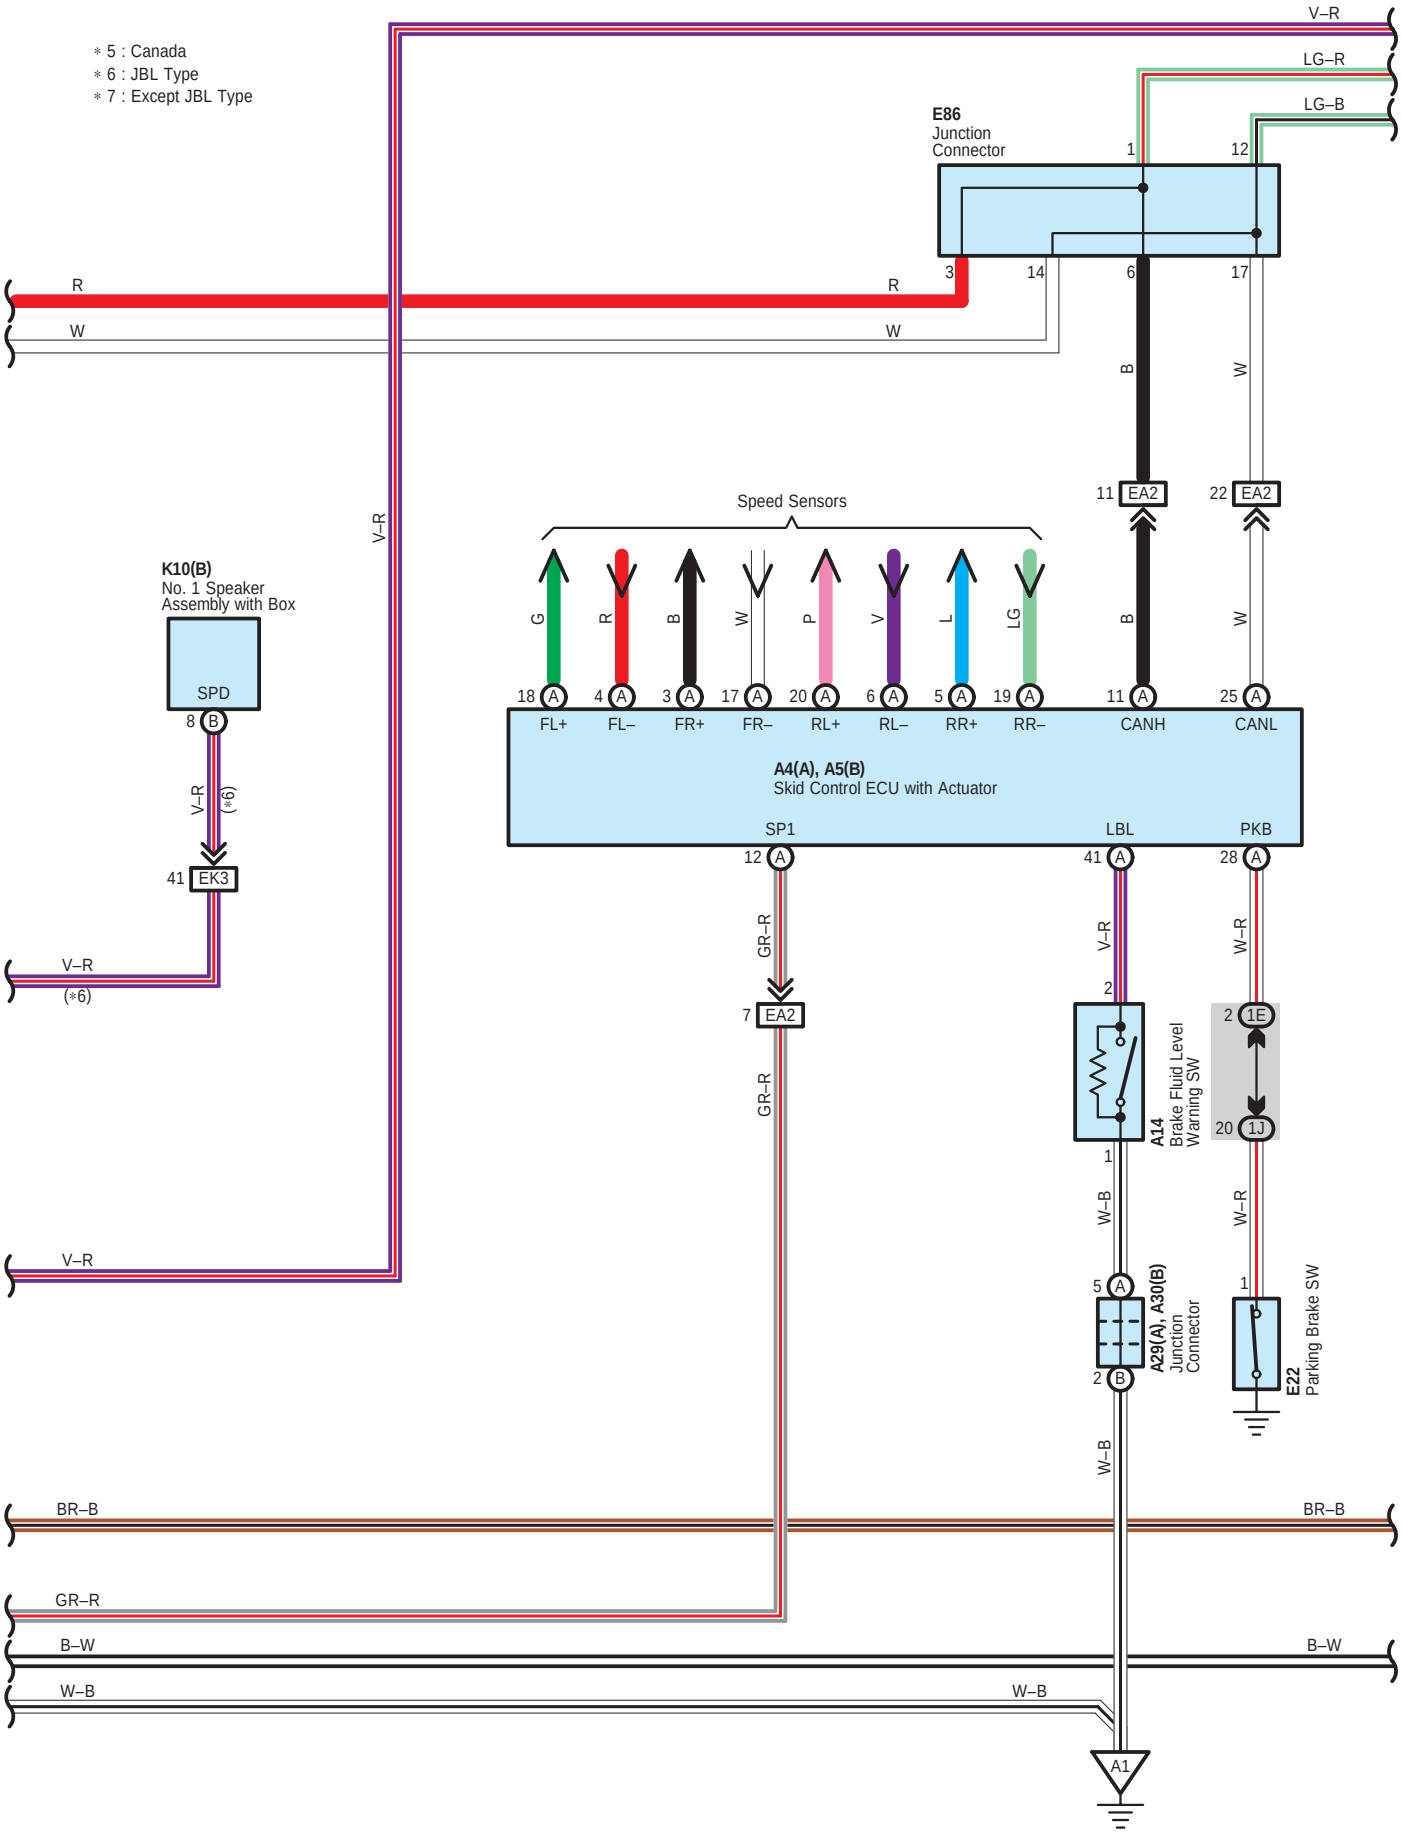
∗ 5 : Canada
∗ 6 : JBL Type
∗ 7 : Except JBL Type
E86
Junction
Connector
V–R
LG–R
LG–B
R
W
B
W
Speed Sensors
G
R
B
W
P
V
L
LG
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CANH
CANL
A4(A), A5(B)
Skid Control ECU with Actuator
SP1
LBL
PKB
GR–R
V–R
W–R
K10(B)
No. 1 Speaker
Assembly with Box
SPD
EK3
(∗6)
A14
Brake Fluid Level
Warning SW
A29(A), A30(B)
Junction
Connector
E22
Parking Brake SW
W–B
BR–B
GR–R
B–W
A1

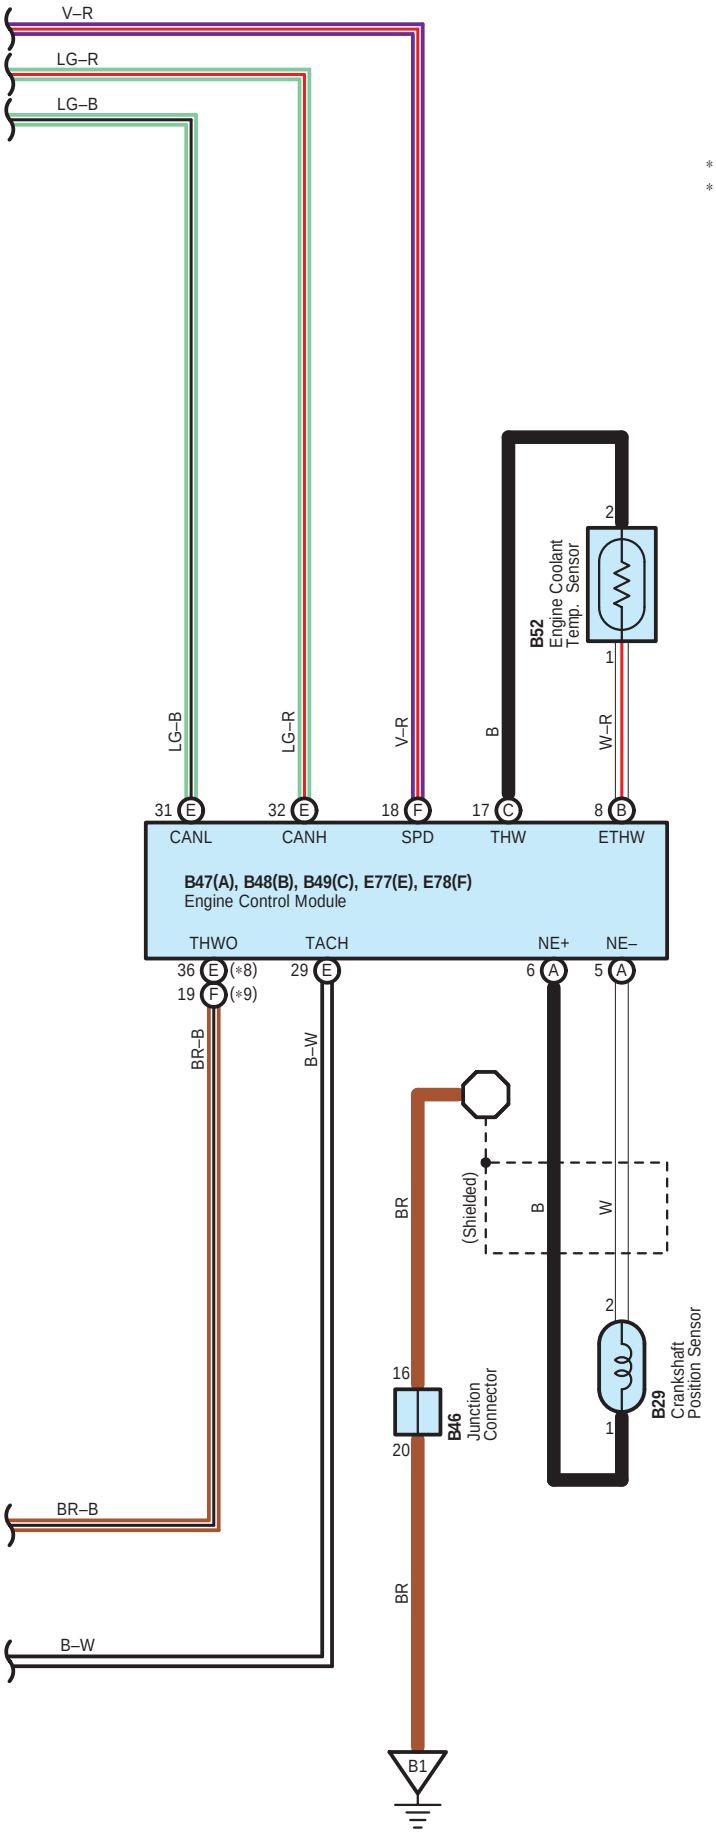


∗ 8 : w/ Air Injection Control Driver
∗ 9 : w/o Air Injection Control Driver


A 4
Black

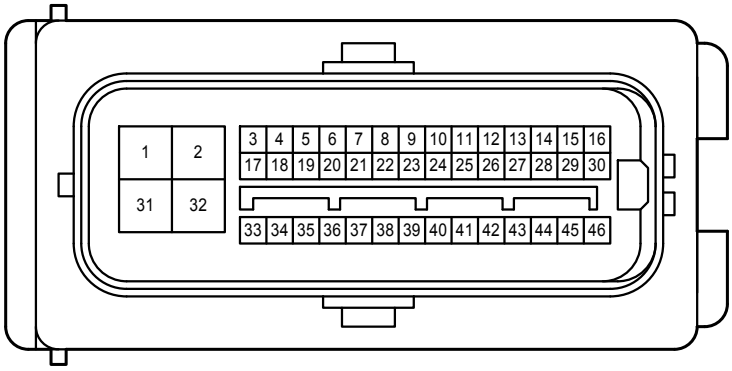


A 5
Black

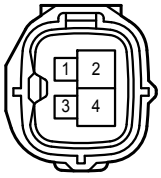


A 14
Gray

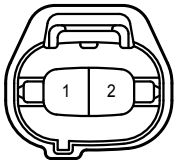

A 29
Blue

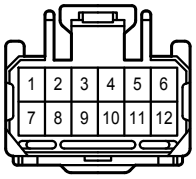

A 30
Blue

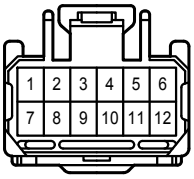


A 32
Gray




B 28
Gray




B 29
Black

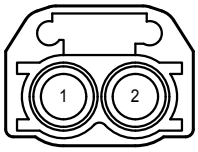


B 35
Gray

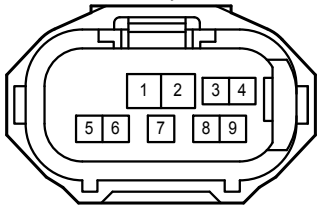


B 42
Gray

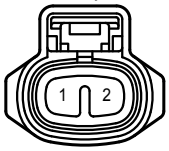


B 46
White

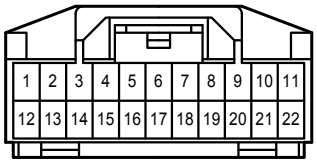


B 47
White

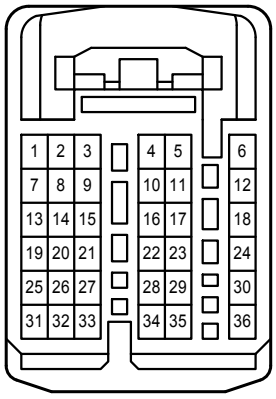

B 48
White

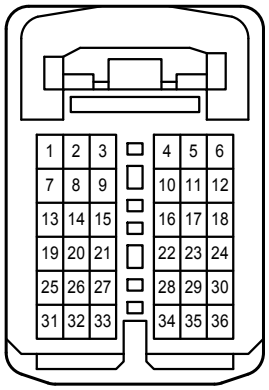


B 49
White

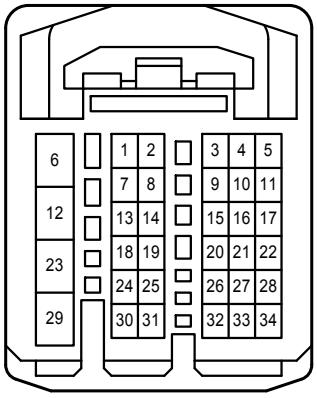


B 52
Black




E 1
White

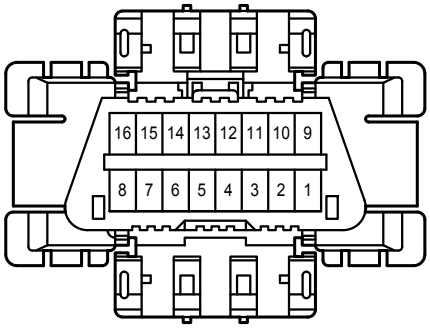

E 13
White

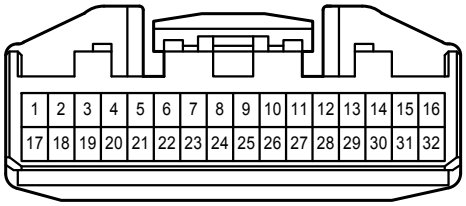


E 14
White

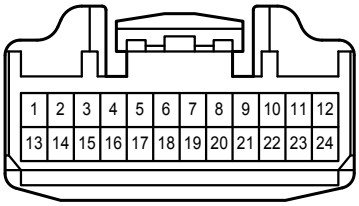


E 22
White




E 33
White

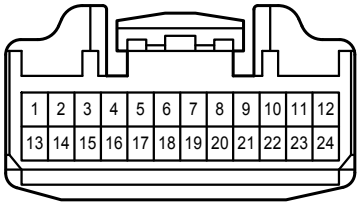


E 43
White

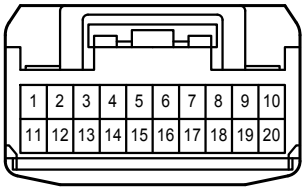


E 50
Black

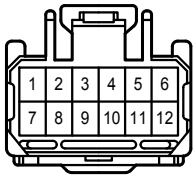


E 51
Black

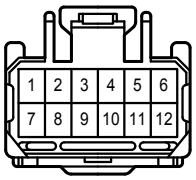


E 52
White

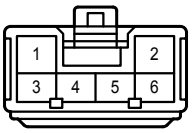


E 57
Black

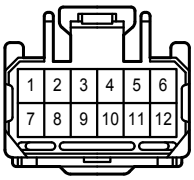


E 59
Blue

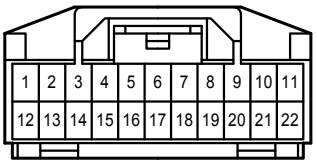

E 60
Blue

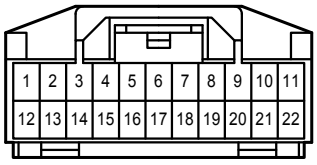


E 67
Blue

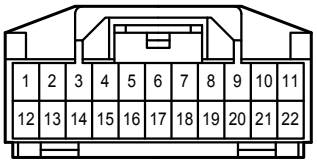


E 74
Black




E 77
White

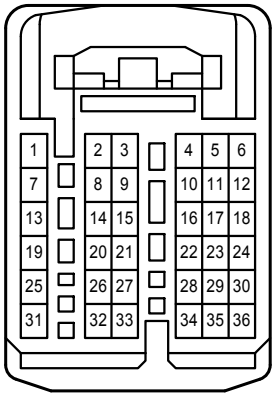


E 78
White

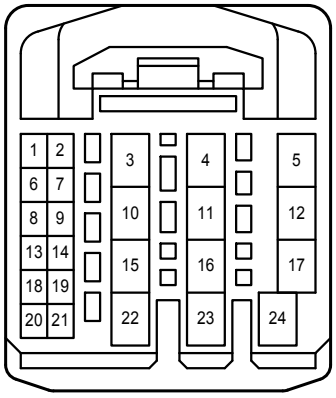


E 86
Gray

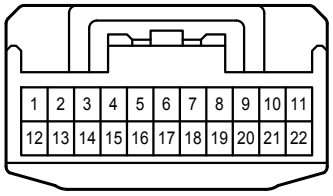


F 1
White

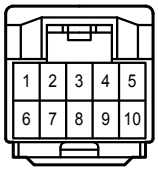


F 5
Blue

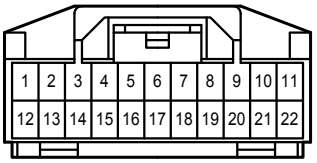

K 6
White




K 10
White

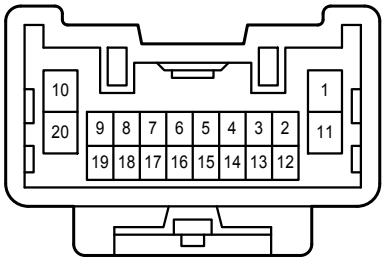


L 5
White




L 7
White

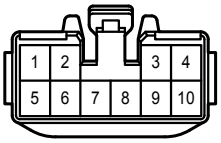


1C
White

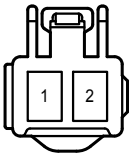


1E
White

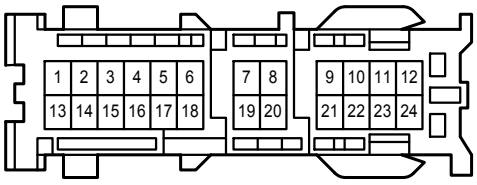


1G
White

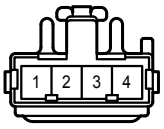


1J
White

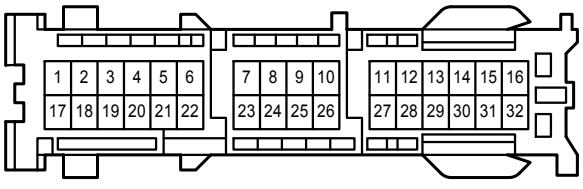


1K
White

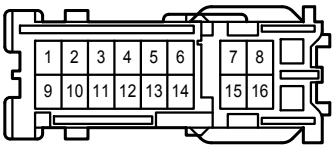


1L
White

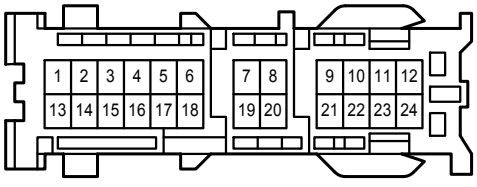


5C
White




5D
White




5E
White




5F
White




5G
White




5J
White




5K
White




5L
White




5M
White




6F
White




6G
White




BE1
White

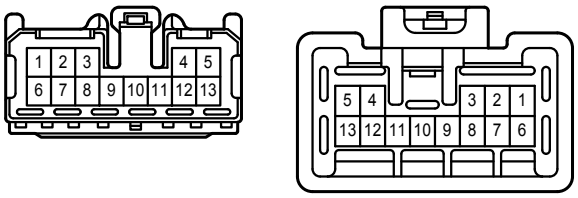


BE2
White

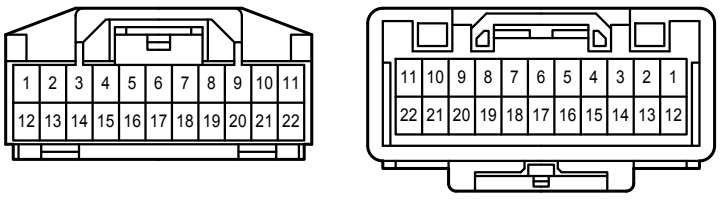



EA2
Gray

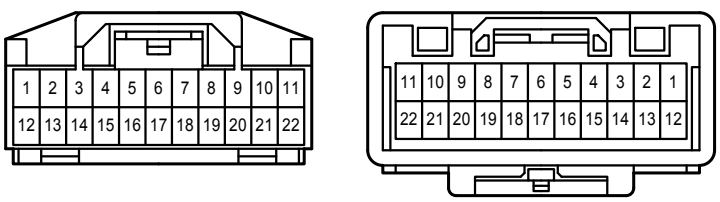

EA6
Blue

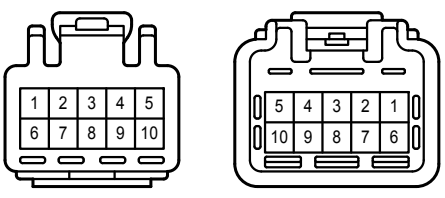

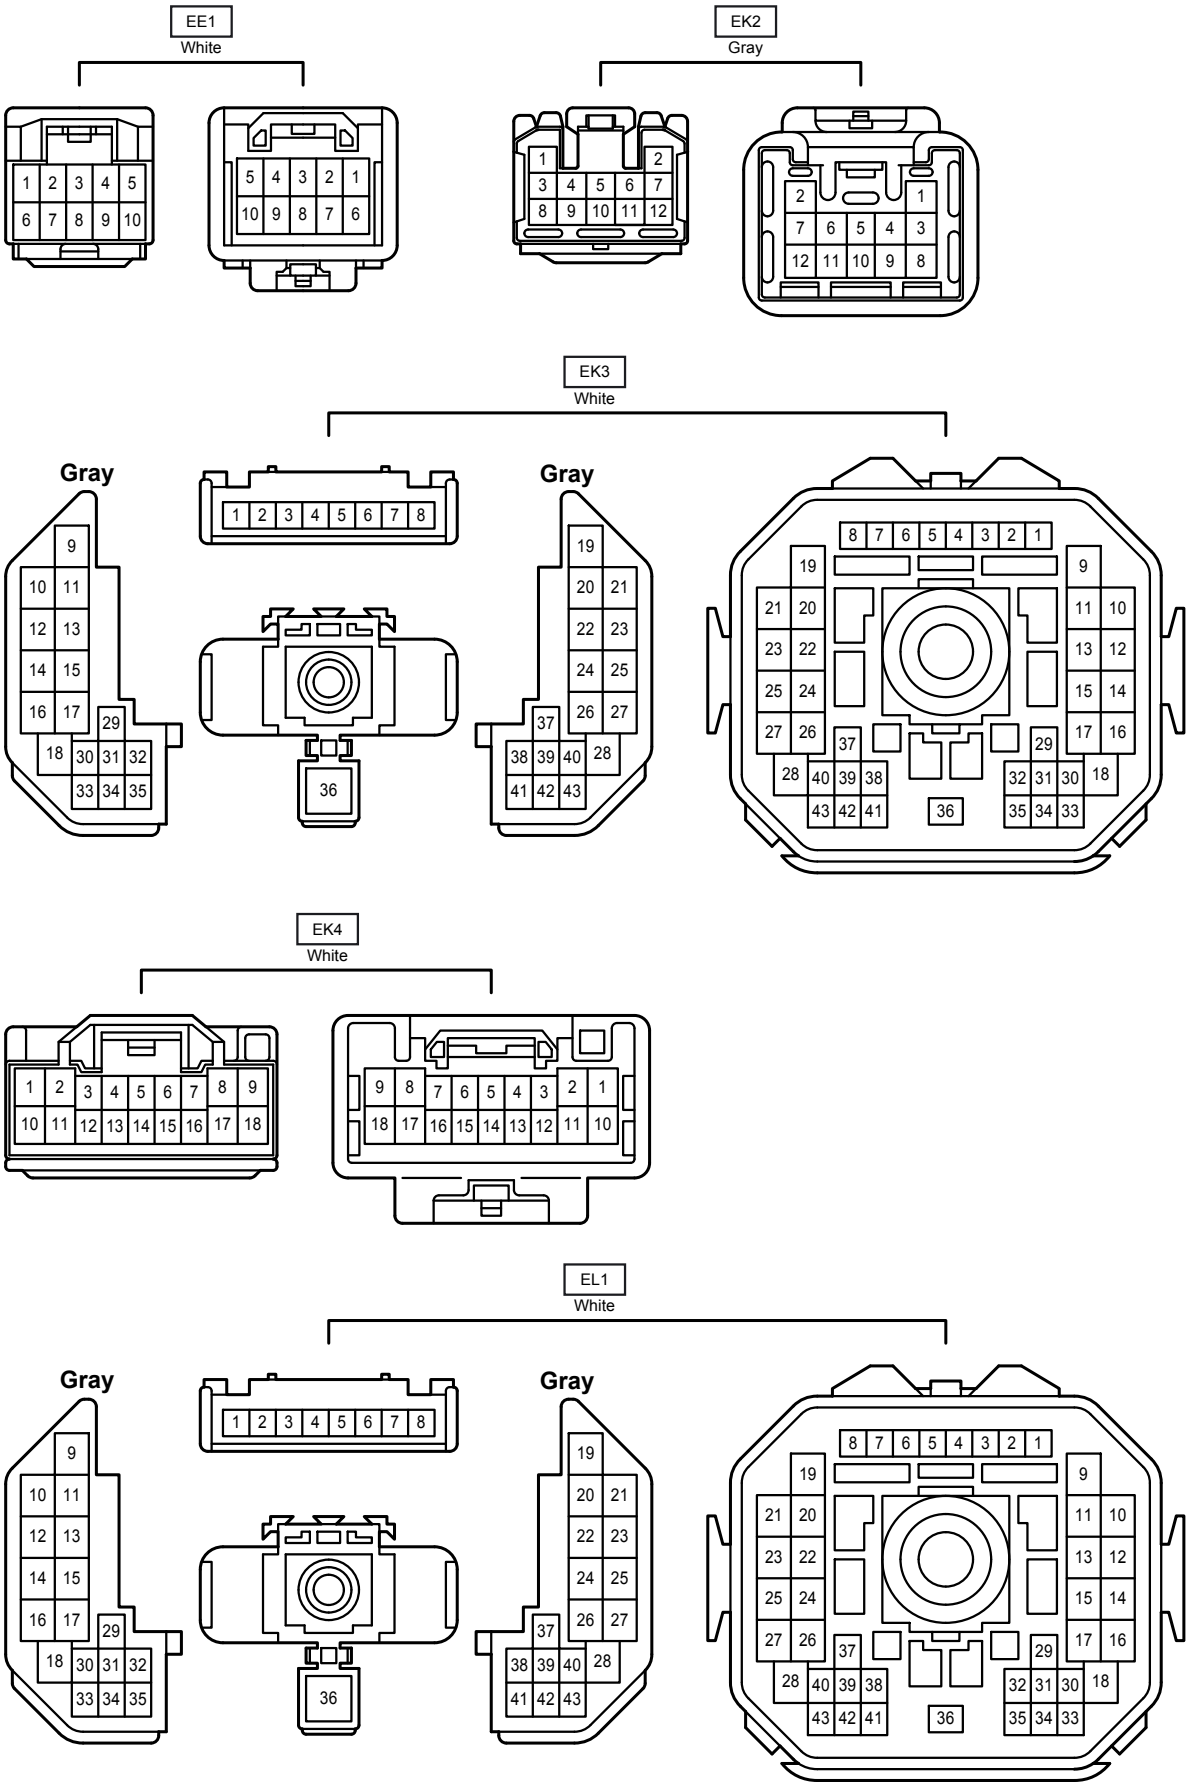
EE1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
EK2
Gray
1 2
3 4 5 6 7
8 9 10 11 12
2 1
7 6 5 4 3
12 11 10 9 8
EK3
White
Gray
1 2 3 4 5 6 7 8
9
10 11
12 13
14 15
16 17
18 29
30 31 32
33 34 35
36
Gray
19
20 21
22 23
24 25
26 27
37
38 39 40 28
41 42 43
8 7 6 5 4 3 2 1
19
21 20
23 22
25 24
27 26
37
28 40 39 38
43 42 41
36
9
11 10
13 12
15 14
17 16
29
32 31 30 18
35 34 33
EK4
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
EL1
White
Gray
1 2 3 4 5 6 7 8
9
10 11
12 13
14 15
16 17
18 29
30 31 32
33 34 35
36
Gray
19
20 21
22 23
24 25
26 27
37
38 39 40 28
41 42 43
8 7 6 5 4 3 2 1
19
21 20
23 22
25 24
27 26
37
28 40 39 38
43 42 41
36
9
11 10
13 12
15 14
17 16
29
32 31 30 18
35 34 33

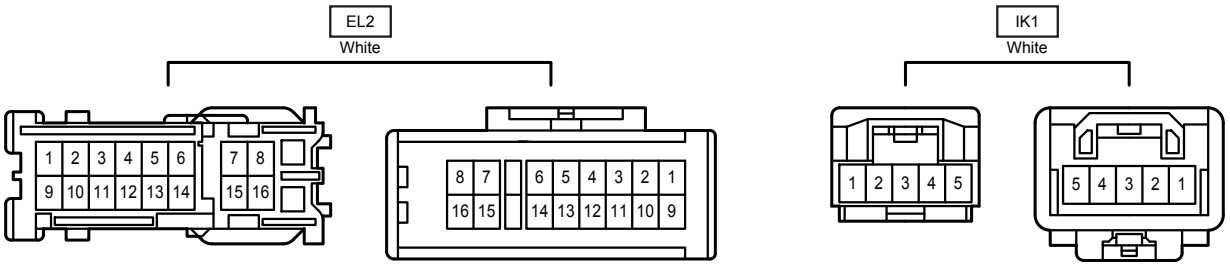
EL2
White
1 2 3 4 5 6
9 10 11 12 13 14
7 8
15 16
8 7
16 15
6 5 4 3 2 1
14 13 12 11 10 9
IK1
White
1 2 3 4 5
5 4 3 2 1