




∗ 3 : w/ Cruise Control
∗ 7 : Canada
∗12 : w/ Air Injection Control Driver

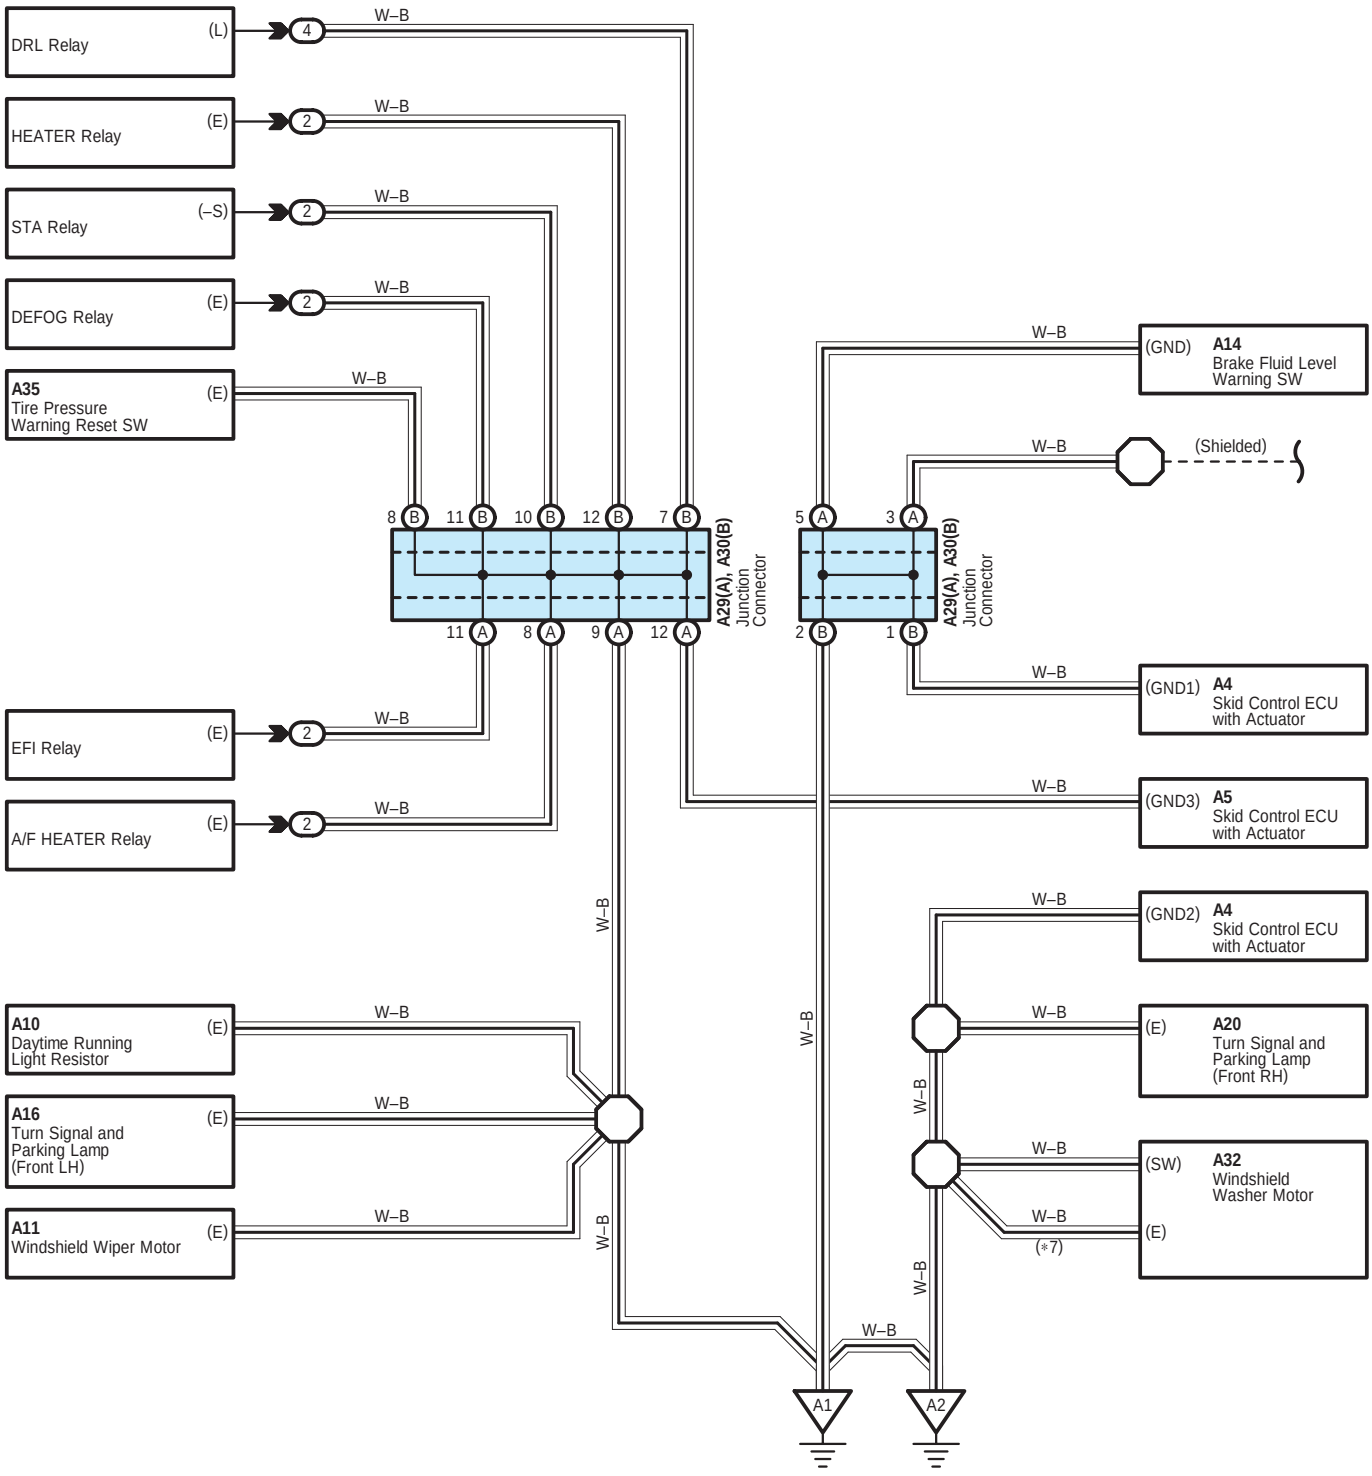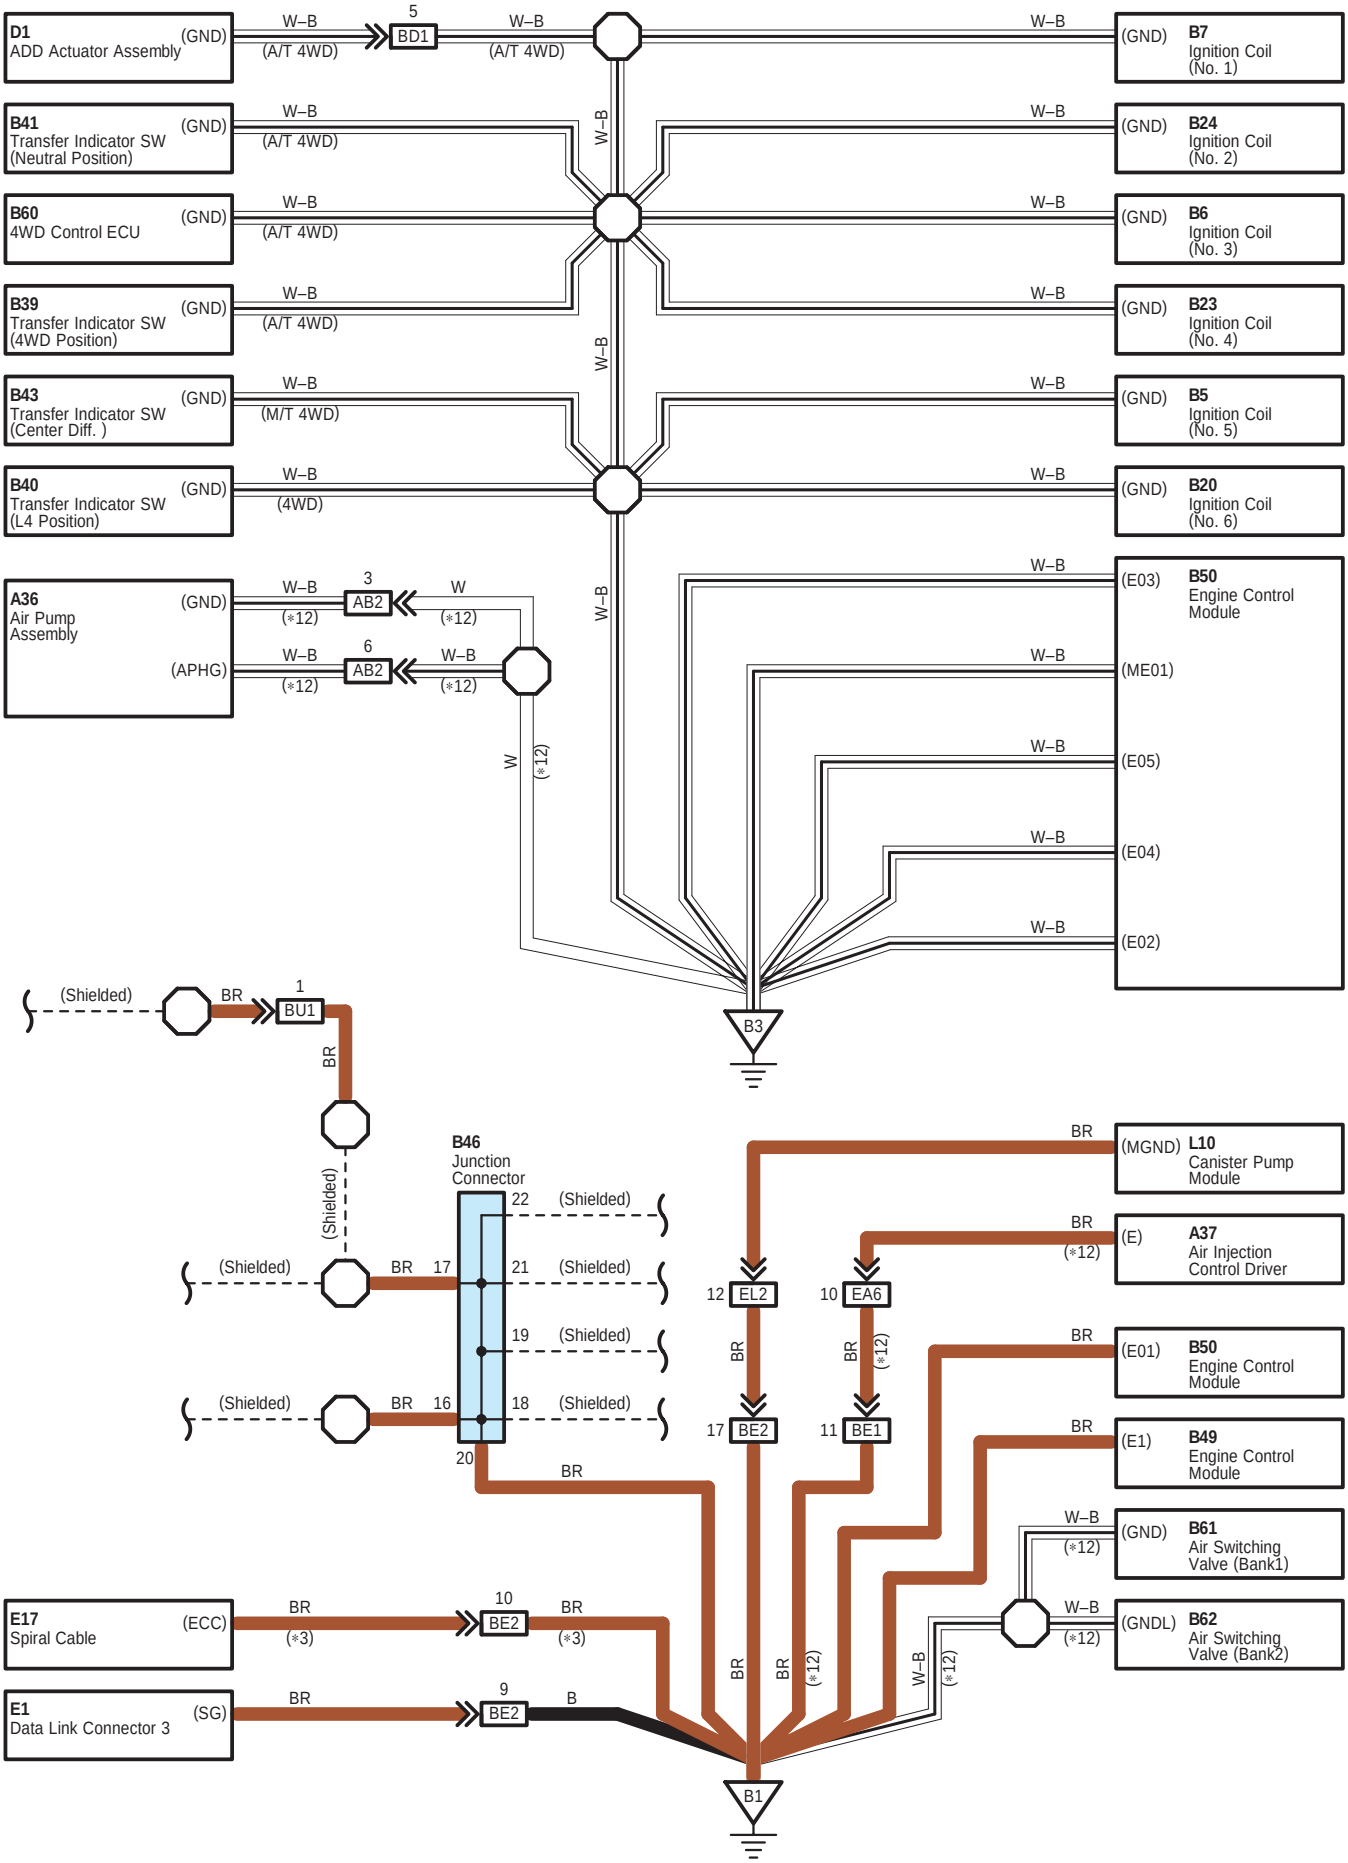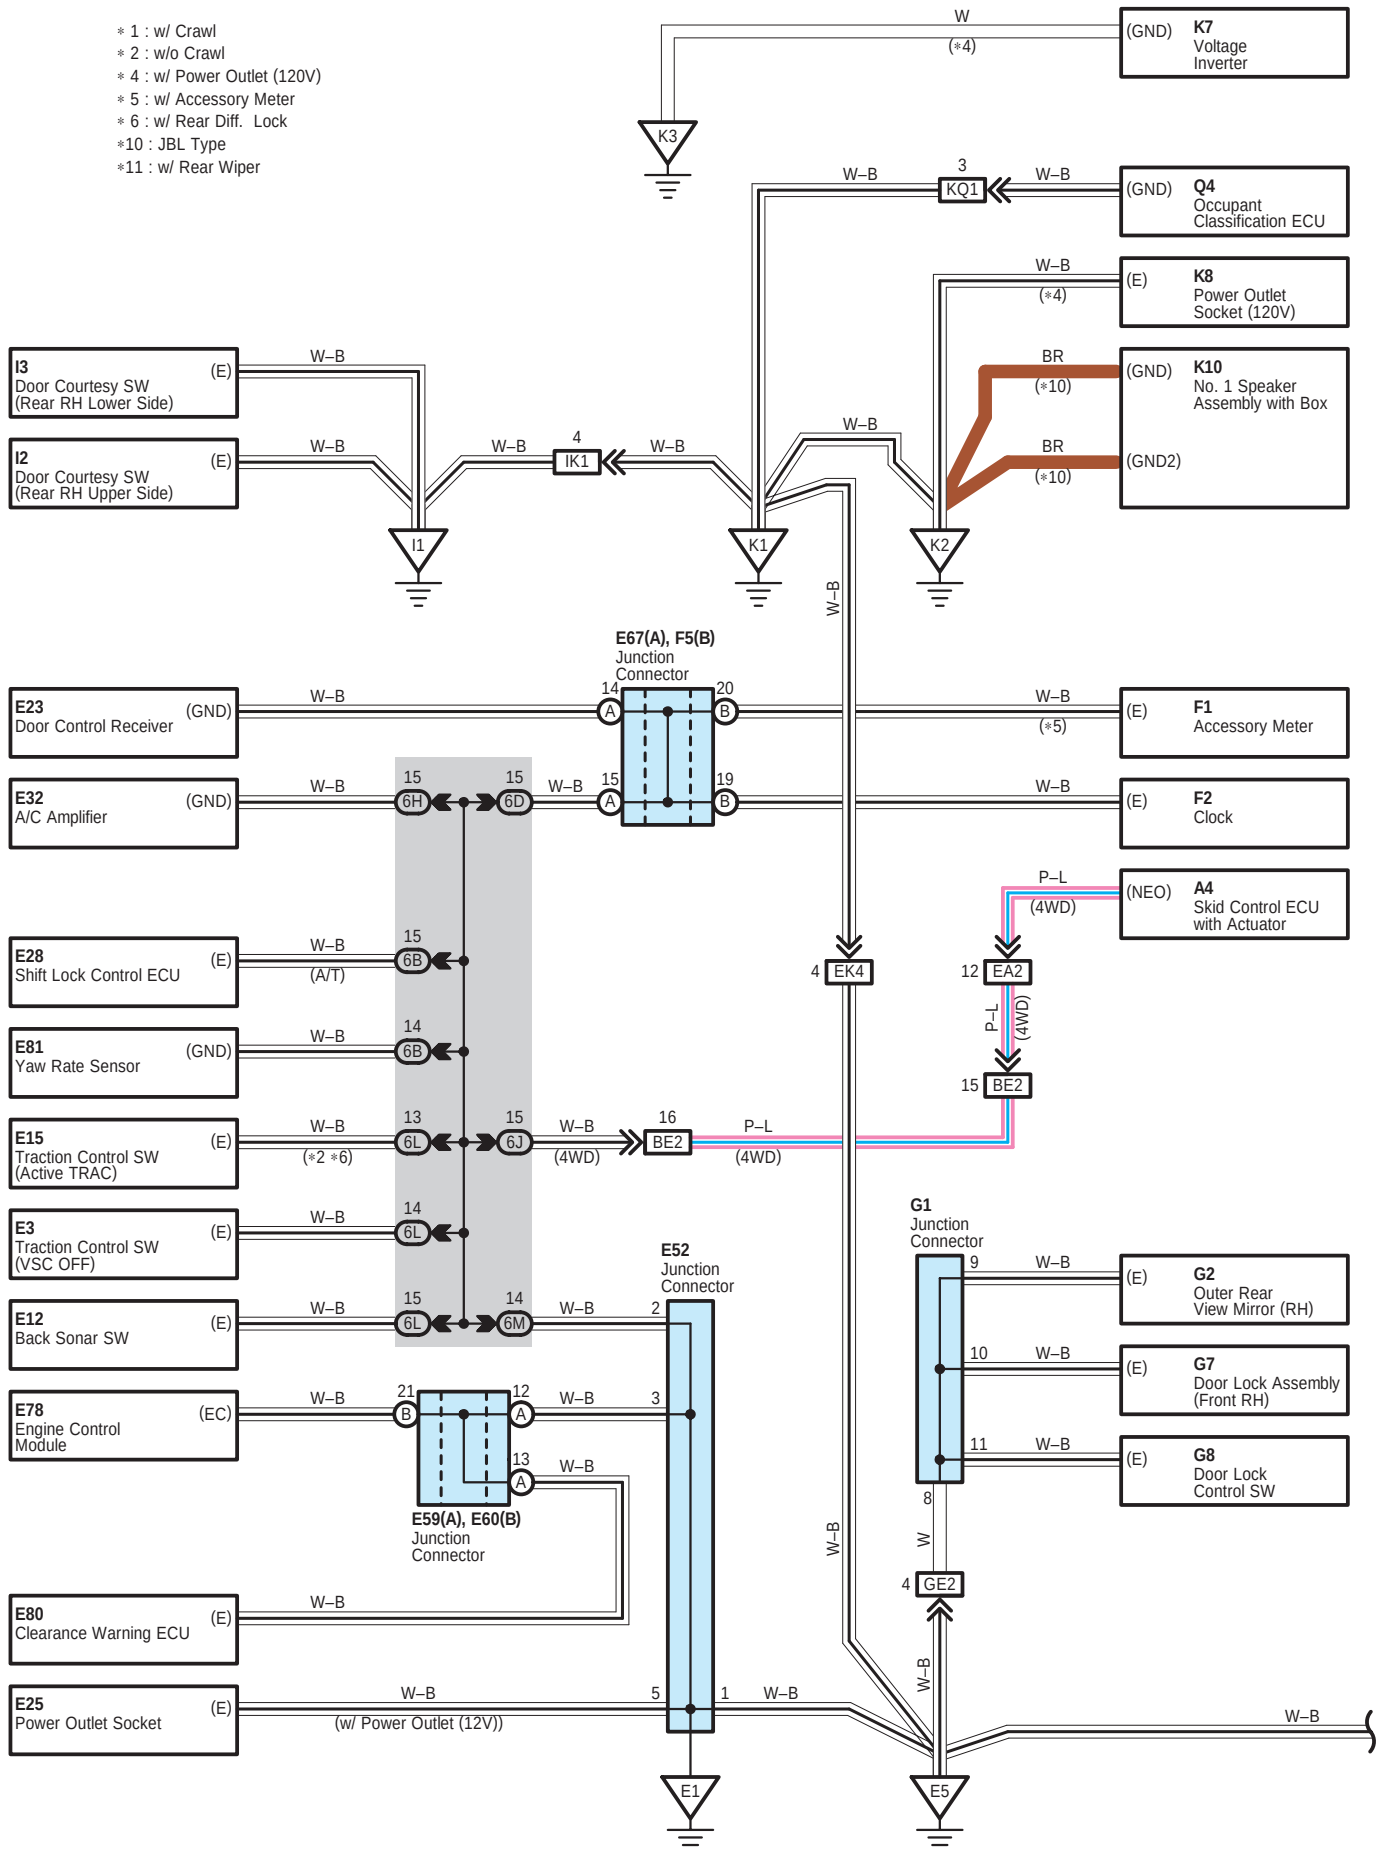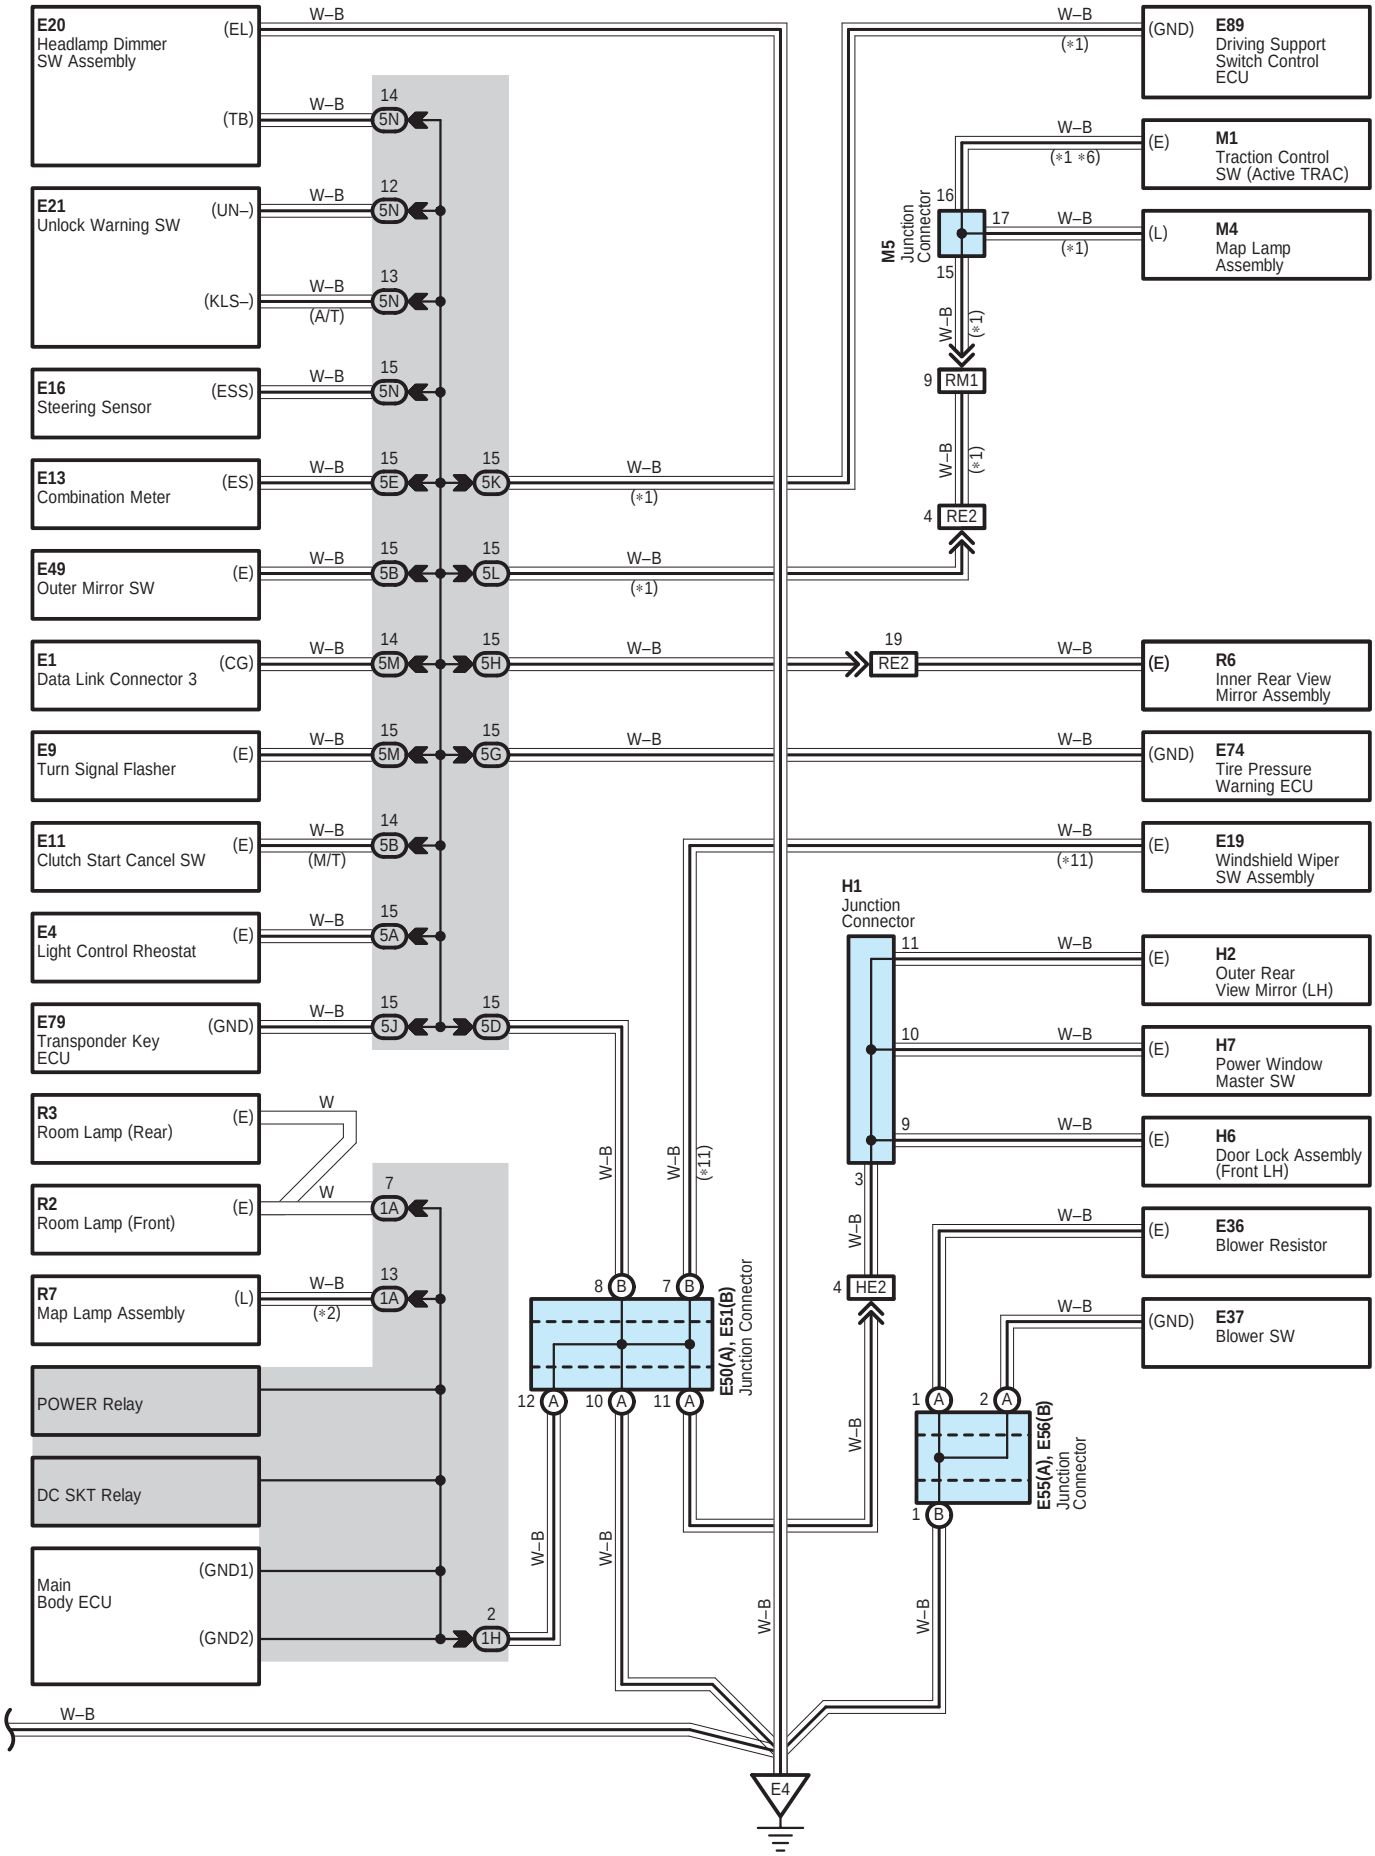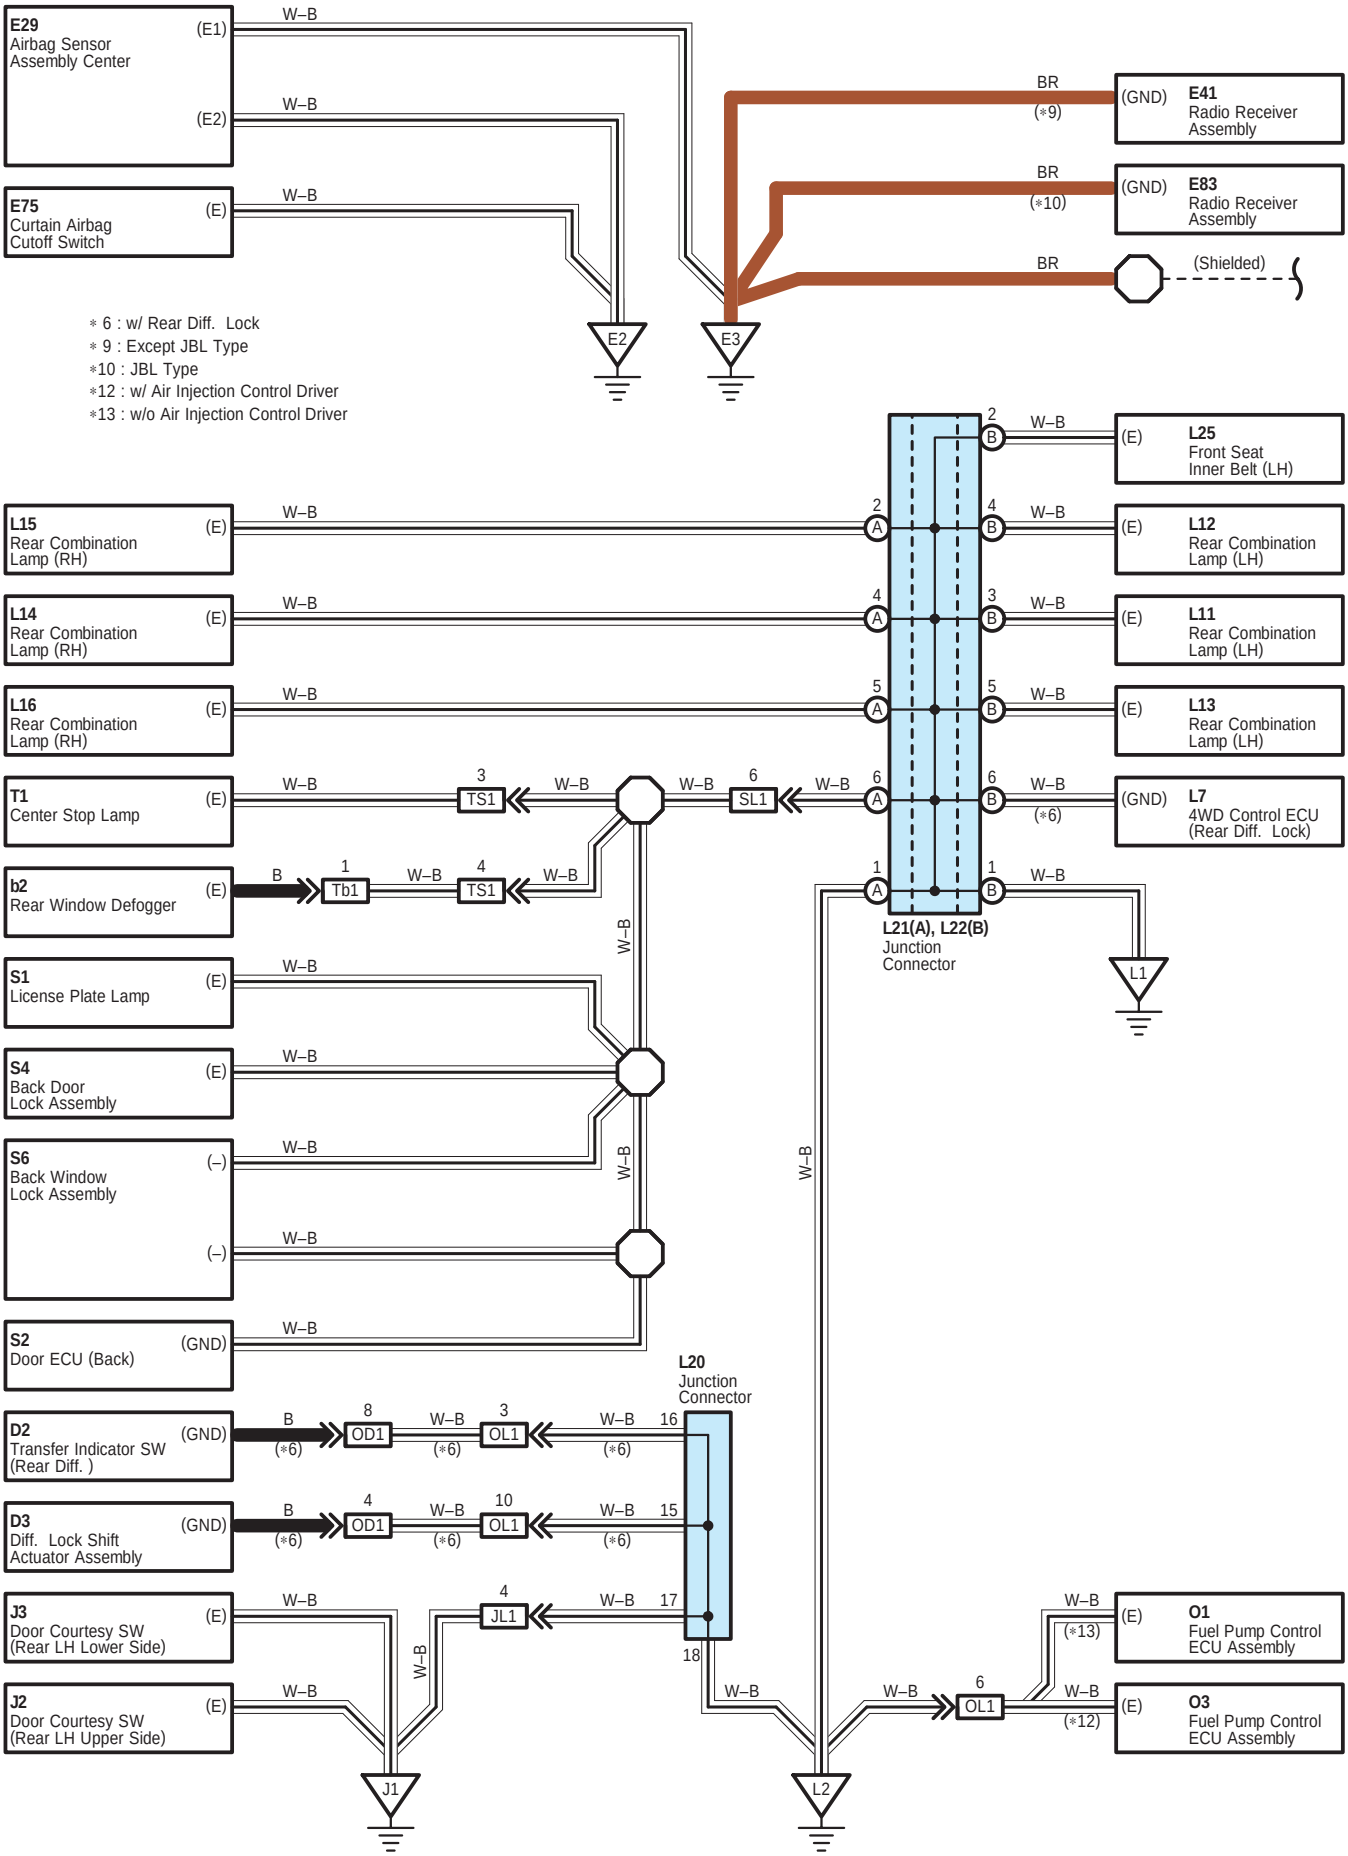



D1 (GND) ADD Actuator Assembly
W–B (A/T 4WD)
5 BD1
W–B (A/T 4WD)
B41 (GND) Transfer Indicator SW (Neutral Position)
B60 (GND) 4WD Control ECU
B39 (GND) Transfer Indicator SW (4WD Position)
B43 (GND) Transfer Indicator SW (Center Diff.)
W–B (M/T 4WD)
B40 (GND) Transfer Indicator SW (L4 Position)
W–B (4WD)
W–B
(GND) B7 Ignition Coil (No. 1)
(GND) B24 Ignition Coil (No. 2)
(GND) B6 Ignition Coil (No. 3)
(GND) B23 Ignition Coil (No. 4)
(GND) B5 Ignition Coil (No. 5)
(GND) B20 Ignition Coil (No. 6)
A36 (GND) Air Pump Assembly
(APHG)
3 AB2
6 AB2
W (*12)
(E03) B50 Engine Control Module
(ME01)
(E05)
(E04)
(E02)
B3
(Shielded)
BR
1 BU1
B46 Junction Connector
22 21 19 18 20
17 16
(MGND) L10 Canister Pump Module
(E) A37 Air Injection Control Driver
(E01) B50 Engine Control Module
(E1) B49 Engine Control Module
(GND) B61 Air Switching Valve (Bank1)
(GNDL) B62 Air Switching Valve (Bank2)
12 EL2
10 EA6
17 BE2
11 BE1
E17 (ECC) Spiral Cable
10 BE2
(*3)
E1 (SG) Data Link Connector 3
9 BE2
B
B1


∗ 1 : w/ Crawl
∗ 2 : w/o Crawl
∗ 4 : w/ Power Outlet (120V)
∗ 5 : w/ Accessory Meter
∗ 6 : w/ Rear Diff. Lock
∗10 : JBL Type
∗11 : w/ Rear Wiper
K7 Voltage Inverter
Q4 Occupant Classification ECU
K8 Power Outlet Socket (120V)
K10 No. 1 Speaker Assembly with Box
I3 Door Courtesy SW (Rear RH Lower Side)
I2 Door Courtesy SW (Rear RH Upper Side)
E67(A), F5(B) Junction Connector
E23 Door Control Receiver
E32 A/C Amplifier
F1 Accessory Meter
F2 Clock
A4 Skid Control ECU with Actuator
E28 Shift Lock Control ECU
E81 Yaw Rate Sensor
E15 Traction Control SW (Active TRAC)
E3 Traction Control SW (VSC OFF)
E12 Back Sonar SW
E78 Engine Control Module
E52 Junction Connector
G1 Junction Connector
G2 Outer Rear View Mirror (RH)
G7 Door Lock Assembly (Front RH)
G8 Door Lock Control SW
E59(A), E60(B) Junction Connector
E80 Clearance Warning ECU
E25 Power Outlet Socket
(w/ Power Outlet (12V))
I1
K1
K2
K3
IK1
KQ1
EK4
EA2
BE2
GE2
E1
E5



E20
Headlamp Dimmer SW Assembly
(EL)
(TB)
E21
Unlock Warning SW
(UN–)
(KLS–)
(A/T)
E16
Steering Sensor
(ESS)
E13
Combination Meter
(ES)
E49
Outer Mirror SW
(E)
E1
Data Link Connector 3
(CG)
E9
Turn Signal Flasher
(E)
E11
Clutch Start Cancel SW
(E)
(M/T)
E4
Light Control Rheostat
(E)
E79
Transponder Key ECU
(GND)
R3
Room Lamp (Rear)
(E)
R2
Room Lamp (Front)
(E)
R7
Map Lamp Assembly
(L)
(*2)
POWER Relay
DC SKT Relay
Main Body ECU
(GND1)
(GND2)
W–B
W
5N
5E
5K
5B
5L
5M
5H
5G
5J
5D
1A
1H
RM1
RE2
HE2
M5 Junction Connector
E89
Driving Support Switch Control ECU
M1
Traction Control SW (Active TRAC)
M4
Map Lamp Assembly
R6
Inner Rear View Mirror Assembly
E74
Tire Pressure Warning ECU
E19
Windshield Wiper SW Assembly
H1
Junction Connector
H2
Outer Rear View Mirror (LH)
H7
Power Window Master SW
H6
Door Lock Assembly (Front LH)
E36
Blower Resistor
E37
Blower SW
E50(A), E51(B) Junction Connector
E55(A), E56(B) Junction Connector
E4
(*1)
(*1 *6)
(*11)


E29
Airbag Sensor
Assembly Center
(E1)
(E2)
W–B
E75
Curtain Airbag
Cutoff Switch
(E)
E2
E3
BR
(∗9)
(GND)
E41
Radio Receiver
Assembly
BR
(∗10)
(GND)
E83
Radio Receiver
Assembly
BR
(Shielded)
∗ 6 : w/ Rear Diff. Lock
∗ 9 : Except JBL Type
∗10 : JBL Type
∗12 : w/ Air Injection Control Driver
∗13 : w/o Air Injection Control Driver
L15
Rear Combination
Lamp (RH)
L14
Rear Combination
Lamp (RH)
L16
Rear Combination
Lamp (RH)
T1
Center Stop Lamp
b2
Rear Window Defogger
S1
License Plate Lamp
S4
Back Door
Lock Assembly
S6
Back Window
Lock Assembly
S2
Door ECU (Back)
D2
Transfer Indicator SW
(Rear Diff.)
D3
Diff. Lock Shift
Actuator Assembly
J3
Door Courtesy SW
(Rear LH Lower Side)
J2
Door Courtesy SW
(Rear LH Upper Side)
TS1
Tb1
SL1
OD1
OL1
JL1
L21(A), L22(B)
Junction
Connector
L20
Junction
Connector
L25
Front Seat
Inner Belt (LH)
L12
Rear Combination
Lamp (LH)
L11
Rear Combination
Lamp (LH)
L13
Rear Combination
Lamp (LH)
L7
4WD Control ECU
(Rear Diff. Lock)
O1
Fuel Pump Control
ECU Assembly
O3
Fuel Pump Control
ECU Assembly
L1
J1
L2


A 29
Blue

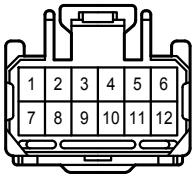


A 30
Blue

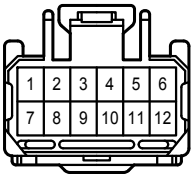


B 46
White

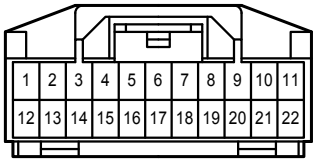


E 50
Black

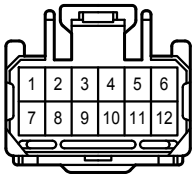


E 51
Black

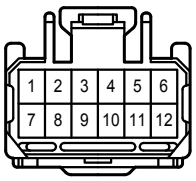


E 52
White

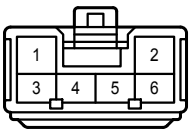


E 55
White

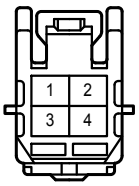


E 56
White

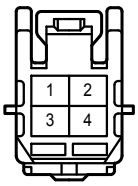


E 59
Blue

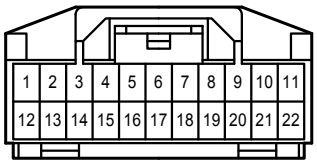


E 60
Blue

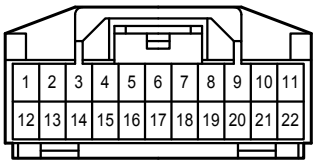


E 67
Blue

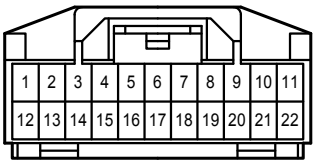


F 5
Blue

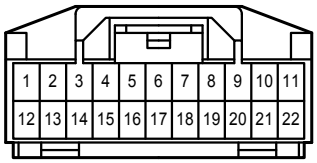


G 1
White

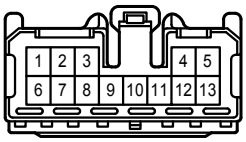


H 1
White

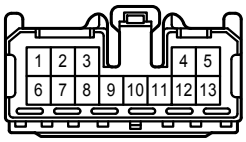


L 20
Black

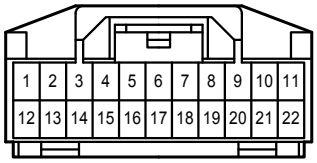


L 21
Gray

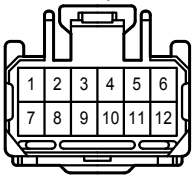


L 22
Gray

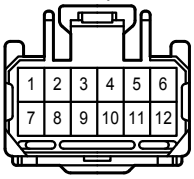


M 5
Black

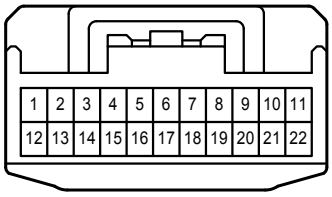


1A
White

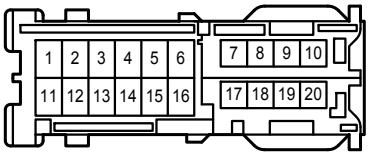


1H
White

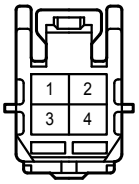


5A
White




5B
White




5D
White




5E
White




5G
White




5H
White




5J
White




5K
White




5L
White




5M
White




5N
White




6B
White




6D
White




6H
White




6J
White




6L
White




6M
White




AB2
Black

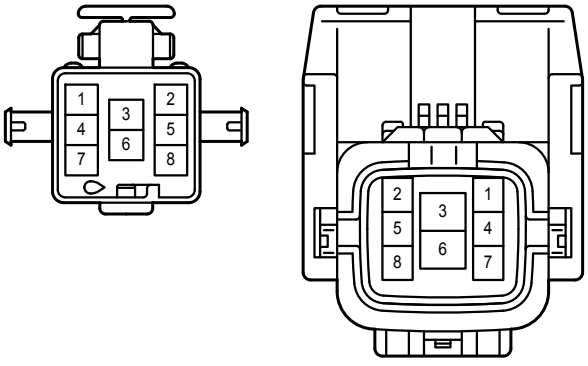


BD1
Gray

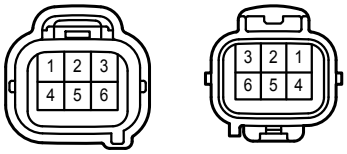


BE1
White

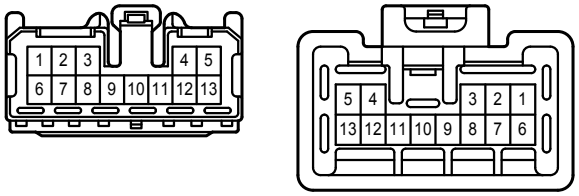


BE2
White

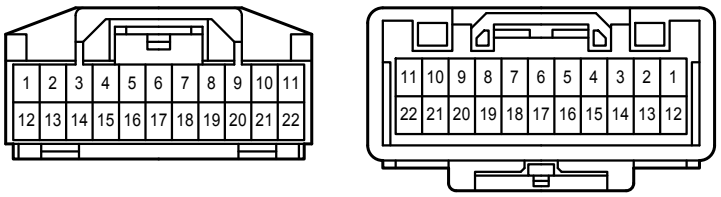


BU1
Dark Gray

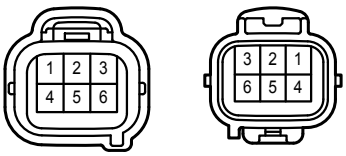


EA2
Gray

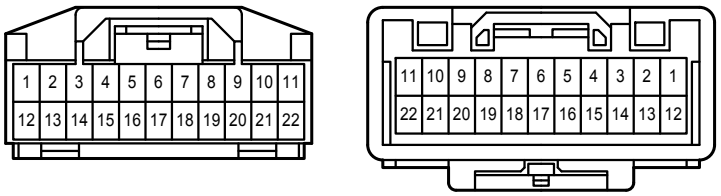


EA6
Blue

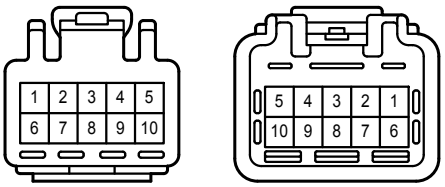


EK4
White

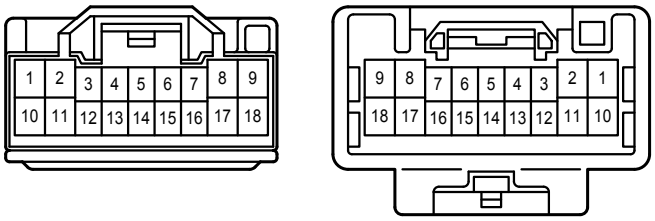


EL2
White

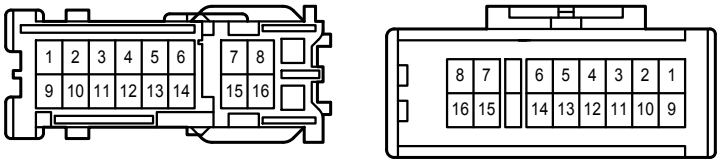


GE2
White

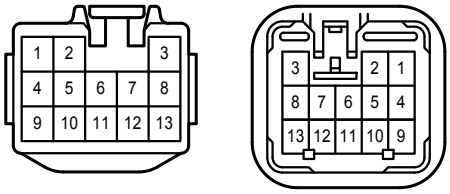


HE2
White

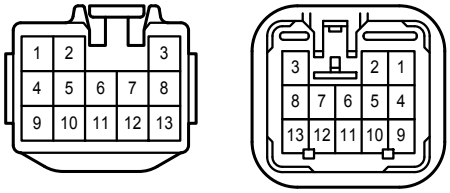


IK1
White

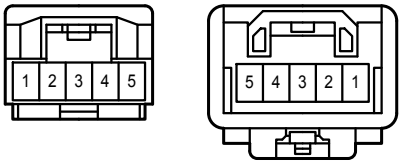


JL1
White

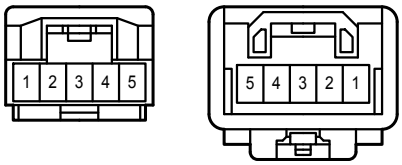


KQ1
Gray

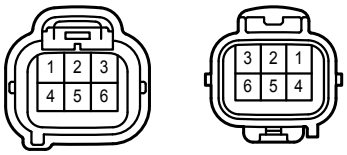


OD1
Gray

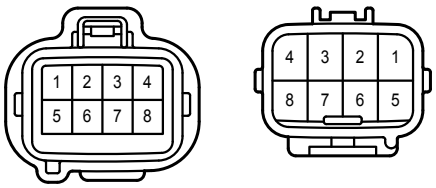


OL1
White

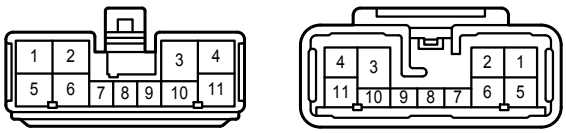


RE2
White

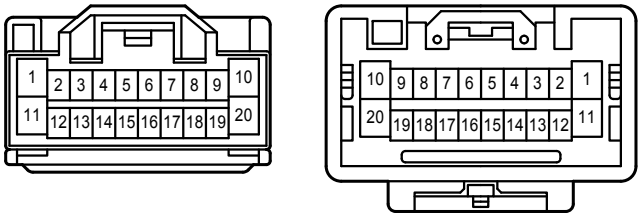


RM1
White

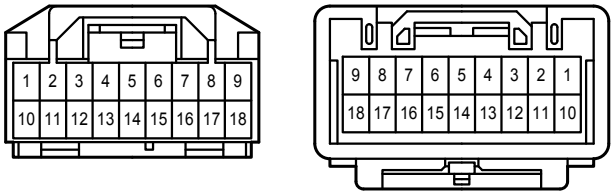

SL1
White

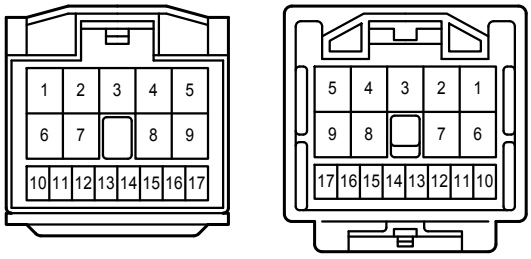

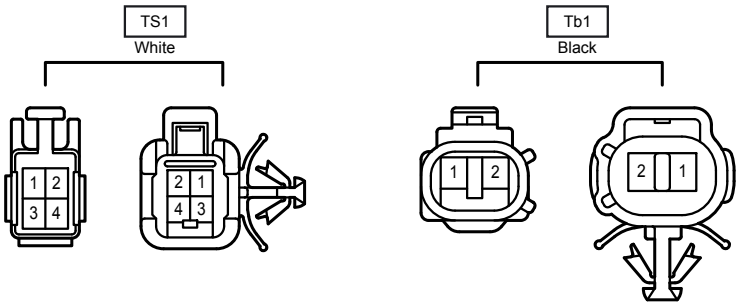
TS1
White
1
2
3
4
2
1
4
3
Tb1
Black
1
2
2
1