
■ILLUMINATED ENTRY SYSTEM

- When a door is unlocked using the key in a lock cylinder, unlocked using transmitter operation, or if a door is opened or closed, the illuminated entry system turns ON the front interior light and rear interior light.
- If the ignition switch is turned to the ACC or ON position, or if all doors are locked during the 15 seconds in which these lights are ON, they will immediately turn OFF.
- This system is controlled by the Main Body ECU.

▶ System Diagram ◀

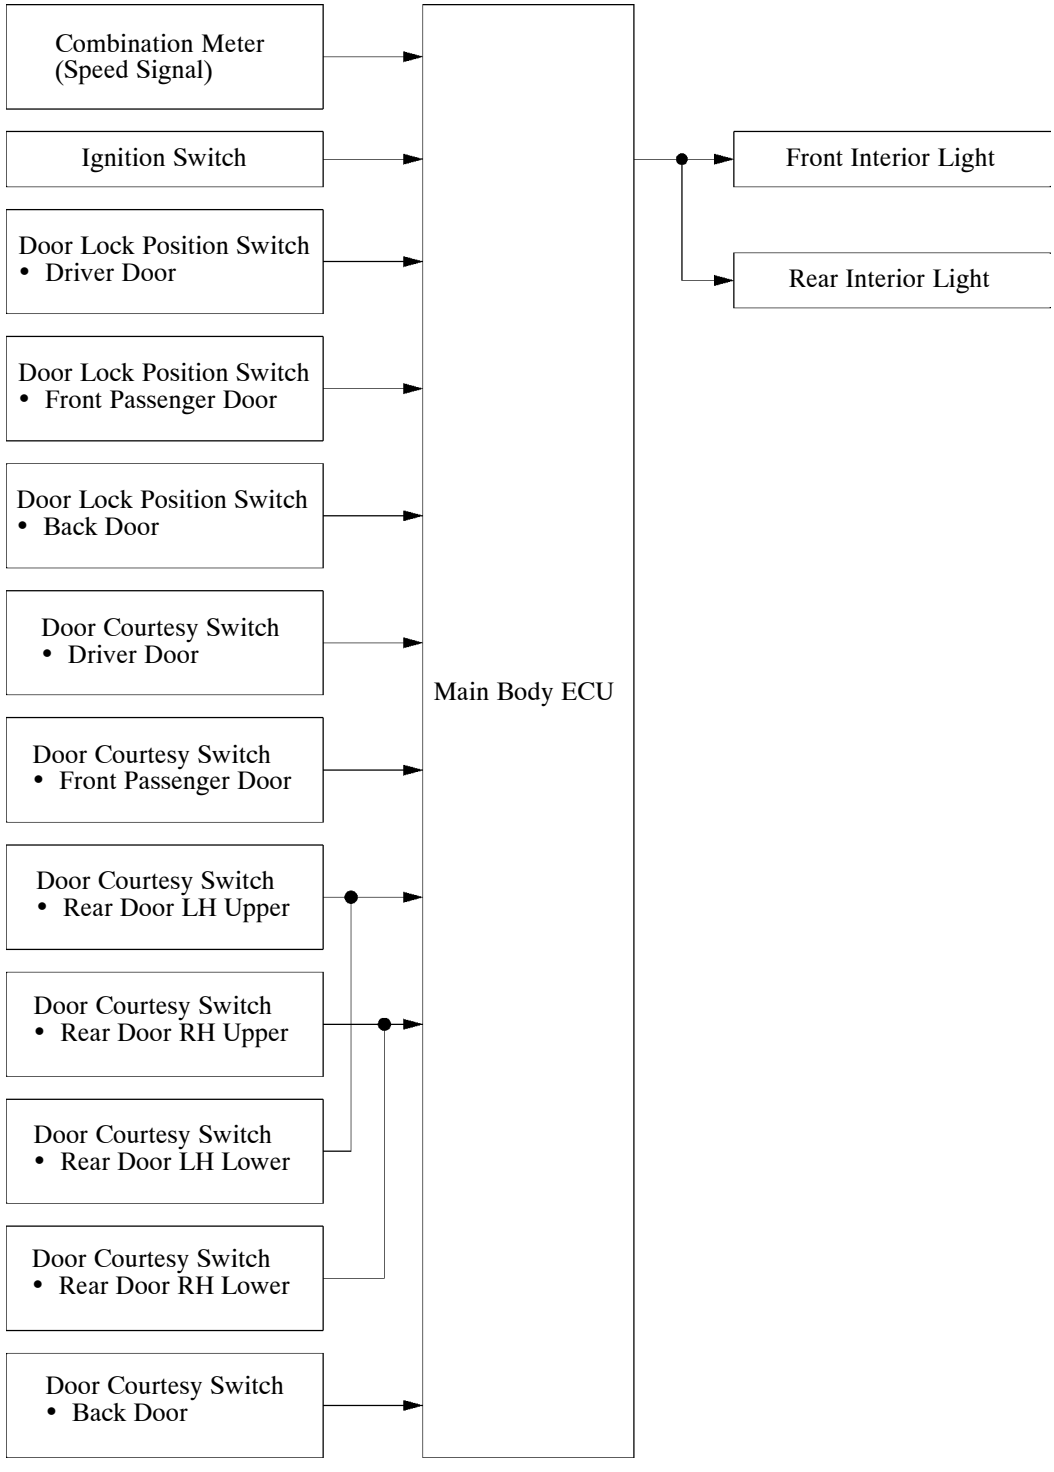

0240BE13C

BE