
TOYOTA PARKING ASSIST SYSTEM

■ DESCRIPTION

- The TOYOTA parking assist system is adopted as optional equipment.
- This system uses ultrasonic sensors and is equipped with beeping alarm. It can detect obstacles at the rear of the vehicle, and provide information to the driver regarding the distance.
- When an obstacle is detected by the TOYOTA parking assist system, the clearance warning buzzer sounds to alert the driver.
- The conditions required to operate are as shown in the table below:

Operating Condition
• Ignition switch is ON. • Clearance sonar switch is ON. • A/T shift lever is in the R position. (A/T models) • Back-up light switch is ON. (M/T models)

■ SYSTEM DIAGRAM

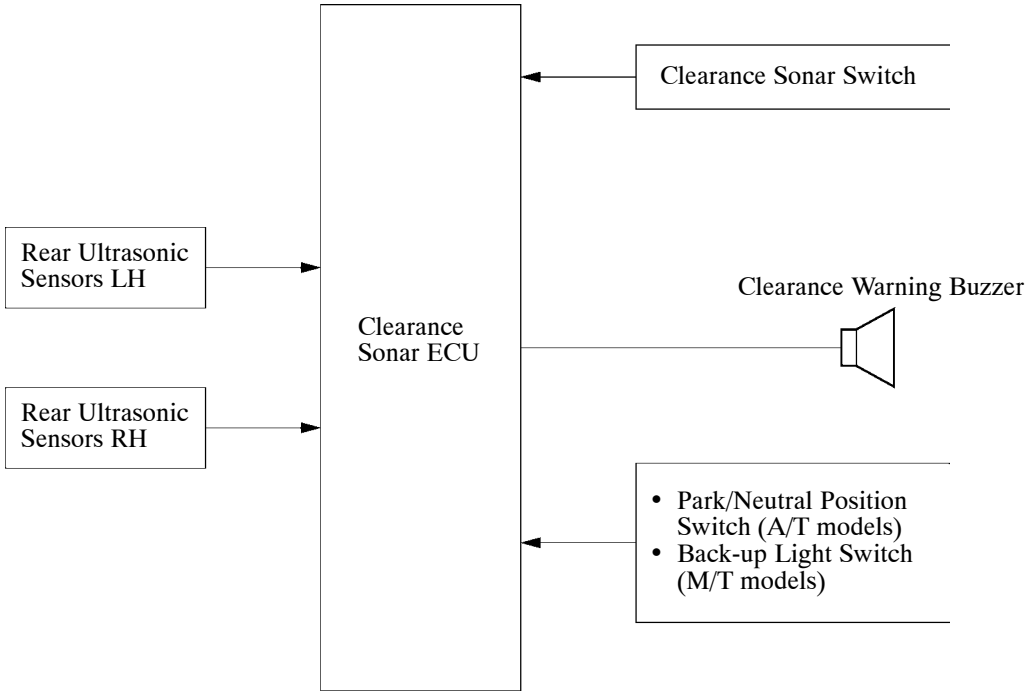

0240BE34C

BE