
■AIRBAG FOR SIDE/REAR SIDE COLLISION


1. General

- When the side & curtain shield airbag sensor detects a side impact, the Airbag Sensor Assembly causes the side curtain shield airbag and the side airbag to be deployed simultaneously.
- When the curtain shield airbag sensor detects a rear side impact, the Airbag Sensor Assembly causes the curtain shield airbag to be deployed.

▶ System Operation ◀

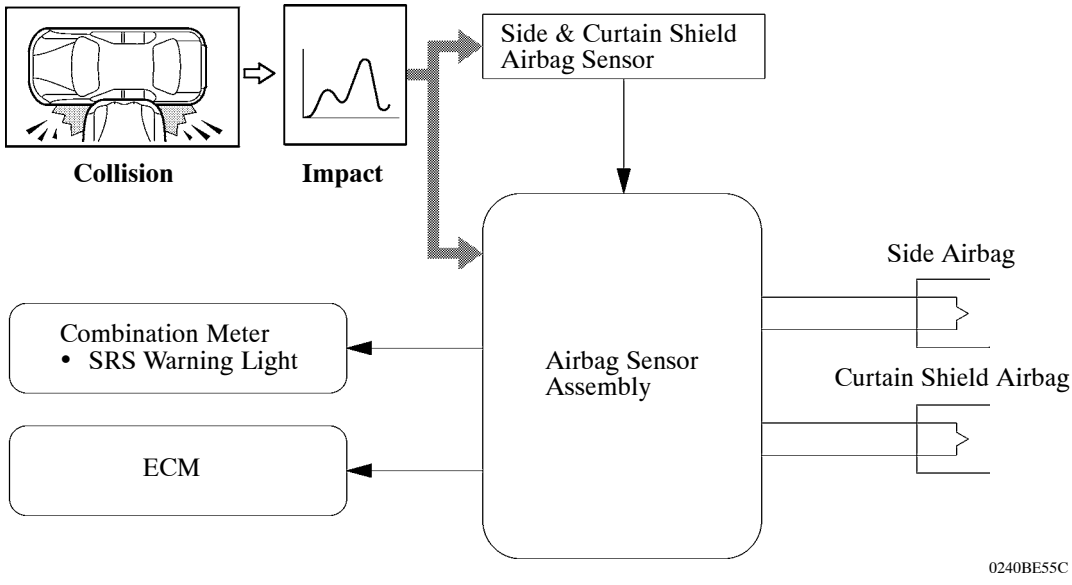

Airbag for Side Collision

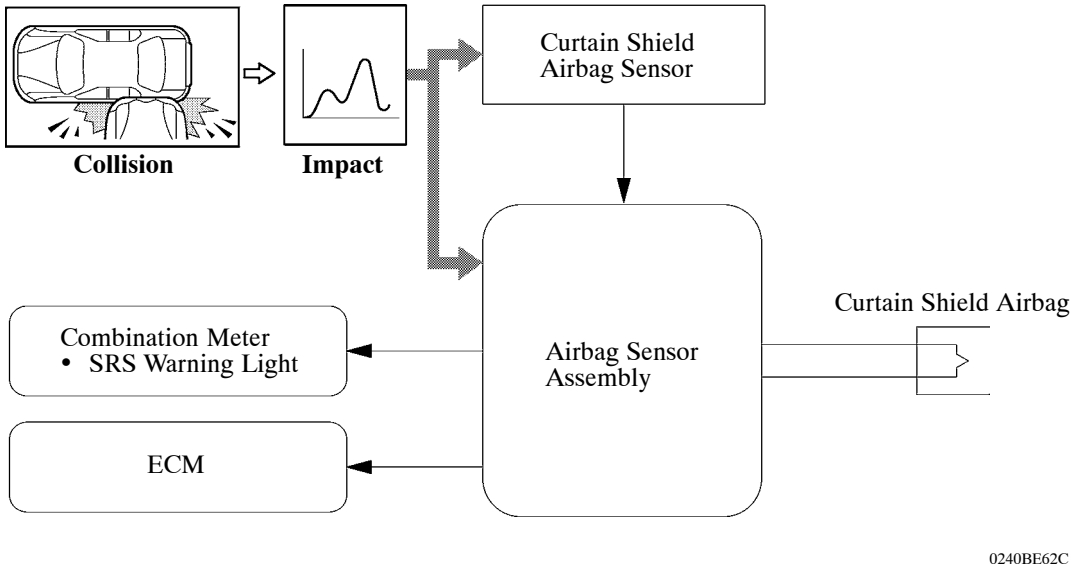

Airbag for Rear Side Collision

BE

2. SRS Side Airbag

SRS side airbags are installed in the seat backs of the driver seat and the front passenger seat. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

3. SRS Curtain Shield Airbag

SRS curtain shield airbags are installed in the area close to the sides of the headliner. Each SRS airbag is a one-piece design, consisting of an inflator, a bag, and a cover.

4. Side & Curtain Shield and Curtain Shield Airbag Sensors

Deceleration sensors are enclosed in the side & curtain shield or curtain shield airbag sensors. Based on the acceleration of the vehicle during a side or side rear collision, a distortion is created in the sensor and converted into an electrical signal.