SEAT BELT REMINDER SYSTEM


■ DESCRIPTION

If the seat belt is not fastened, this system flashes the seat belt reminder light or sounds the buzzer in the combination meter as a reminder.

- The system has a buzzer reminder cancel mode.
- When the ignition switch is turned ON, this system detects the condition of the seat belts based on the signals indicated below.

Seat	Base Signal	Reminder Method
Driver	Seat Belt Buckle Switch (Contact Type)	• Buzzer sounds • Reminder light flashes
Front Passenger	• Seat Belt Buckle Switch (Non-contact Type) • Four Occupant Detection Sensors	• Buzzer sounds • Reminder light flashes

▶ System Diagram ◀

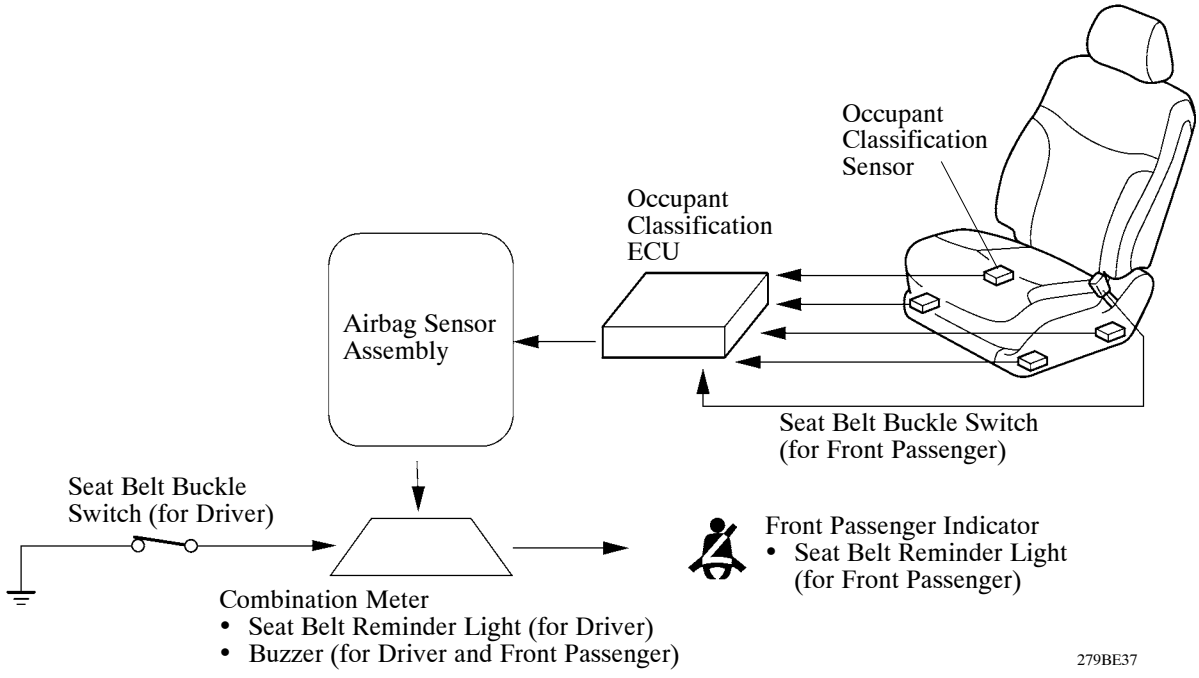

Service Tip

Buzzer Reminder Cancel Mode Setting

1) Set the LCD on the combination meter to the ODO display.
2) Press and hold the TRIP meter reset knob for ten seconds or more within six seconds of turning the ignition switch ON. Fastening the driver's seat belt or front passenger seat belt while holding the knob cancels the buzzer reminder.
   - If the driver seat belt is fastened: the system changes to the driver and front passenger buzzer reminder cancel mode.
   - If the front passenger seat belt is fastened: the system changes to the front passenger buzzer reminder cancel mode.
3) When this occurs, the LCD displays "b-oFF". The buzzer reminder can be switched between ON and OFF each time the TRIP meter reset knob is pressed. The LCD displays "b-on" or "b-oFF" according to the buzzer reminder ON/OFF status. The display changes to the ODO or TRIP meter if the knob is not pressed for ten seconds.
4) Performing steps 1) and 2) again when the buzzer reminder is off exits cancel mode (the buzzer will be re-enabled).
5) The cancel mode will also exit when the battery or combination meter connector is disconnected or reconnected.