REAR VIEW MIRROR


■OUTSIDE REAR VIEW MIRROR

- The outside rear view mirrors have following functions:

Function	Outline
Electrical Remote Control	When the mirror control switch is operated, this function moves the mirror surface vertically or laterally to enable the driver to attain an optimal mirror angle. Setting the mirror master switch to the “R” position operates the right mirror, and to the “L” position operates the left mirror.
Mirror Light	When the light control switch is turned to the TAIL or HEAD position, the mirror lights which are built into the outside rear view mirrors turn on.

- Electrical remote control type mirrors are available as optional equipment on all models.
- Models with electrical remote control mirrors have mirror lights.

■SYSTEM DIAGRAM

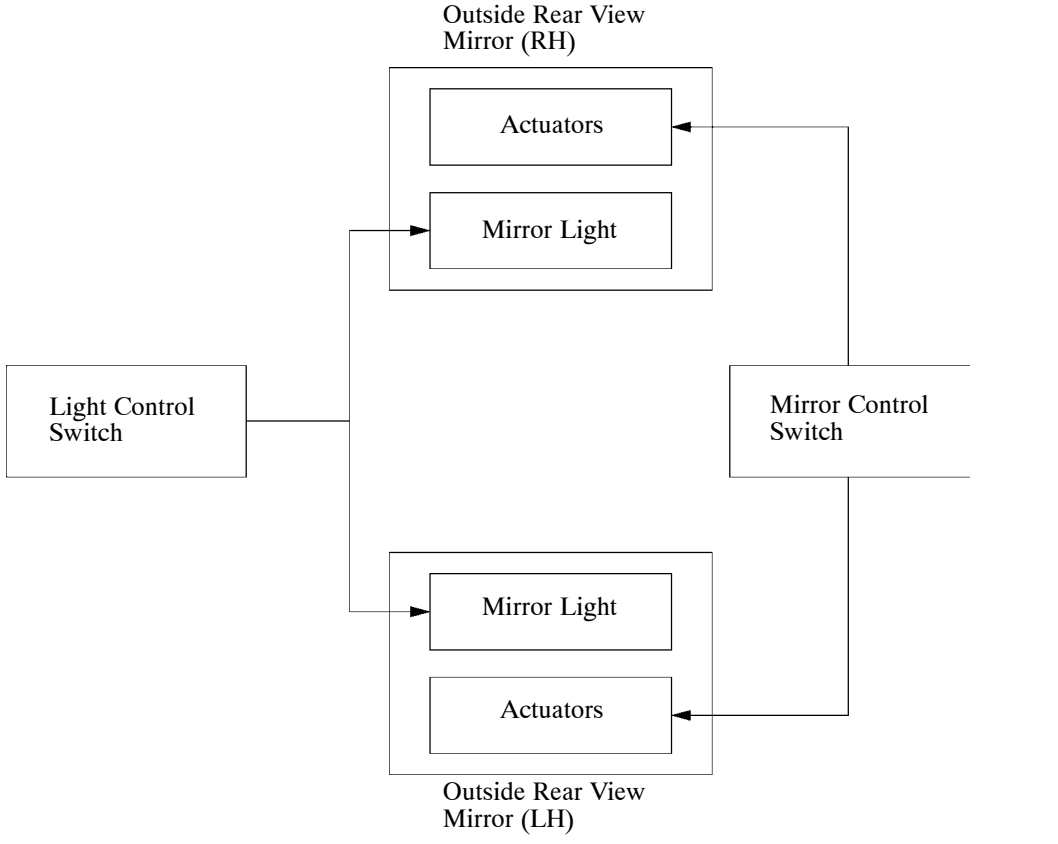

0240BE63C

BE